






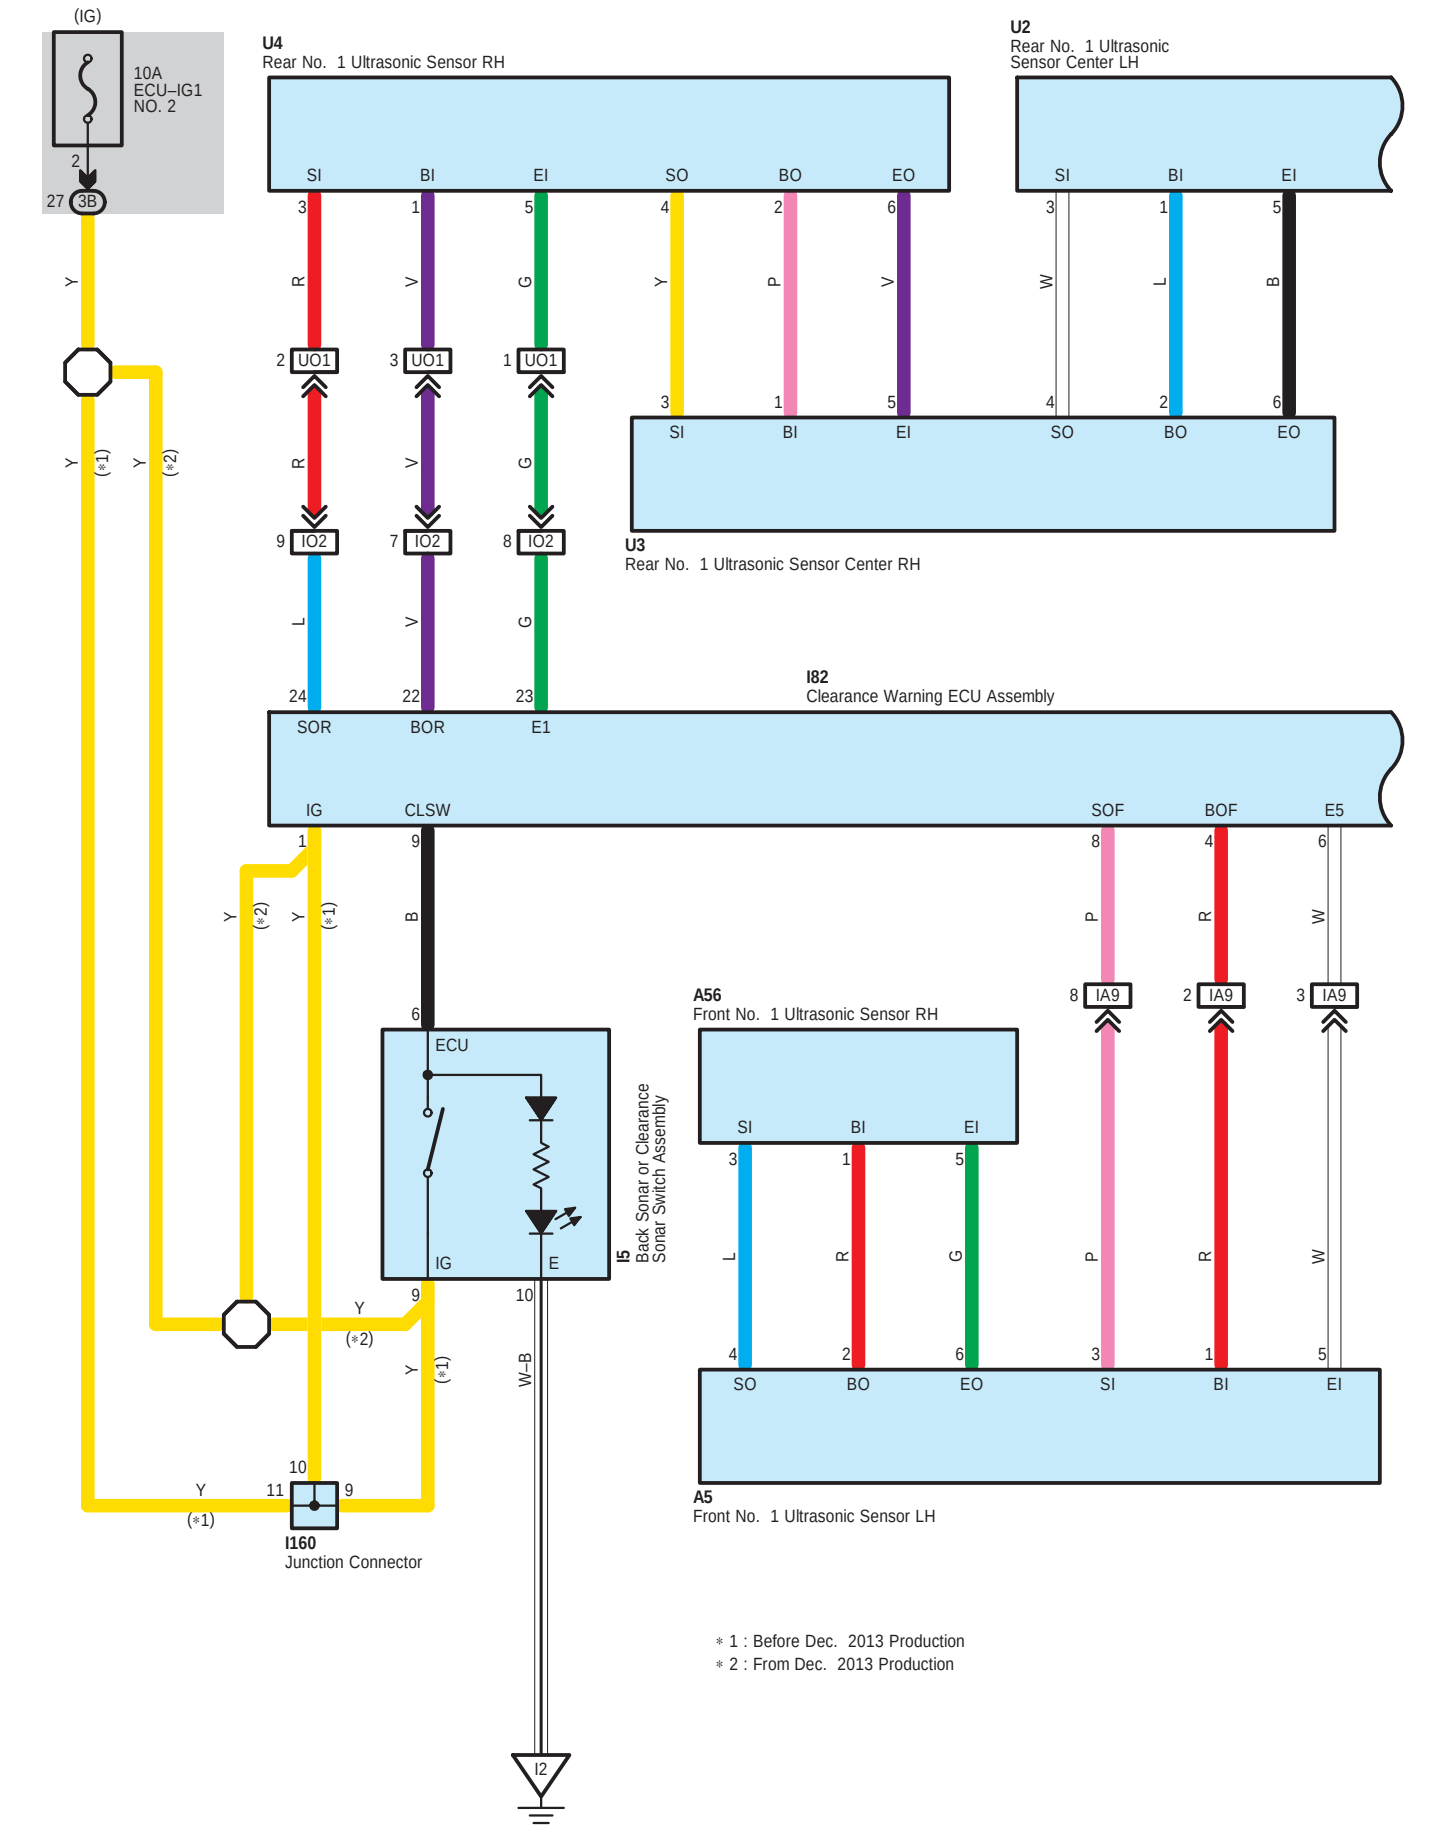

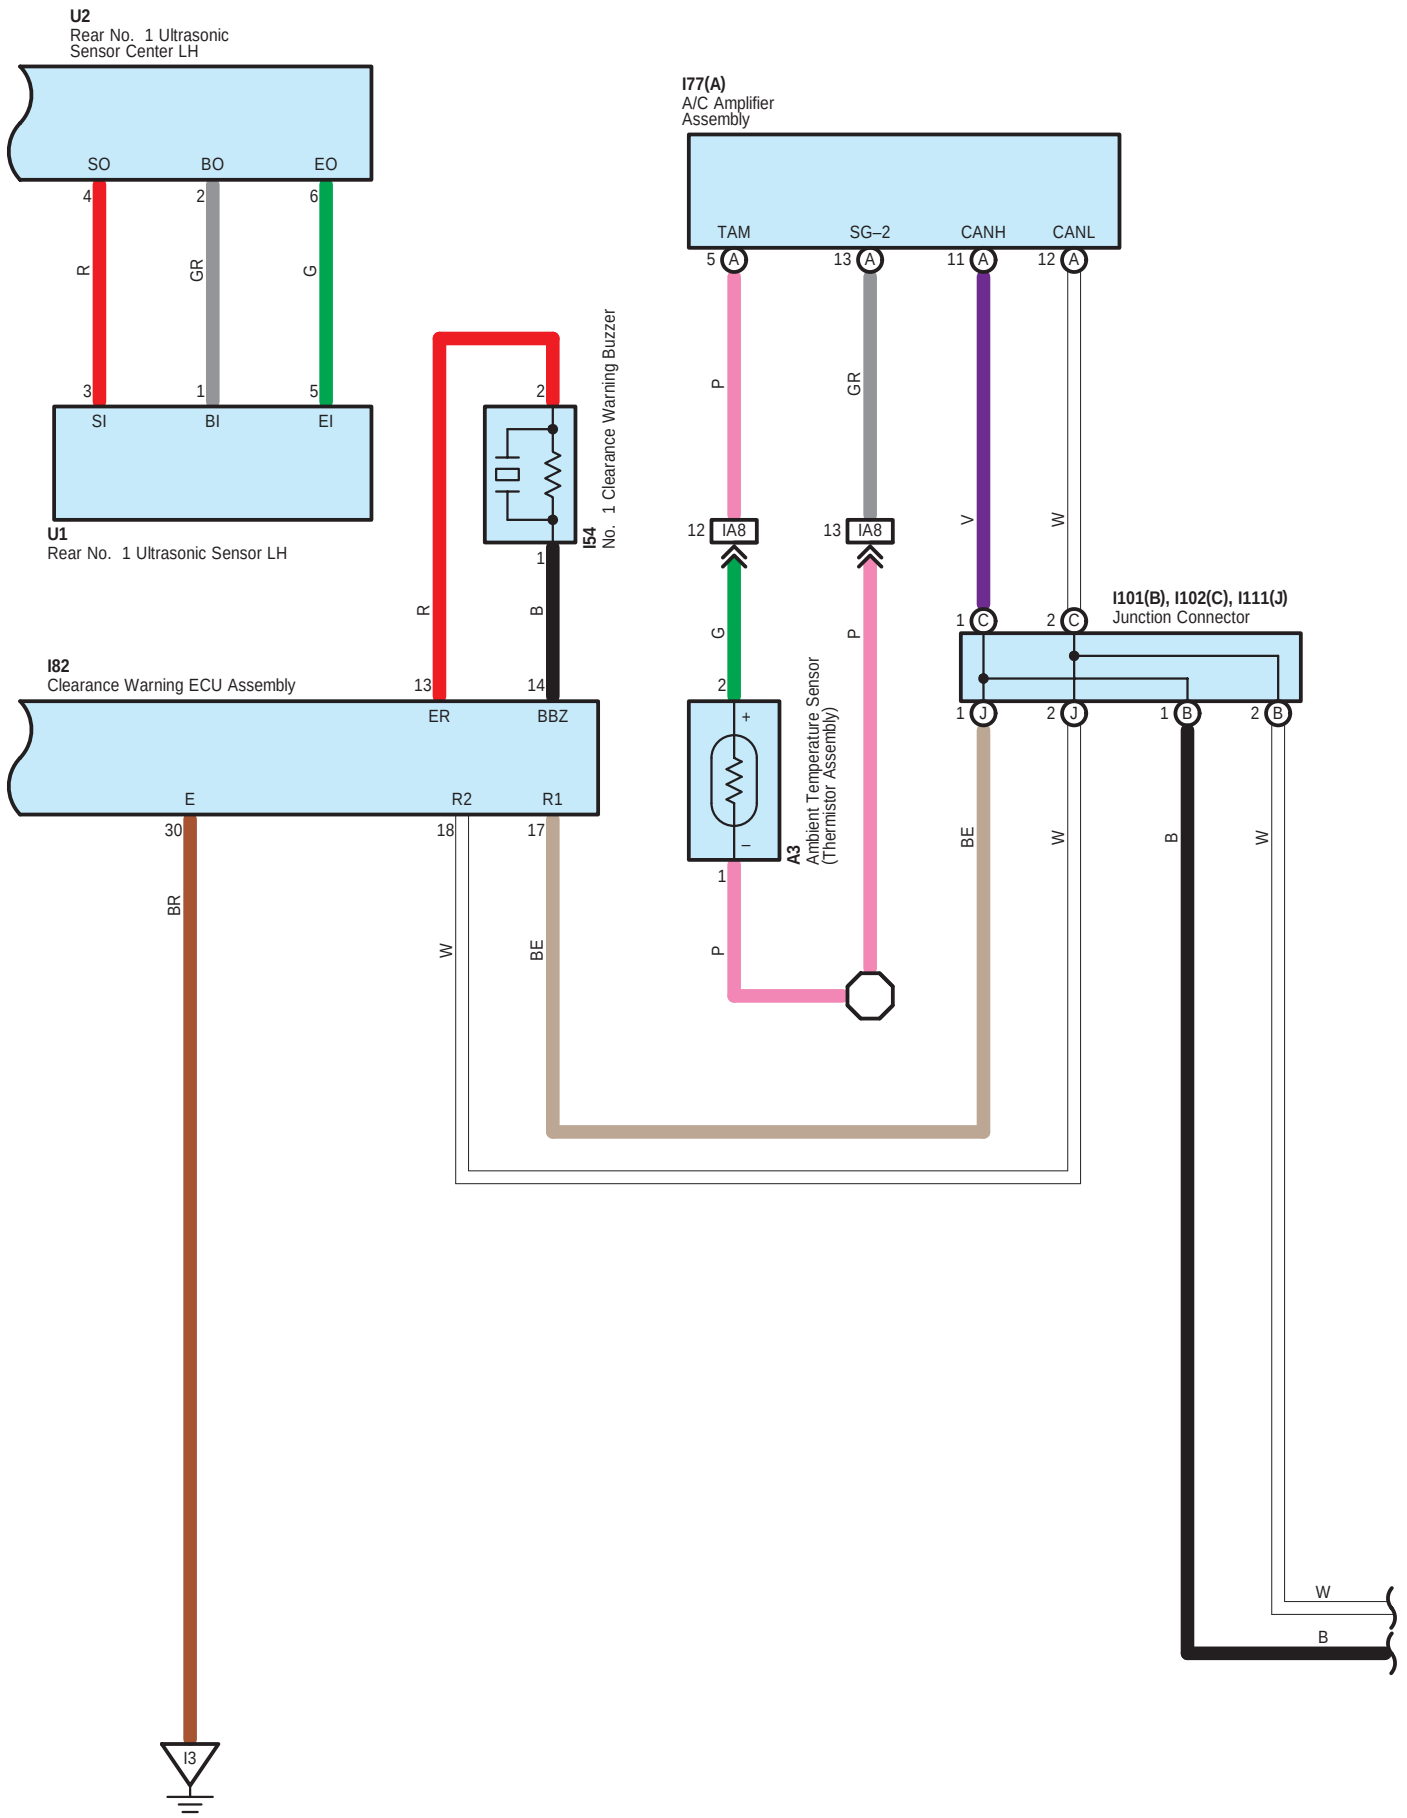

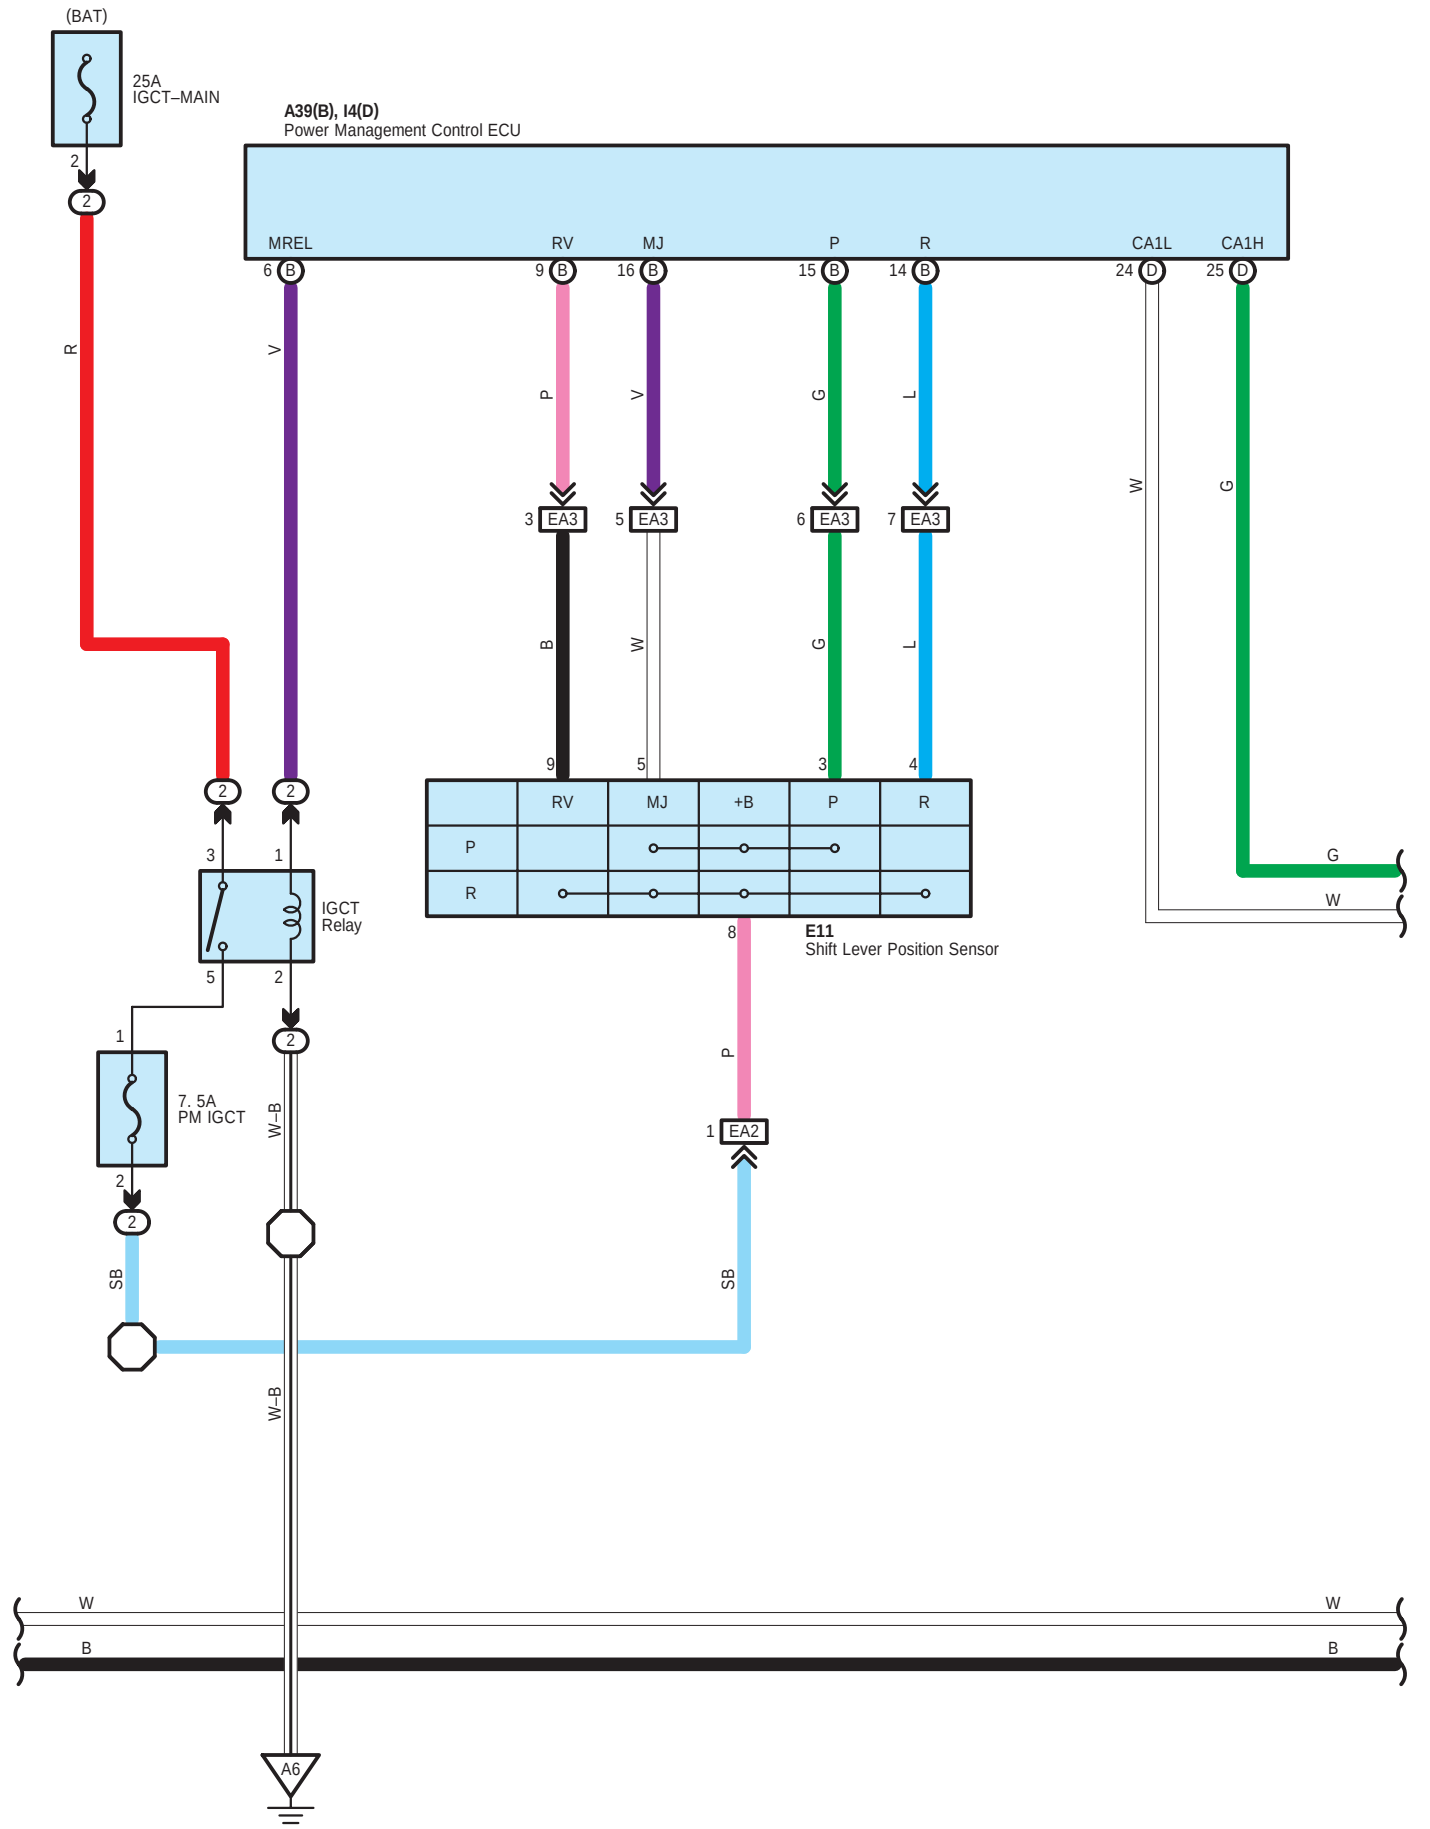

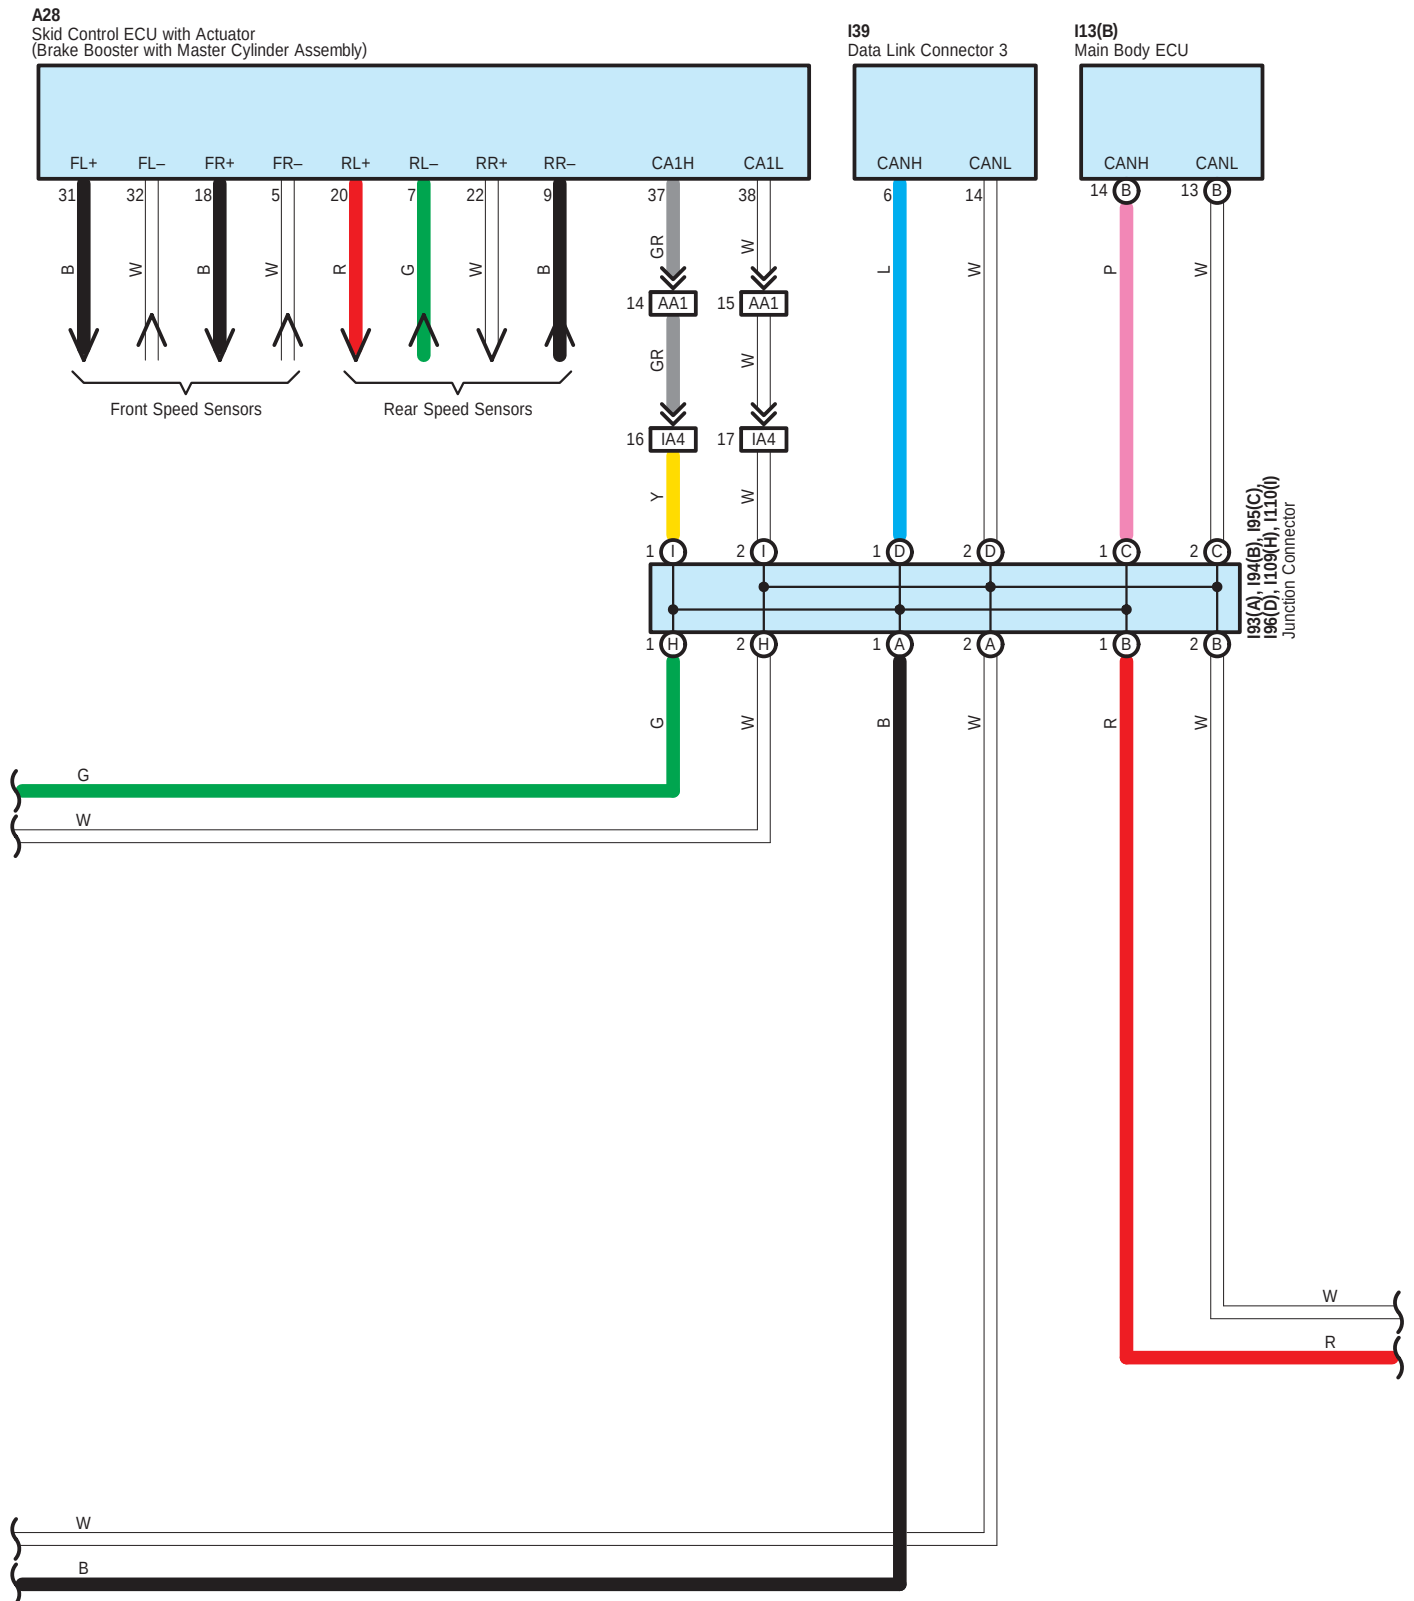

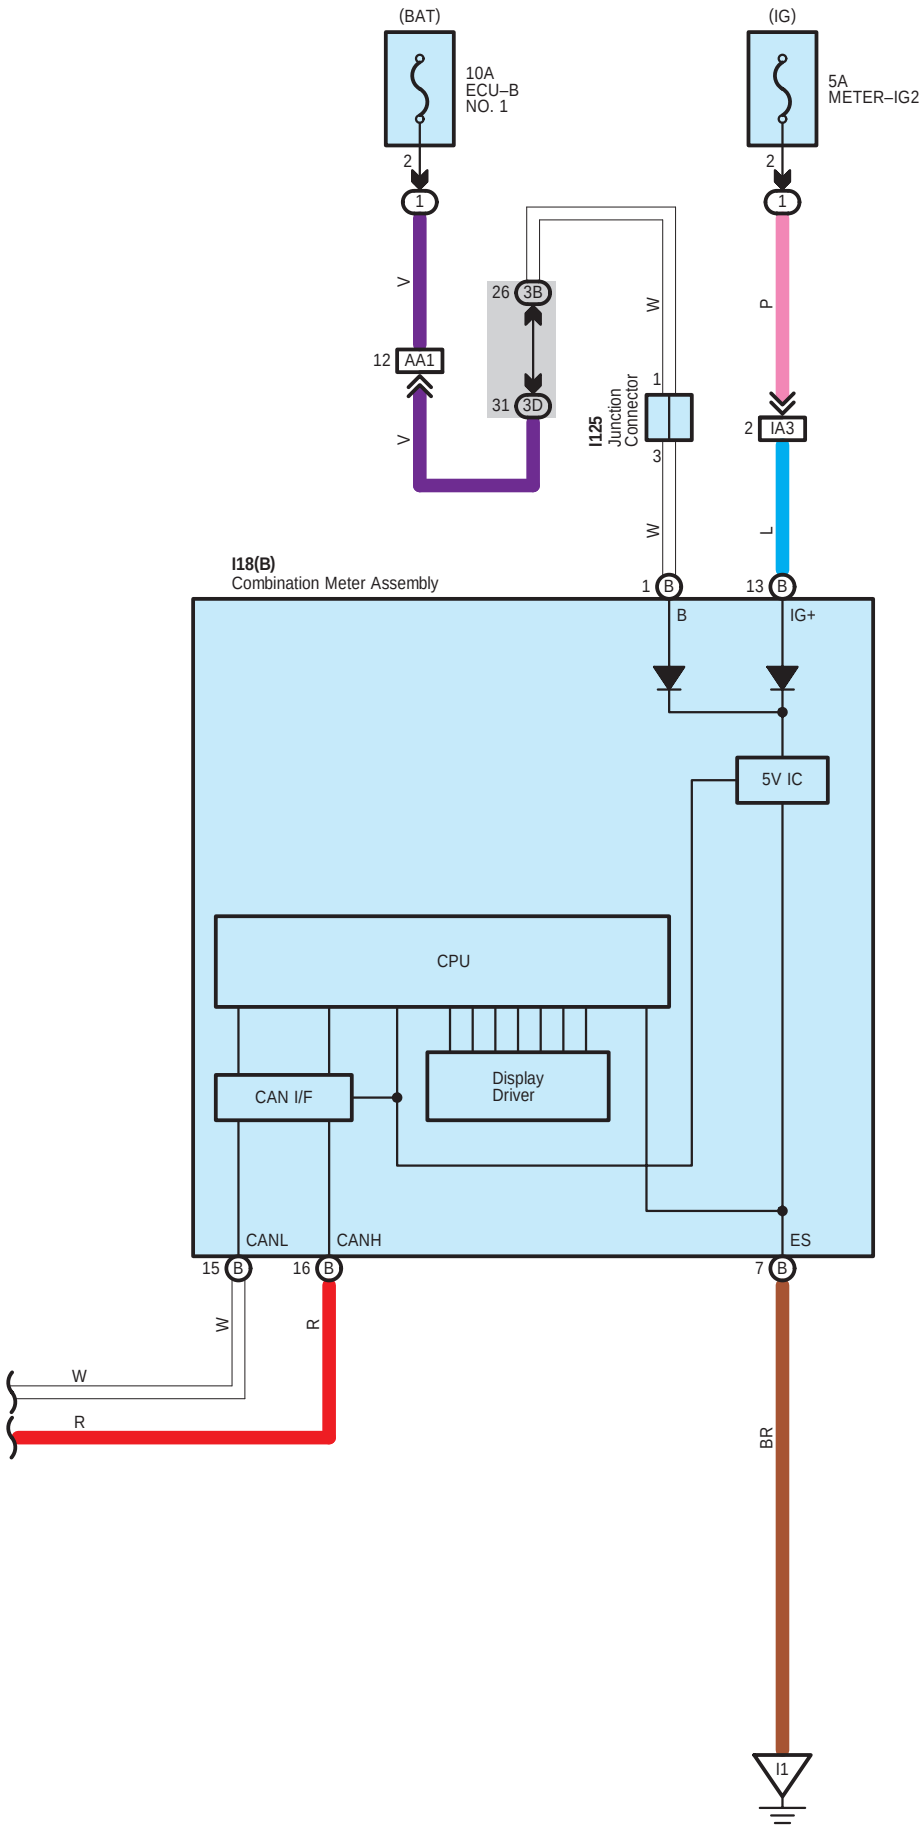


A 3

Black




A 5

Black

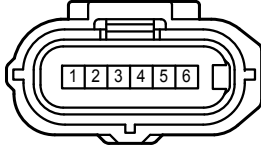


A 28

Black

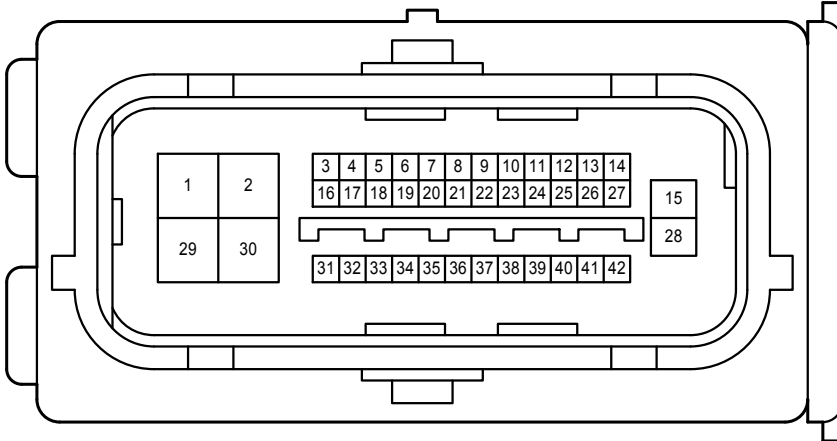


A 39

Gray

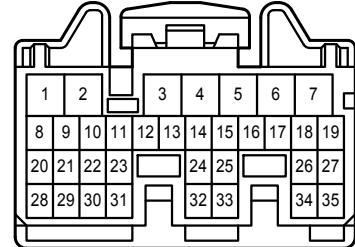


A 56

Black

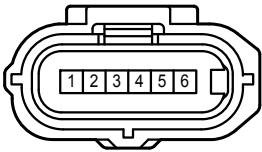


E 11

Gray

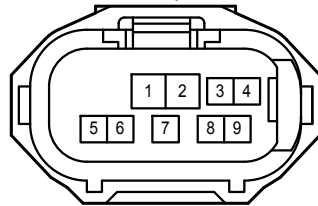


I 4

Gray

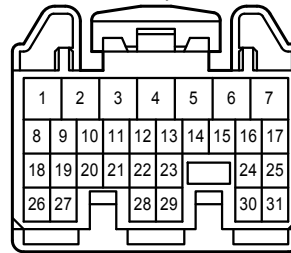


I 5

Black

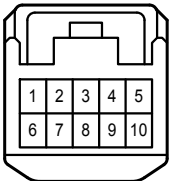


I 13


White

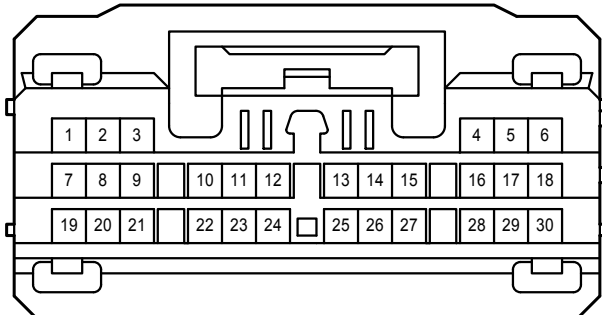


I 18
Black

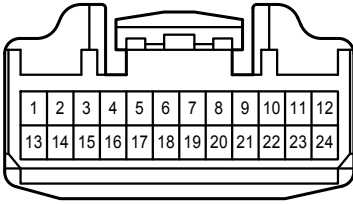


I 39
White

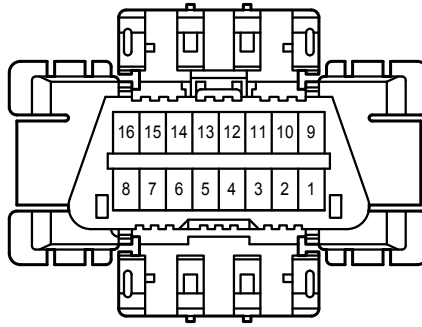


I 54
Black




I 77
White

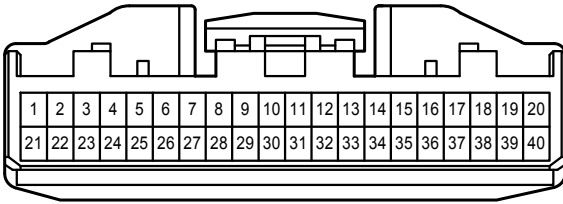


I 82
Black

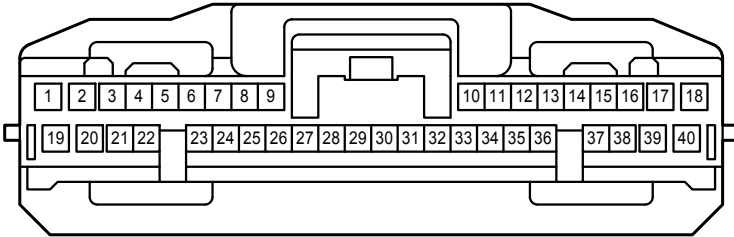


I 93
White




I 94
White




I 95
White




I 96
White




I101
White




I102
White




I109
White




I110
White




I111
White




I125
Gray

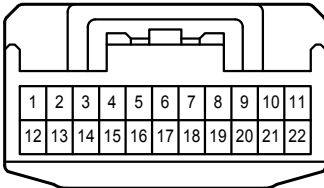


I160
White

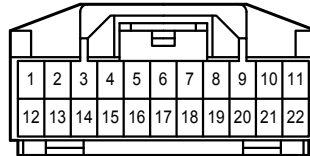


U 1
Black

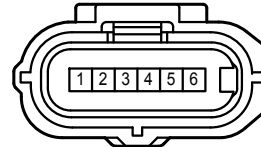


U 2
Black

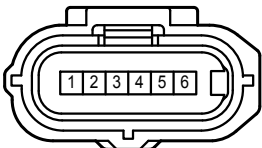


U 3
Black

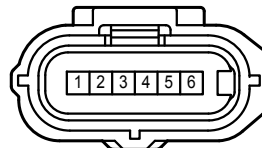


U 4
Black

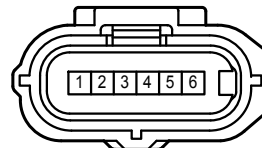


3B
White

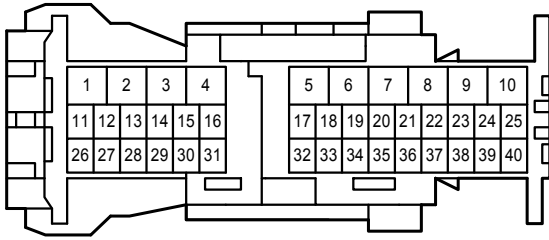


3D
White

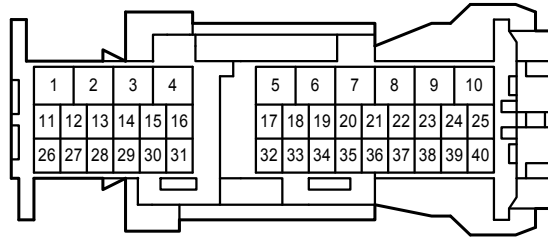


AA1
Blue

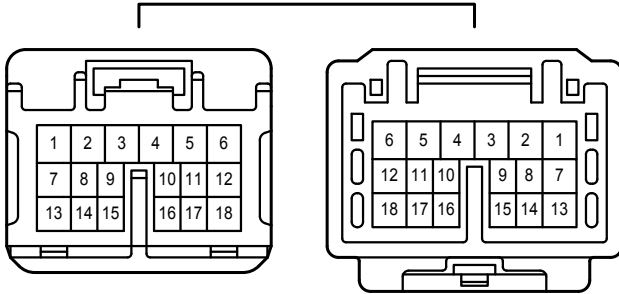


EA2
White

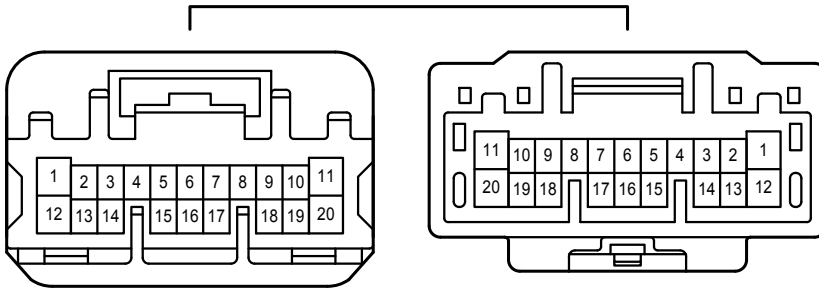


EA3
White

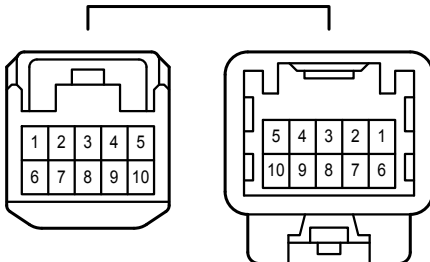


IA3
Blue

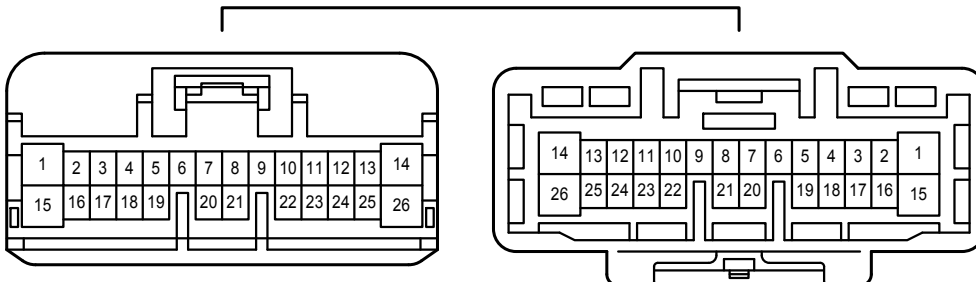


IA4
Gray

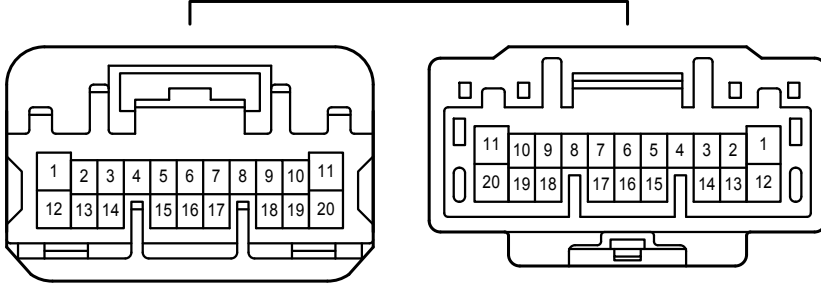


IA8
Gray

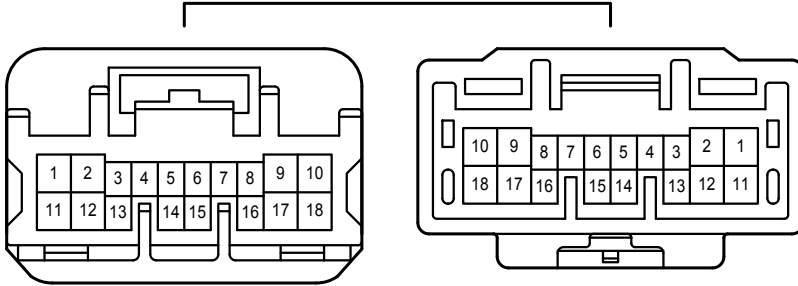

IA9
Gray

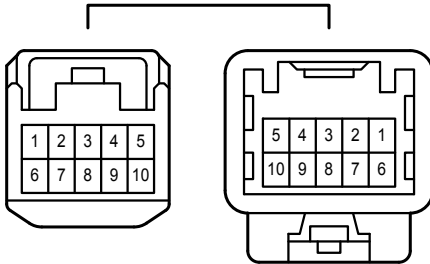

IO2
White

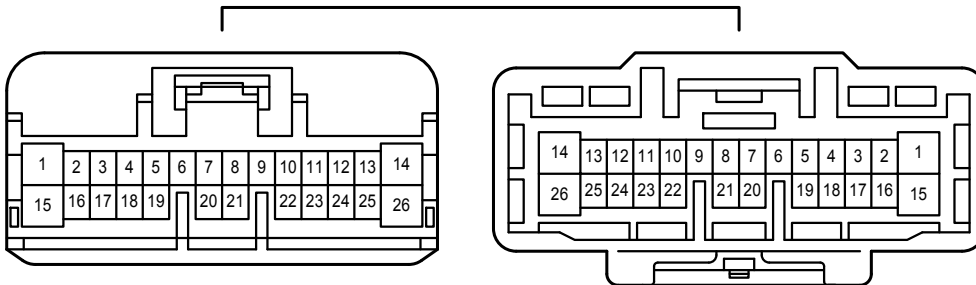

UO1
Black

