





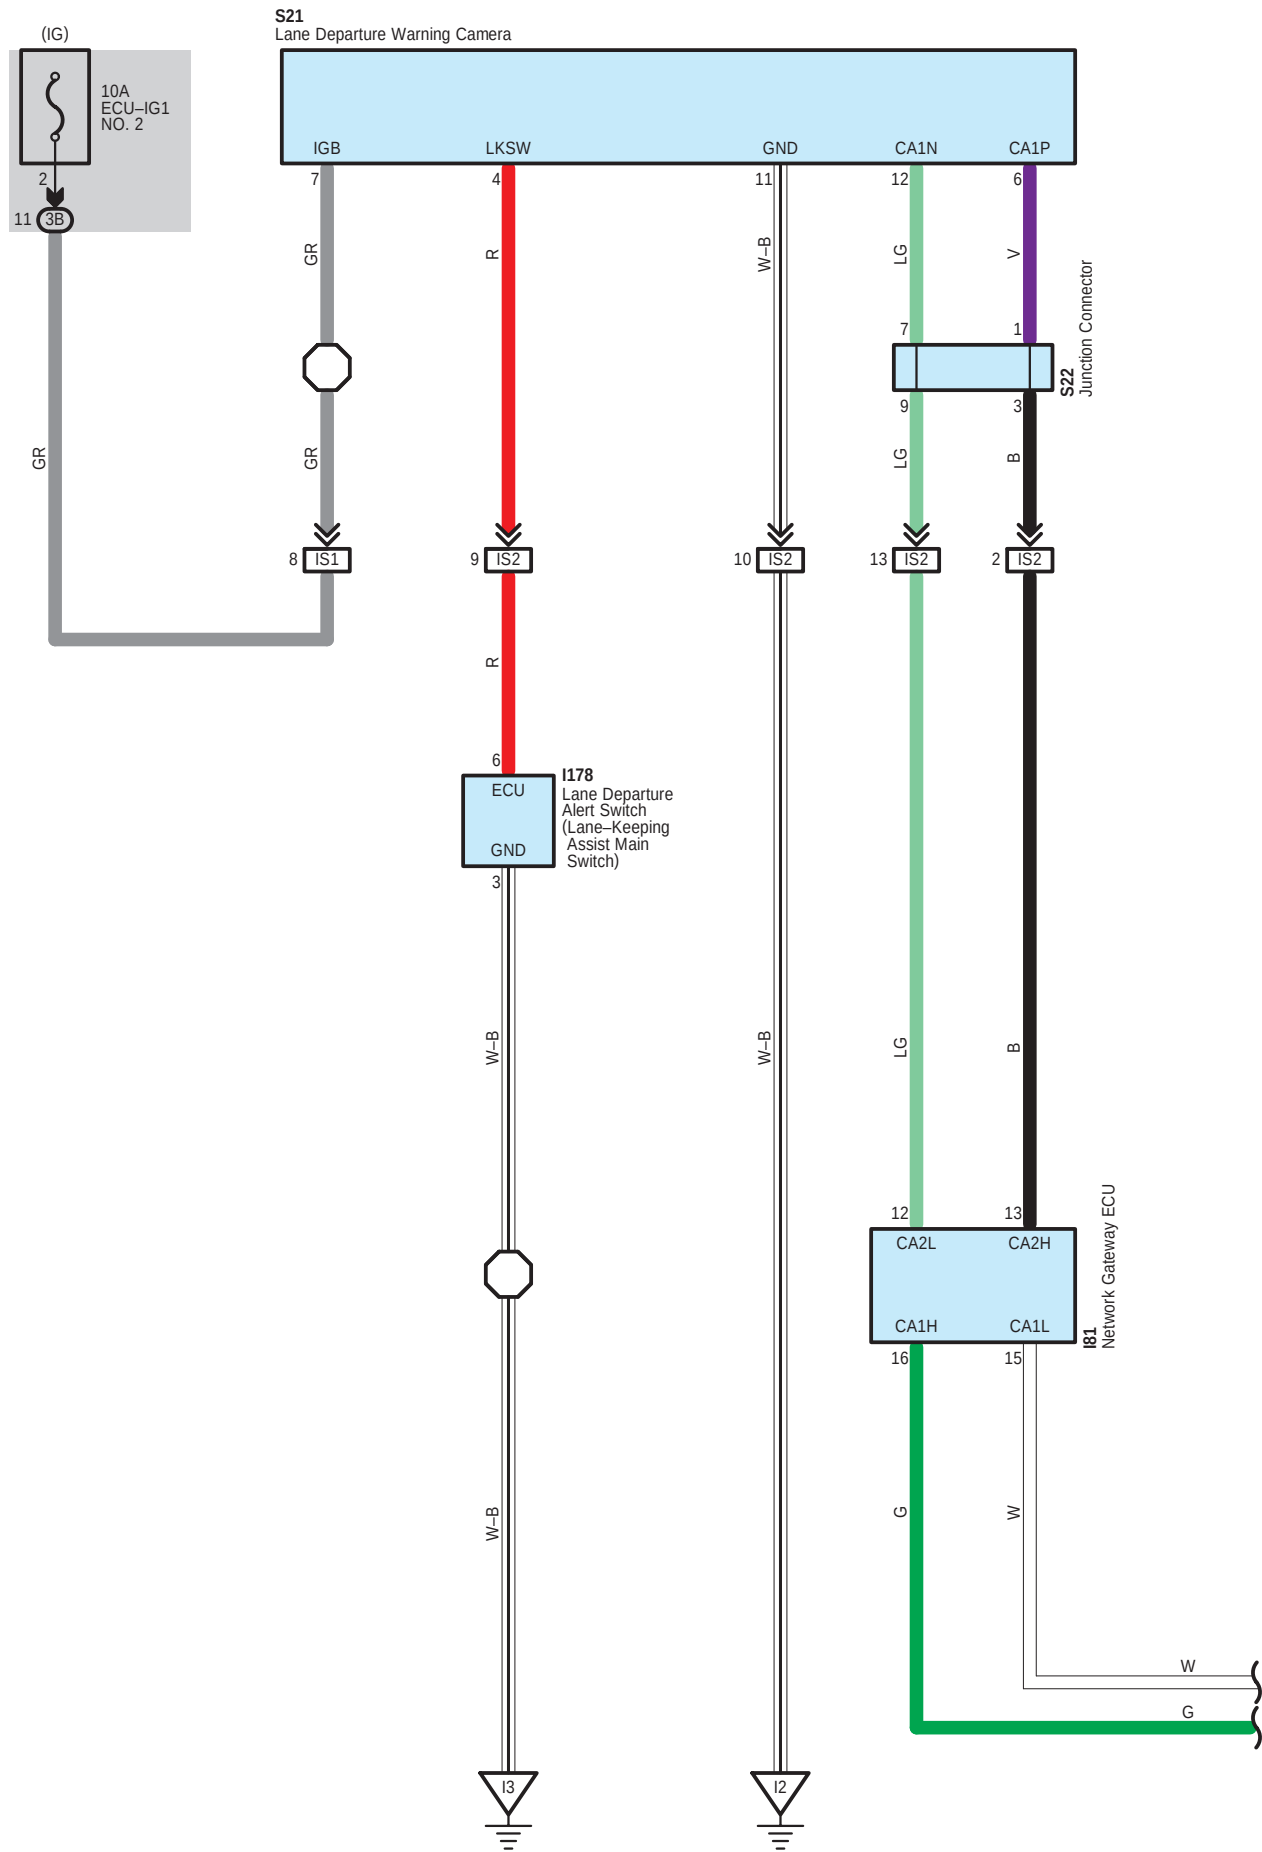


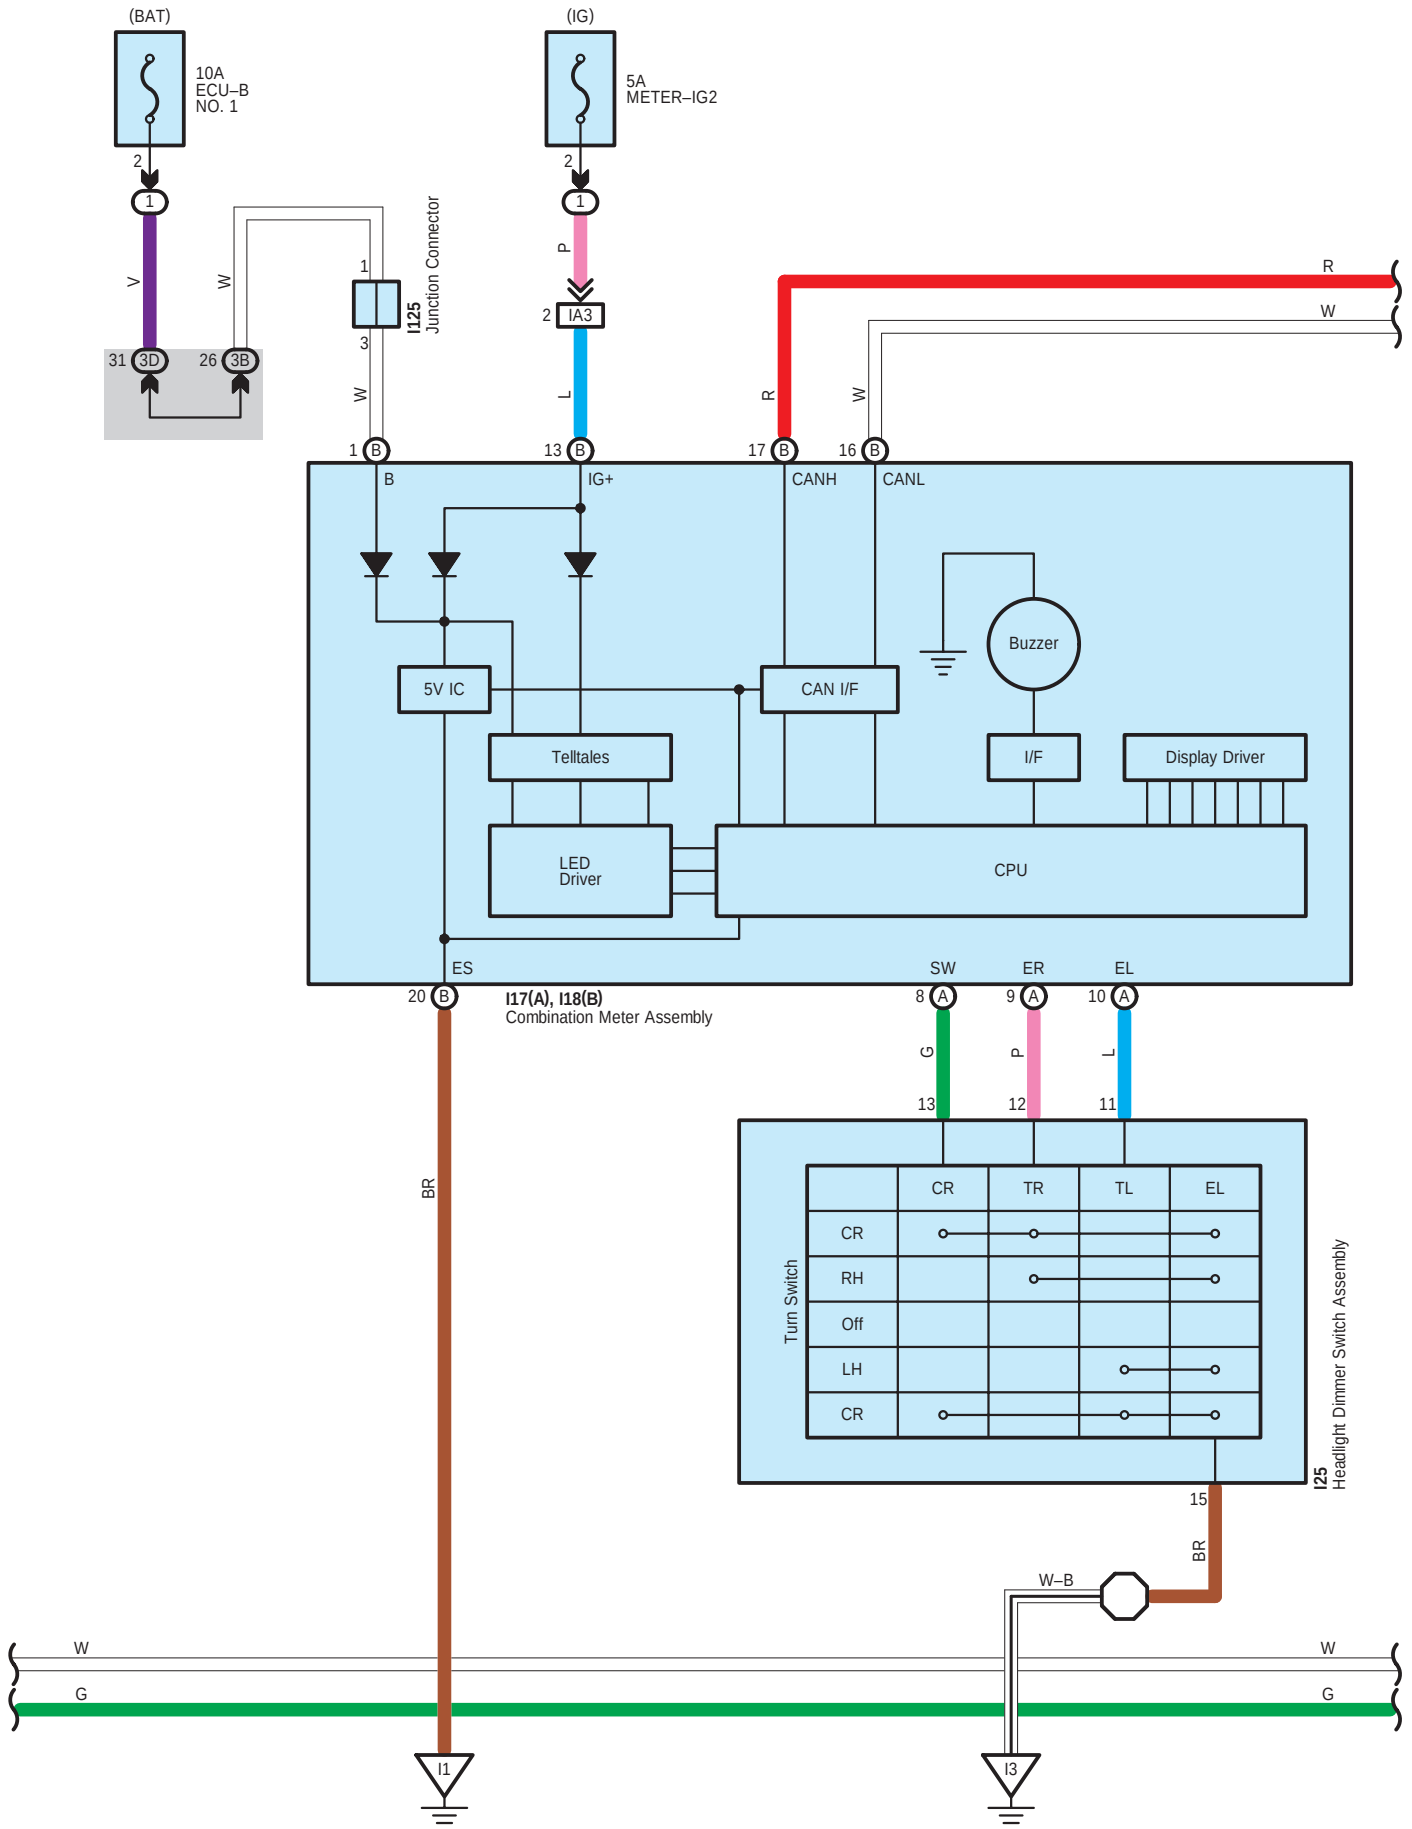

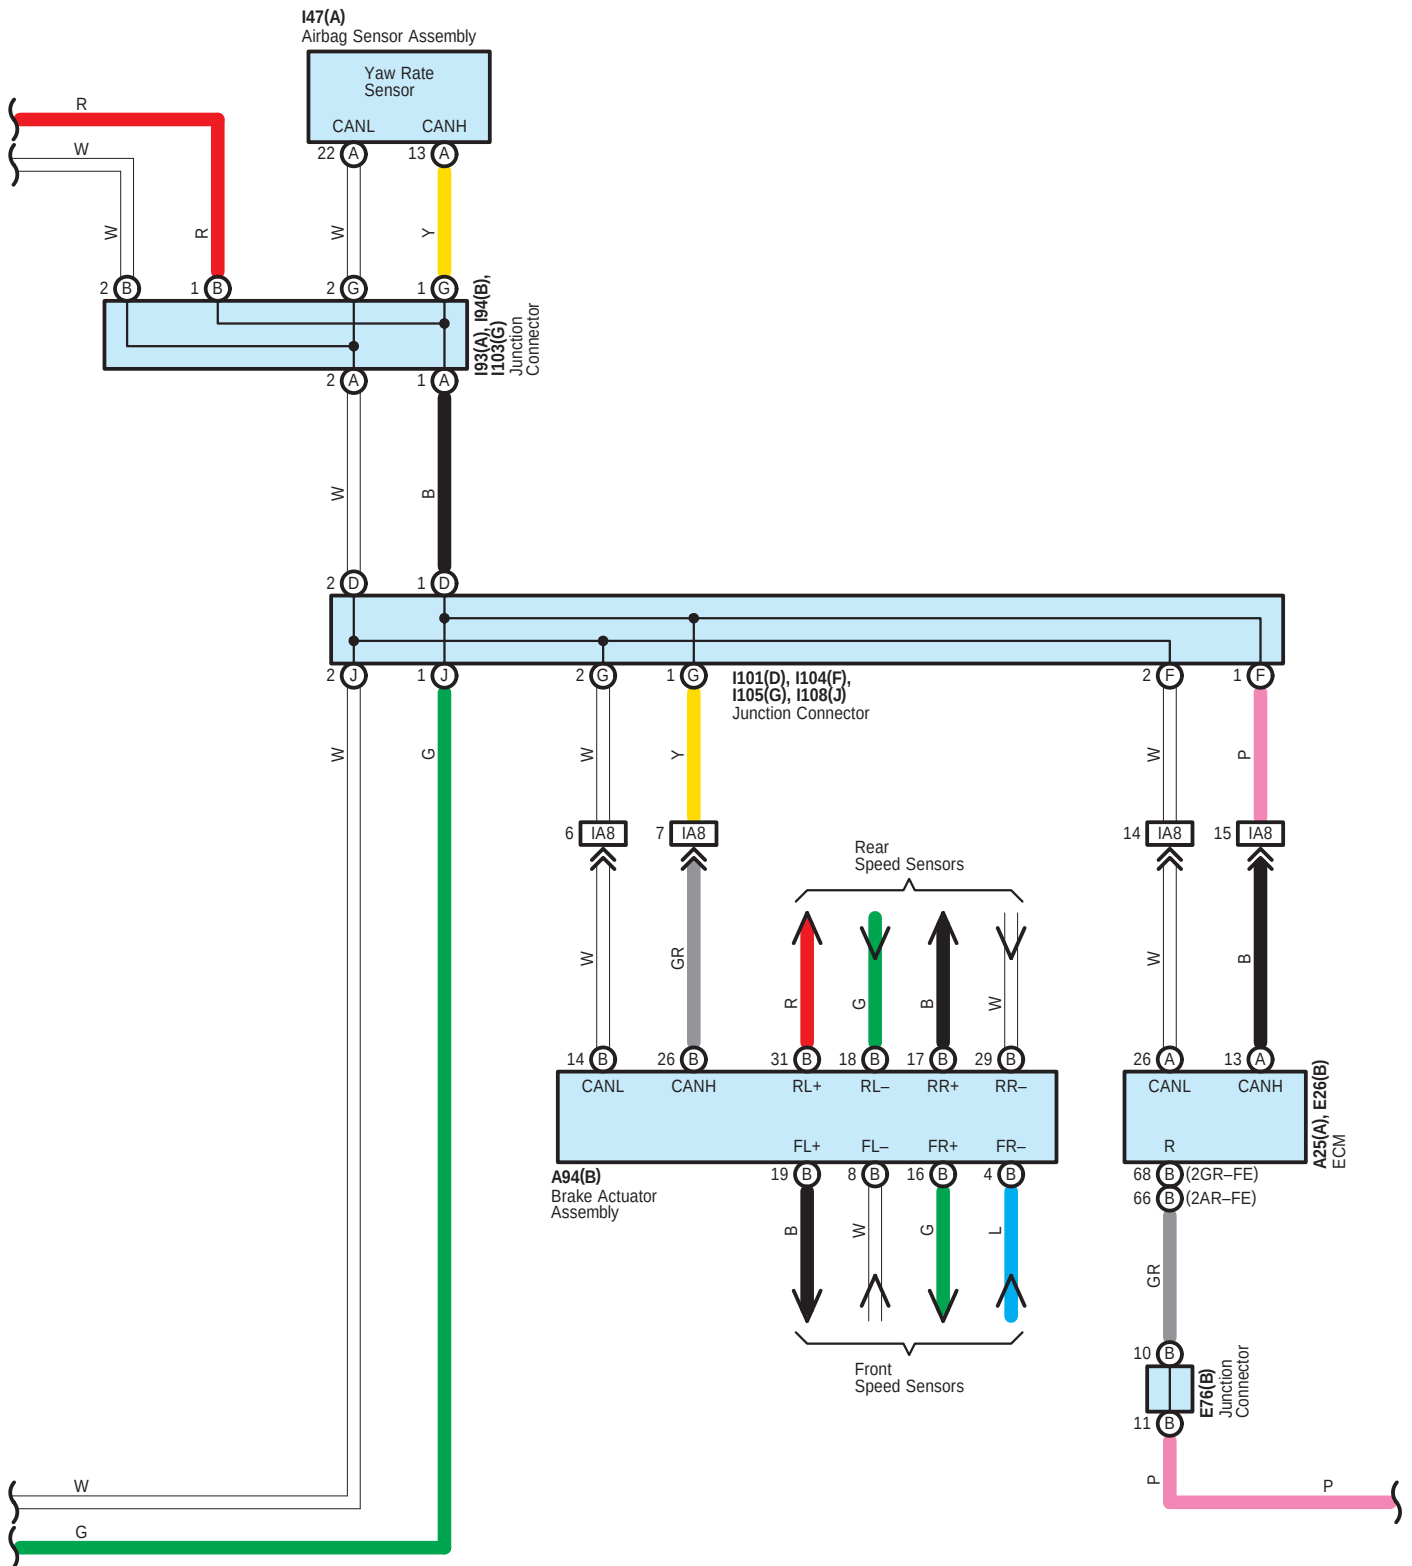


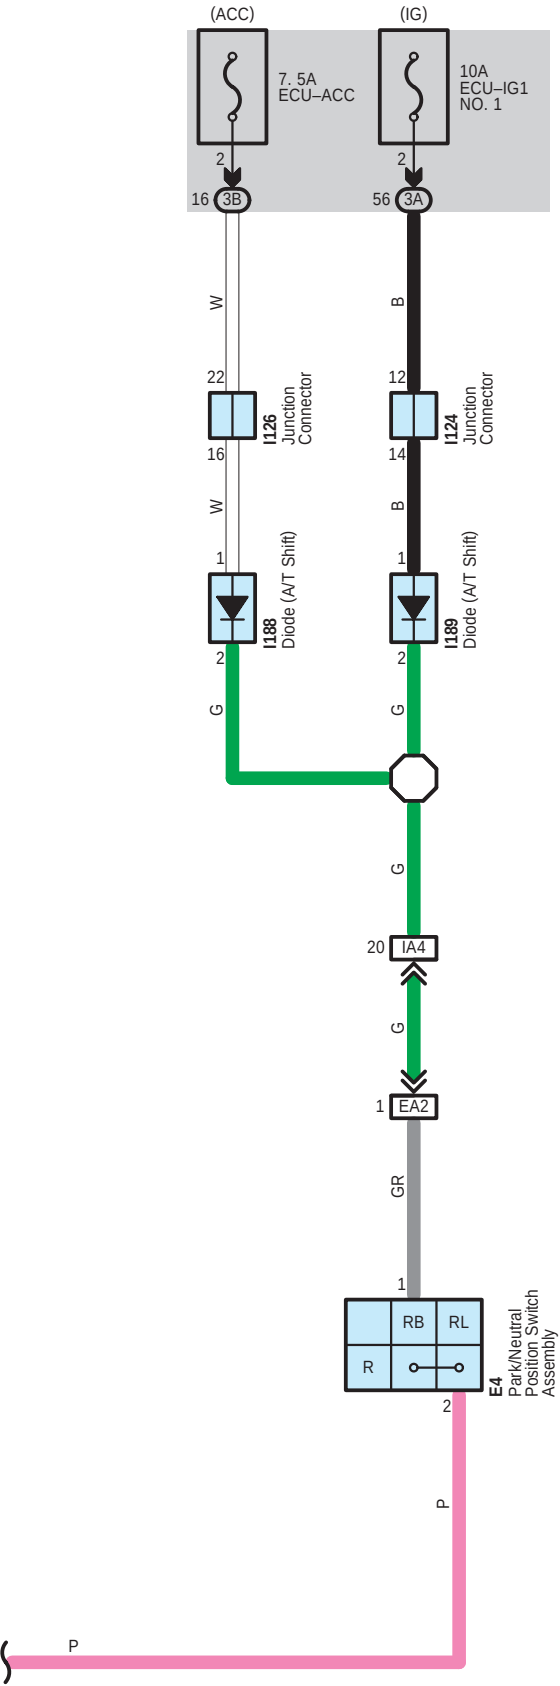


A 25
Black

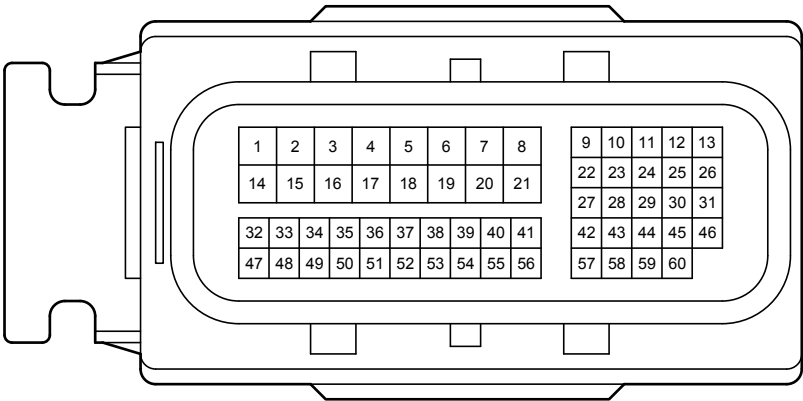


A 94
Black

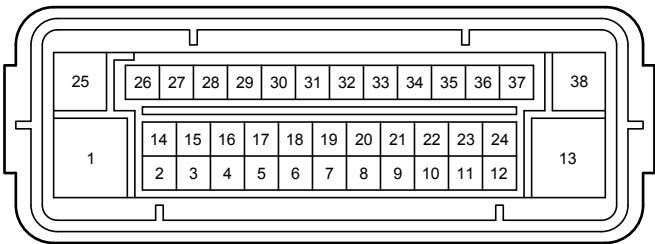


E 4
Gray

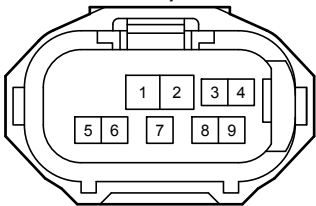


E 26
Black

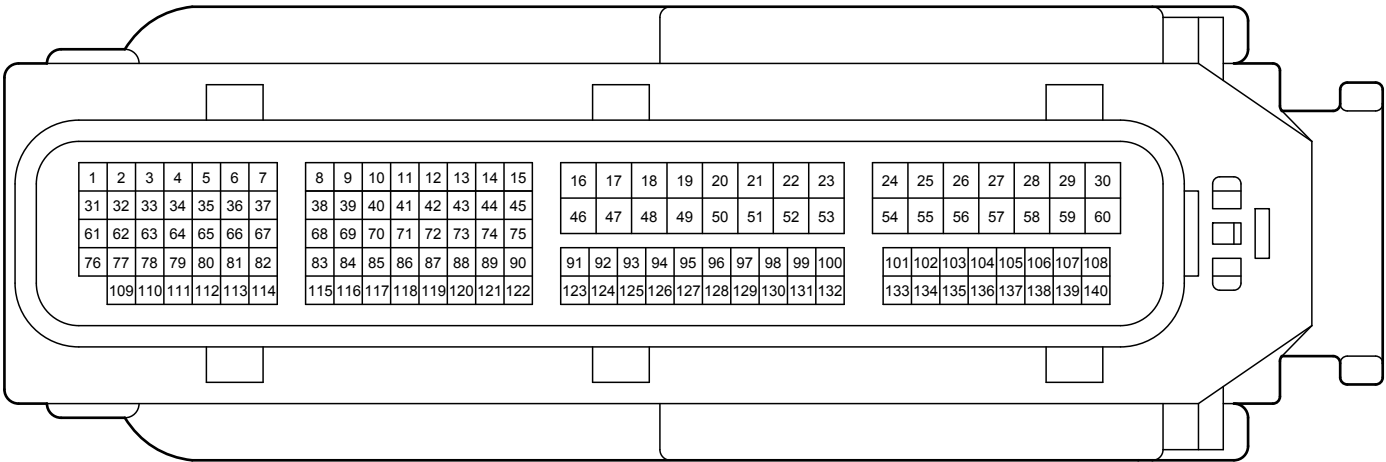


E 76
White

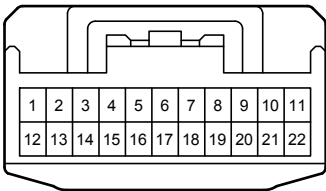

I 17
Black

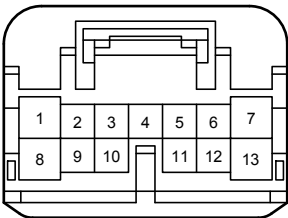


I 18
Black

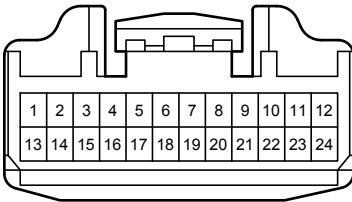


I 25

Black

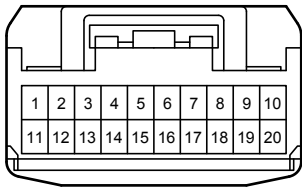


I 47

Yellow

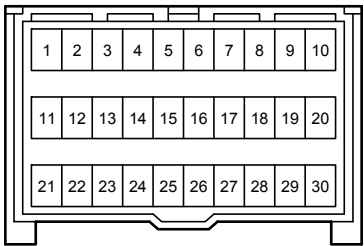


I 81

White

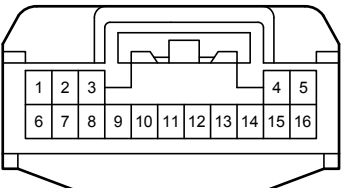


I 93

White




I 94

White




I101

White



I103

White




I104

White




I105

White




I108

White




I124

White

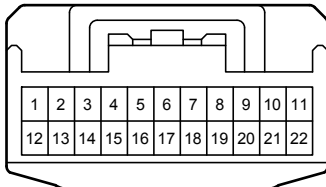


I125

Gray

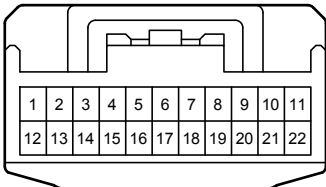


I126

White

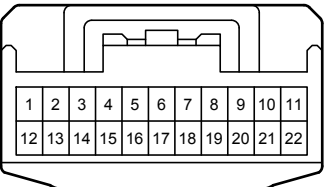

I178

Black

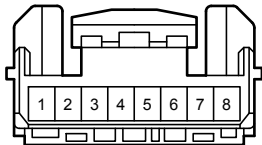

I188

Gray




I189

Gray




S 21

Gray

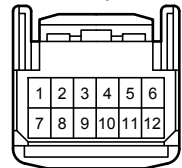


S 22

White

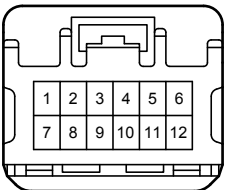


3A

White

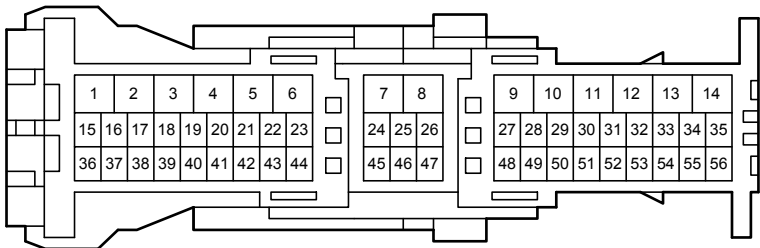


3B

White

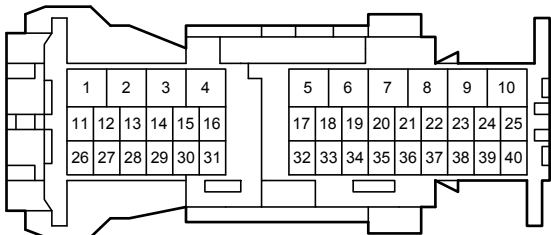


3D


White

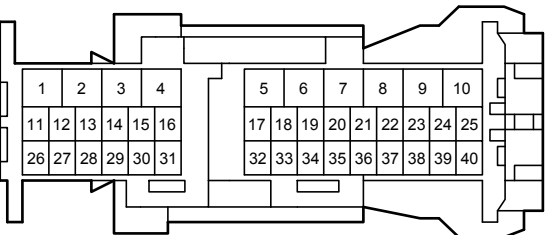


EA2
White

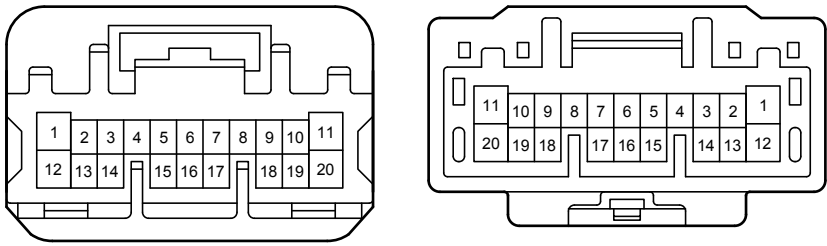


IA3
Blue

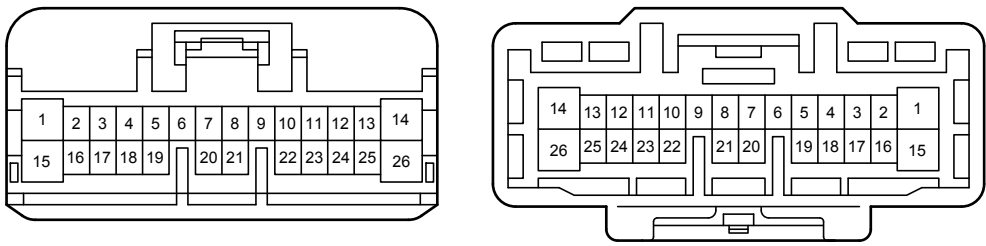

IA4
Gray

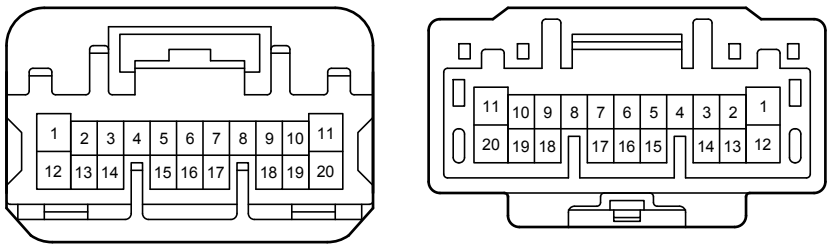

IA8
Gray

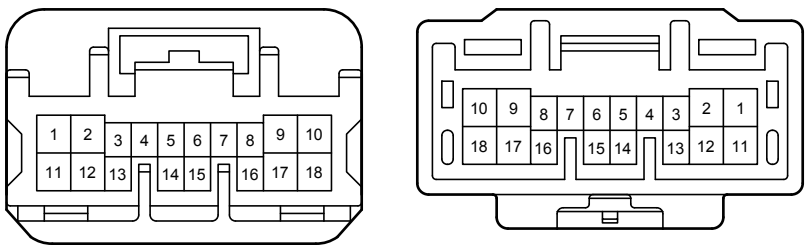

IS1
White

