LIGHT CONTROL SWITCH ASSY NO.1


650QM–01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL


2. REMOVE TURN SIGNAL SWITCH ASSY (See page 50–8)

(a) Place the front wheels facing straight ahead.
(b) Remove the horn button assy.
(c) Remove the steering wheel assy.
SST 09950–50013 (09951–00510, 09952–05010, 09953–05020, 09954–05021)
(d) Remove the steering column cover lower.
(e) Remove the steering column cover upper.
(f) Remove the turn signal switch assy.

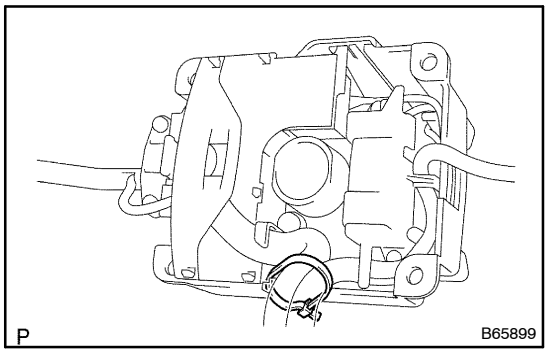


3. REMOVE HEADLAMP DIMMER SWITCH ASSY

(a) Remove the cord clamp.

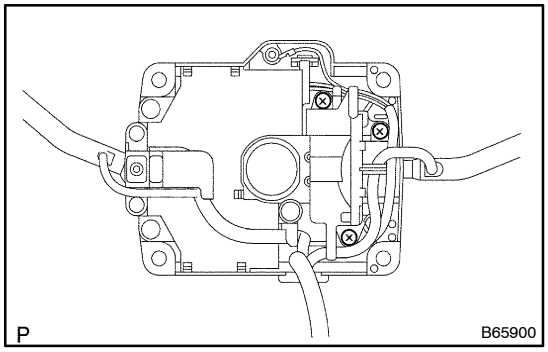


(b) Remove the 3 screws.
(c) Disconnect the headlamp dimmer switch from the turn signal switch.

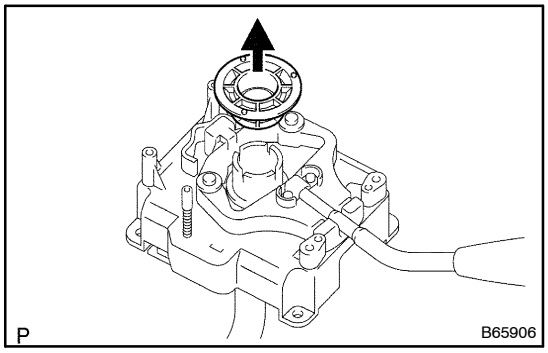


4. REMOVE LIGHT CONTROL SWITCH ASSY NO.1

(a) Remove the cancel cam.

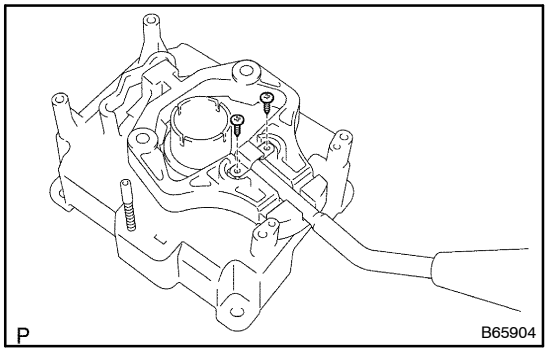


(b) Remove the 2 screws.

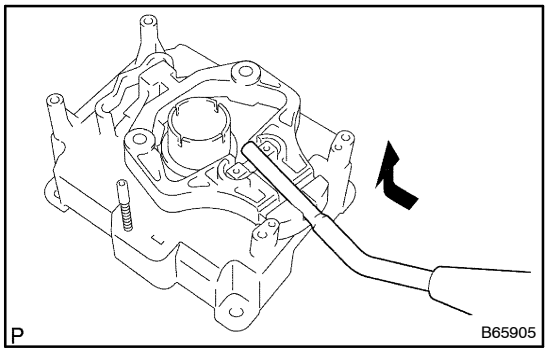


(c) Shift the lever into the H" position and remove the plate and steel ball.


(d) Slide the light control switch in the center direction, unlock and remove it.

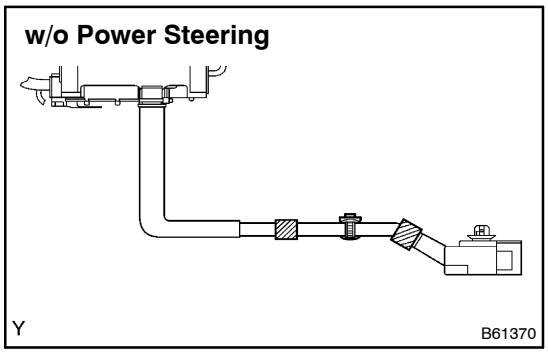


(e) w/o Power steering:
Remove the wire harness clamp and 2 tapes.

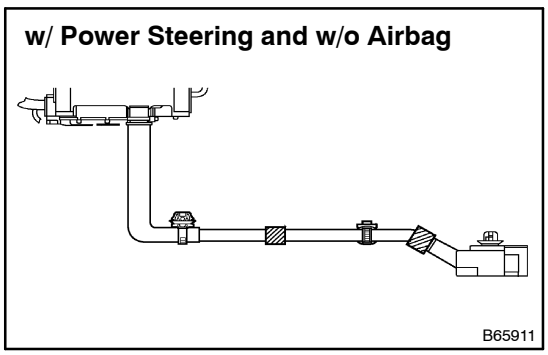


(f) w/ Power steering and w/o airbag:
Remove the 2 wire harness clamps and 2 tapes.

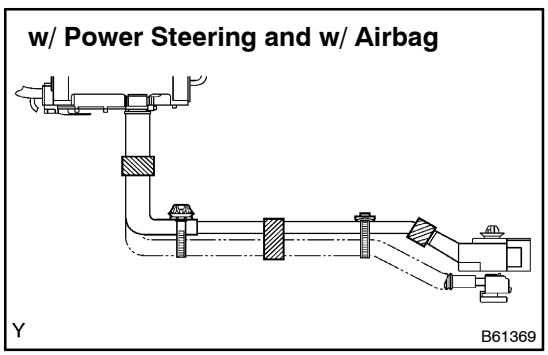


(g) w/ Power steering and w/ airbag:
Remove the 2 wire harness clamps and 3 tapes.

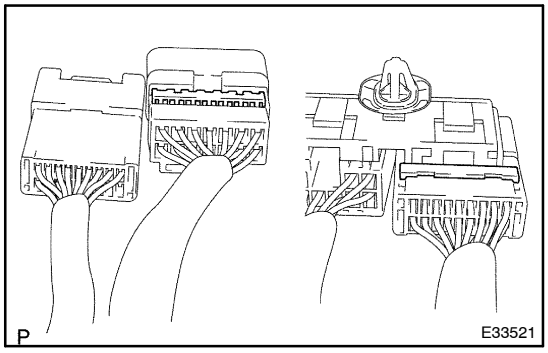

(h) Release the lock from the connector.

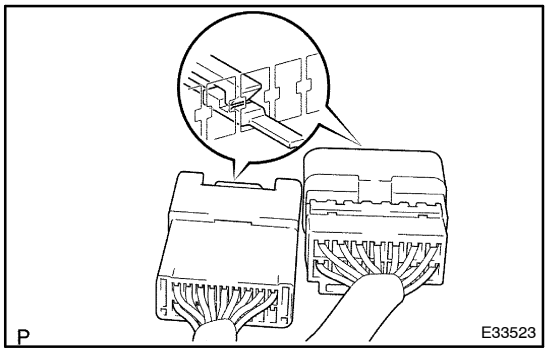

(i) Using a precision screwdriver, unlock the connector terminals.
(j) Pull out the connector terminals and remove the light control switch.

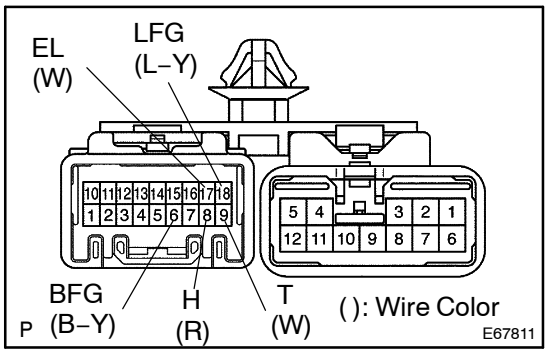


5. INSTALL LIGHT CONTROL SWITCH ASSY NO.1

(a) Install the connector terminal pins for the connector.


NOTICE:

Do not arrange the connector terminal pins wrongly.

(b) Engage the light control switch.
(c) Shift the lever into the HI position and install the steel ball and plate.

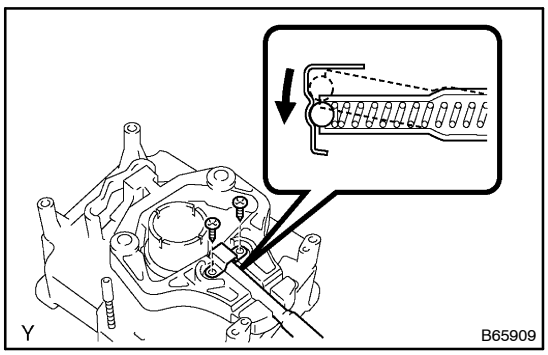


(d) Push in the plate while shifting the lever into the LO position, and install the 2 screws.
(e) Check that the light control switch operates smoothly.
(f) Install the cancel cam.

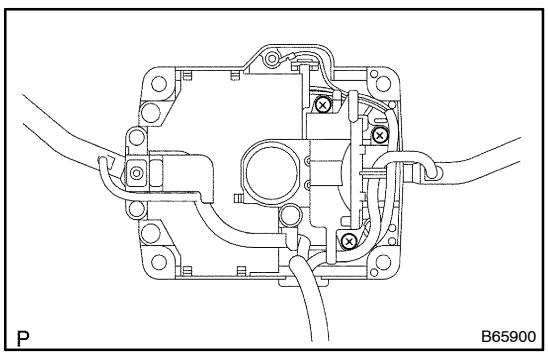


6. REMOVE HEADLAMP DIMMER SWITCH ASSY

(a) Install the headlamp dimmer switch with the 3 screws.
(b) Check that the headlamp dimmer switch operates smoothly.

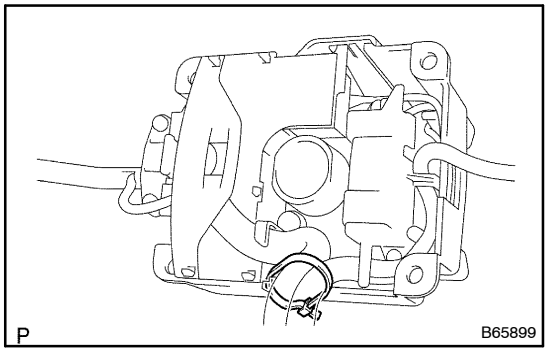

(c) Install a new cord clamp.
(d) After installing the cord clamp, cut it off so that the extra length from the binding point will be 1 – 3 mm (0.04 – 0.12 in.).
(e) Using the wire harness clamps, bind the wire harness, and tape the wire harness.

Standard:
A: 610 – 630 mm (24.02 – 24.80 in.)
B: 230 – 240 mm (9.06 – 9.45 in.)
C: 195 – 205 mm (7.67 – 8.07 in.)
D: 275 – 295 mm (10.83 – 11.61 in.)
E: 80 – 100 mm (3.15 – 3.94 in.)

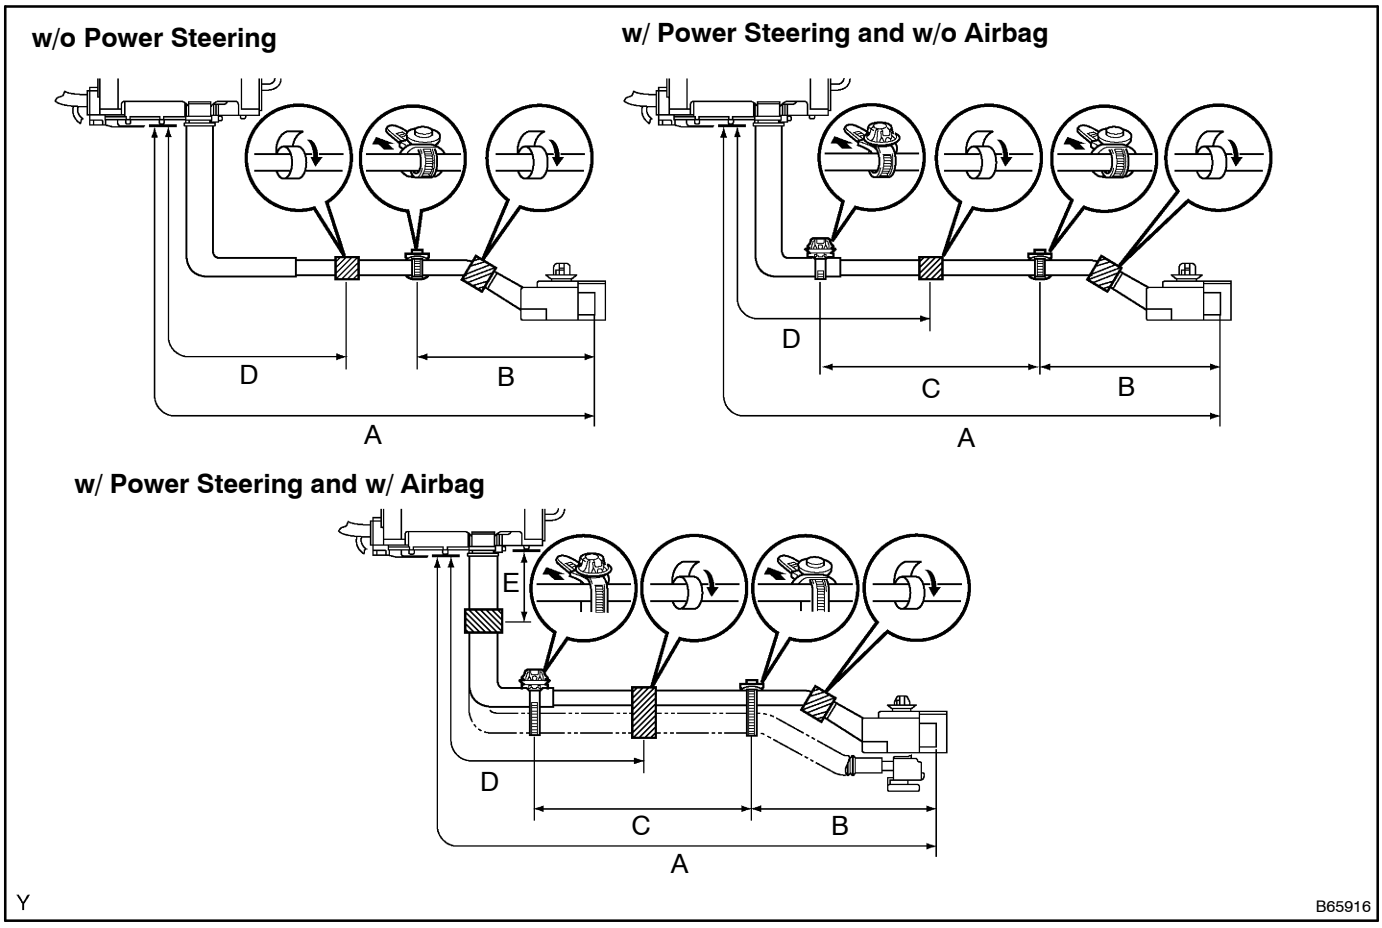

7. INSTALL TURN SIGNAL SWITCH ASSY (See page 50–8)

(a) Install the turn signal switch assy.
(b) Place the front wheels facing straight ahead.
(c) Install the steering column cover upper.
(d) Install the steering column cover lower.
(e) Install the steering wheel assy.
(f) Install the horn button assy.