TURN SIGNAL SWITCH


650QN–01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL


2. REMOVE TURN SIGNAL SWITCH ASSY (See page 50–8)

(a) Place the front wheels facing straight ahead.
(b) Remove the horn button assy.
(c) Remove the steering wheel assy.
SST 09950–50013 (09951–00510, 09952–05010, 09953–05020, 09954–05021)
(d) Remove the steering column cover lower.
(e) Remove the steering column cover upper.
(f) Remove the turn signal switch assy.

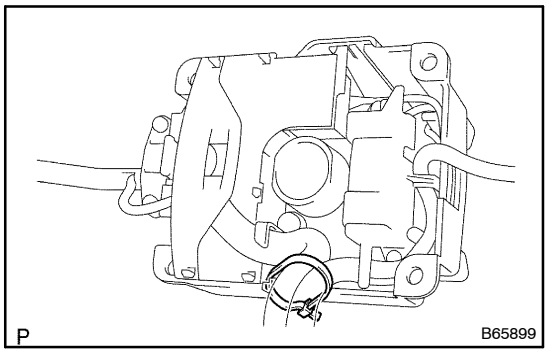


3. REMOVE HEADLAMP DIMMER SWITCH ASSY

(a) Remove the cord clamp.

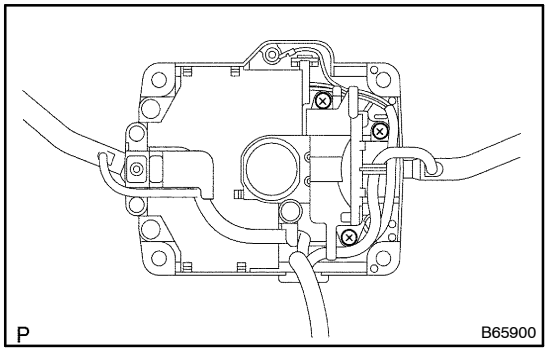


(b) Remove the 3 screws.
(c) Disconnect the headlamp dimmer switch from the turn signal switch.

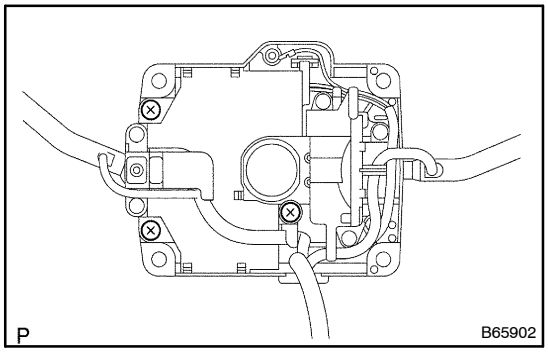


4. REMOVE WINDSHIELD WIPER SWITCH ASSY

(a) Remove the 3 screws and windshield wiper switch.

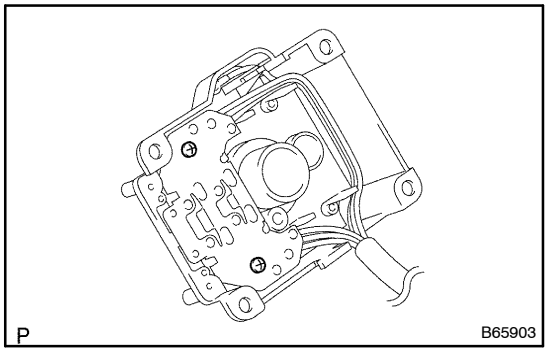


5. REMOVE TURN SIGNAL SWITCH


(a) Remove the 2 screws.

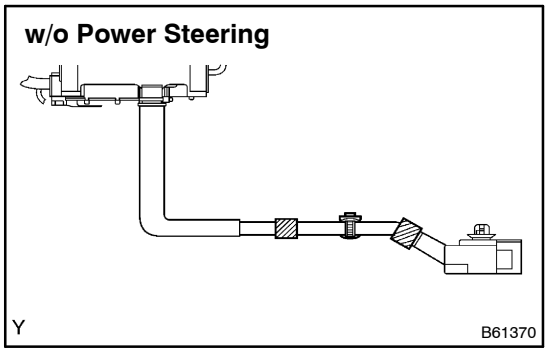


(b) w/o Power steering:
Remove the wire harness clamp and 2 tapes.

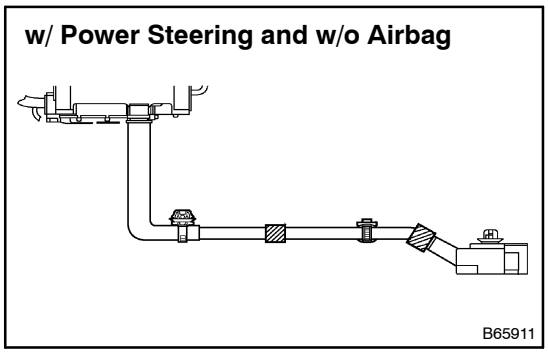


(c) w/ Power steering and w/o airbag:
Remove the 2 wire harness clamps and 2 tapes.

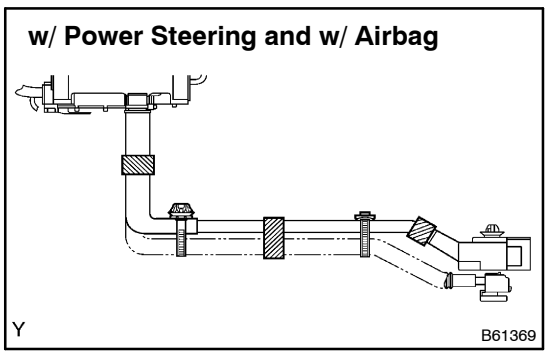


(d) w/ Power steering and w/ airbag:
Remove the 2 wire harness clamps and 3 tapes.

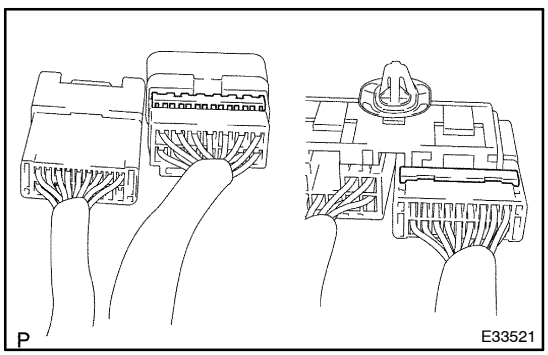

(e) Release the lock from the connector.

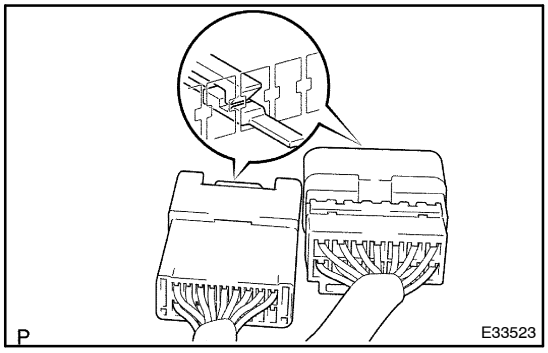

(f) Using a precision screwdriver, unlock the connector terminals.
(g) Pull out the connector terminal pins and remove the turn signal switch.

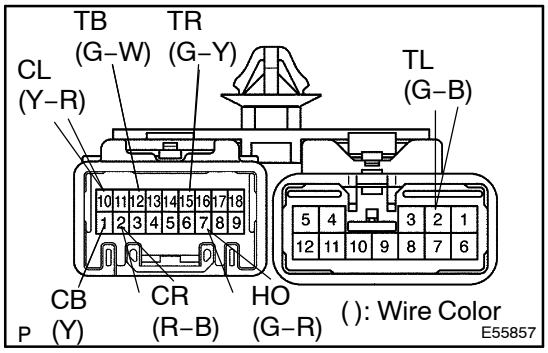


6. INSTALL TURN SIGNAL SWITCH


(a) Install the connector terminal pins for the connector.

NOTICE:

Do not arrange the connector terminal pins wrongly.

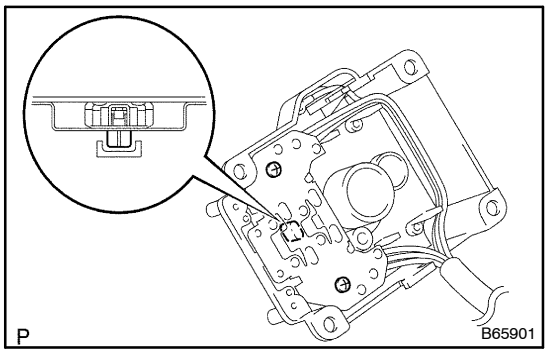


(b) Engage the turn signal switch and install the switch with the 2 screws.
(c) Check that the turn signal switch operates smoothly.

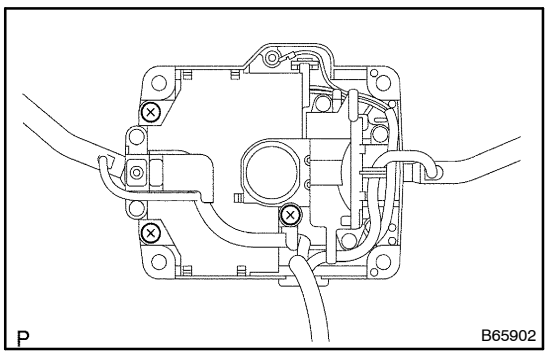


7. INSTALL WINDSHIELD WIPER SWITCH ASSY

(a) Install the windshield wiper switch assembly with the 3 screws.
(b) Check that the windshield wiper switch assembly operates smoothly.

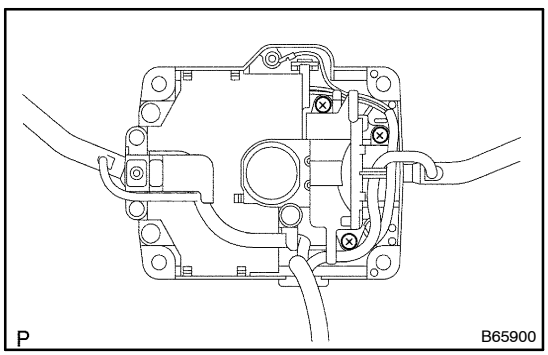


8. INSTALL HEADLAMP DIMMER SWITCH ASSY

(a) Install the headlamp dimmer switch with the 3 screws.
(b) Check that the headlamp dimmer switch assembly operates smoothly.

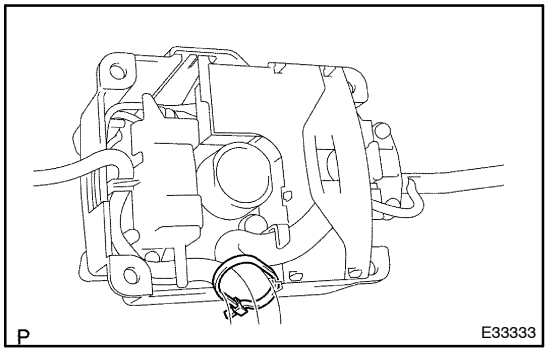

(c) Install a new cord clamp.
(d) After installing the cord clamp, cut it off so that the extra length from the binding point will be 1 – 3 mm (0.04 – 0.12 in.).
(e) Using the wire harness clamps, bind the wire harness, and tape the wire harness.

Standard:
A: 610 – 630 mm (24.02 – 24.80 in.)
B: 230 – 240 mm (9.06 – 9.45 in.)
C: 195 – 205 mm (7.67 – 8.07 in.)
D: 275 – 295 mm (10.83 – 11.61 in.)
E: 80 – 100 mm (3.15 – 3.94 in.)

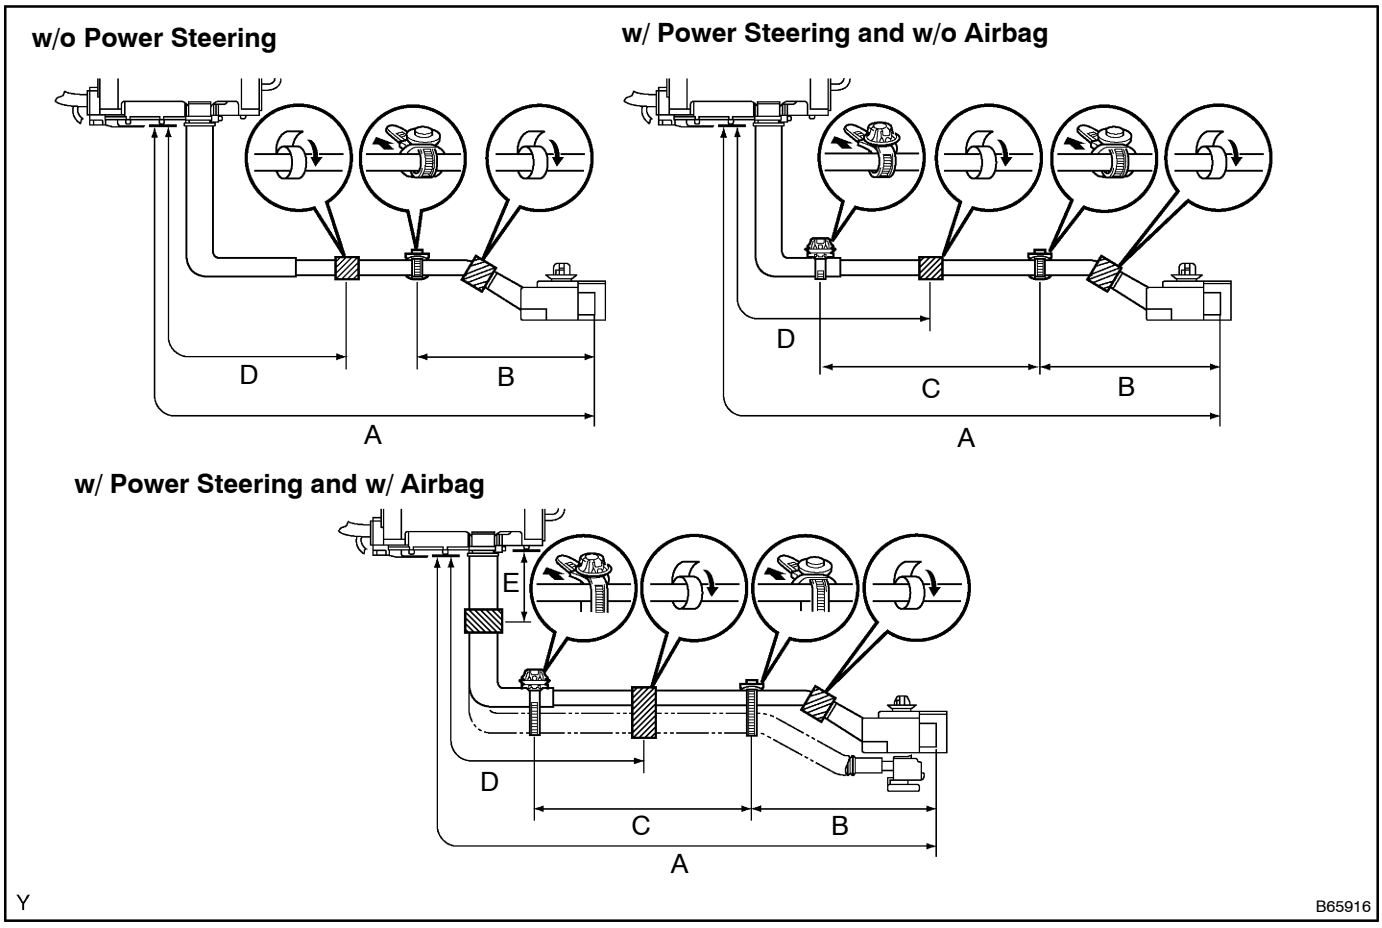

9. INSTALL TURN SIGNAL SWITCH ASSY (See page 50–8)

(a) Install the turn signal switch assy.
(b) Place the front wheels facing straight ahead.
(c) Install the steering column cover upper.
(d) Install the steering column cover lower.
(e) Install the steering wheel assy.
(f) Install the horn button assy.