
750LD–01

REPLACEMENT

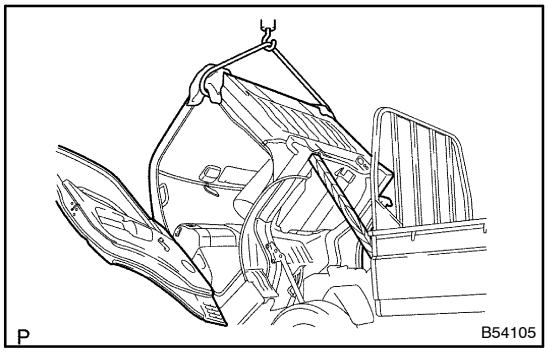

1. CAB HOLD

(a) After tilting the cab up, put the wire on the roof panel of cab.

NOTICE:


Place the rag on the point contacting the cab in order not to damage.

(b) Tense the wire with the degree of force which does not pull the cab up.

NOTICE:


Do not pull the cab up.

(c) Using wood, etc., support the cab.

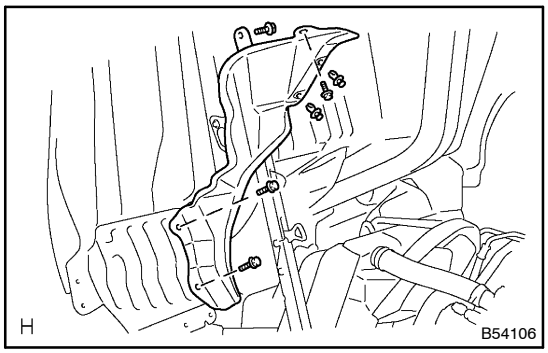

2. REMOVE FRONT FLOOR SIDE APRON NO.1 LH

(a) Remove the 4 bolts, 2 clips and side apron.

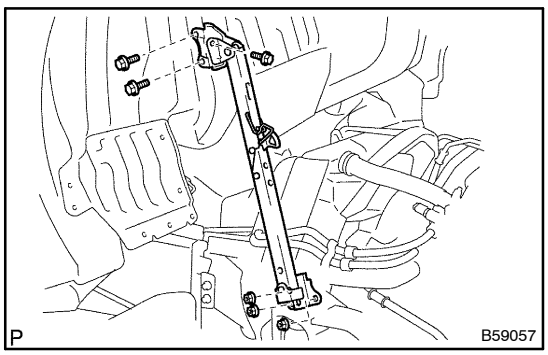

3. REMOVE TILT CAB STAY ASSY

(a) Remove the 3 bolts, 3 nuts and tilt cab stay.

4. INSTALL TILT CAB STAY ASSY

(a) Install the tilt cab stay with the 3 bolts and 3 nuts.
Torque: 58 N·m (590 kgf·cm, 43 ft·lbf)

5. INSTALL FRONT FLOOR SIDE APRON NO.1 LH

(a) Install the side apron with the 4 bolts and 2 clips.
Torque: 11.5 N·m (115 kgf·cm, 8.5 ft·lbf)