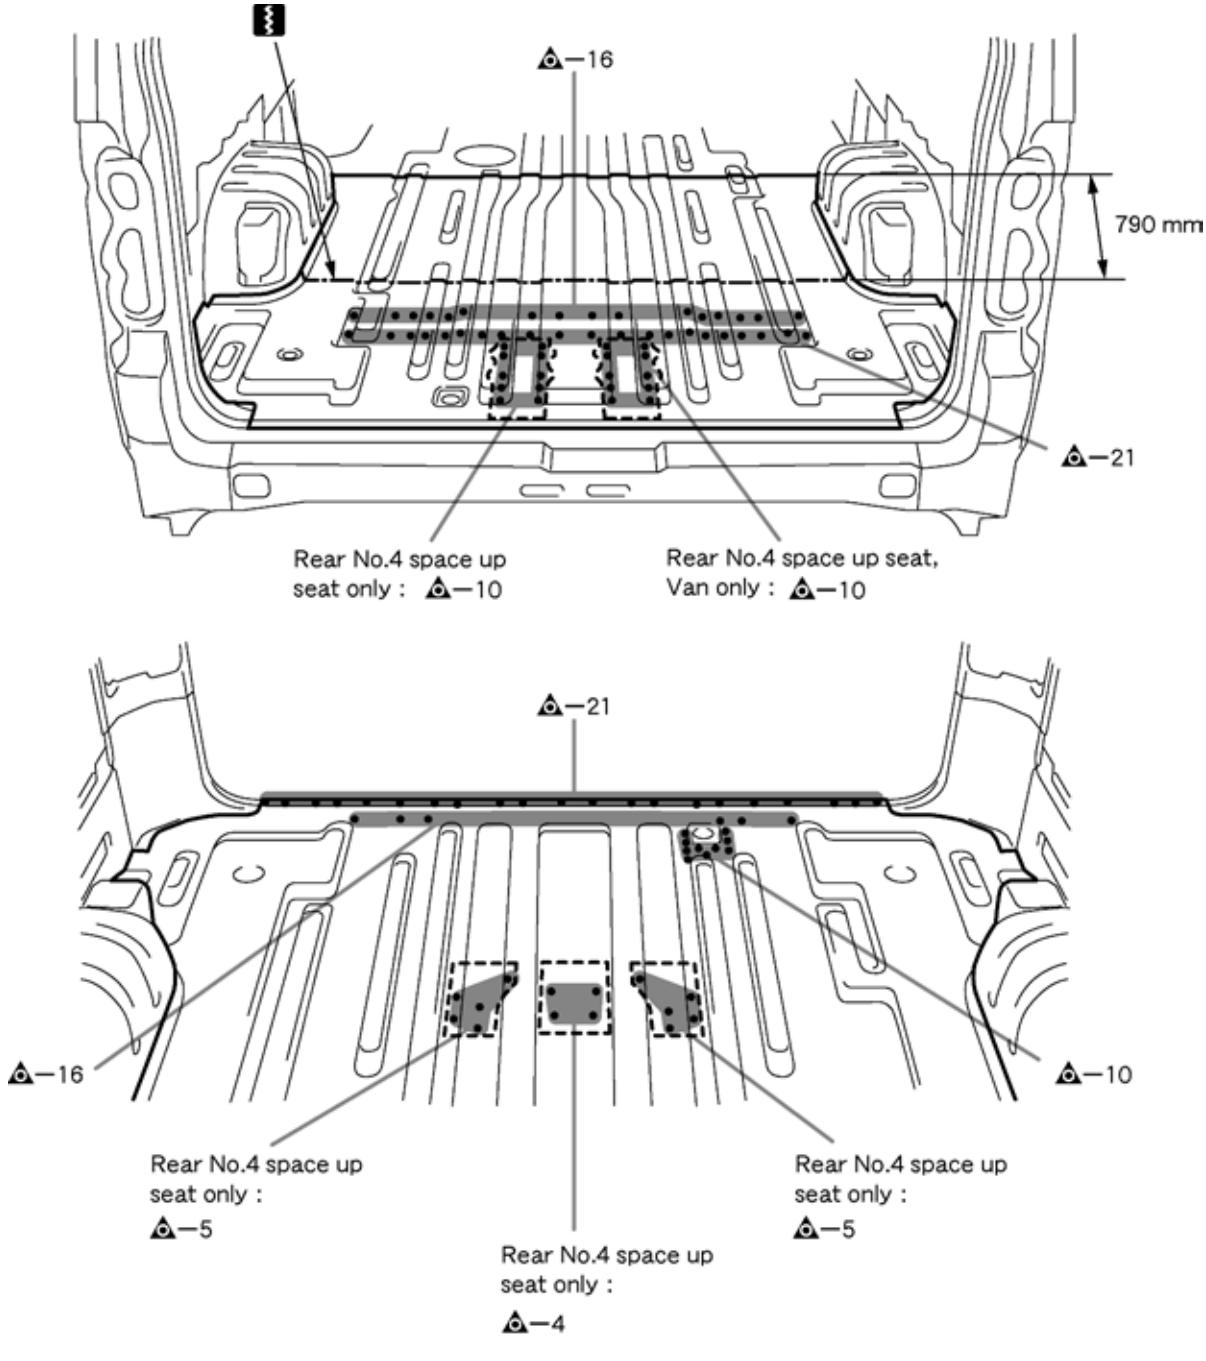
# REAR FLOOR PAN (CUT-H): SUPER LONG BODY


F22722B

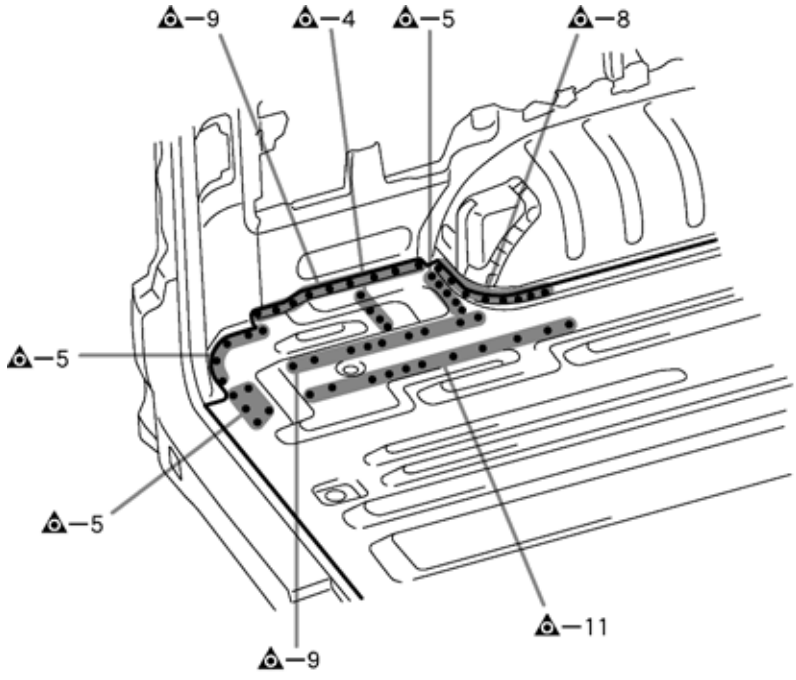
## REPLACEMENT

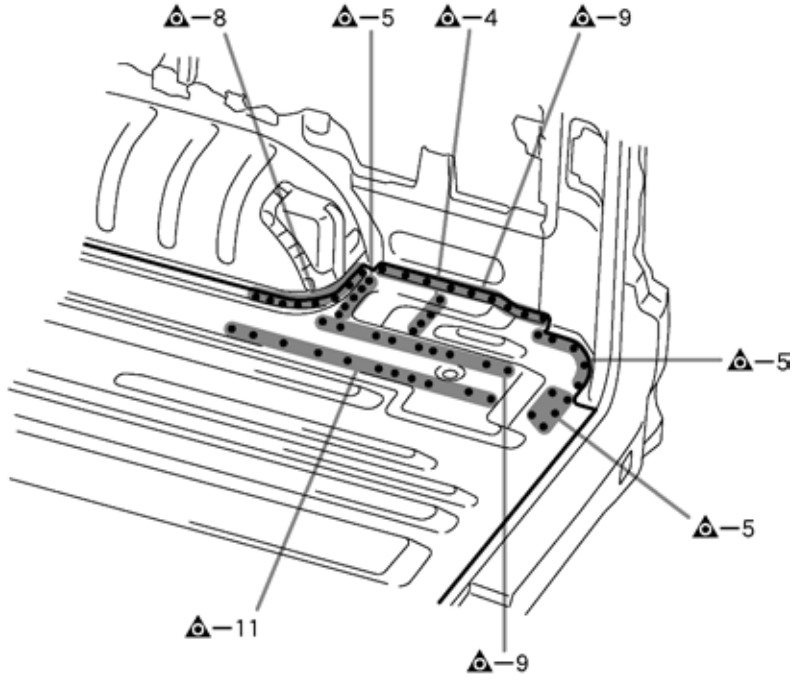
## REMOVAL



F22689

790 mm (31.10 in.)

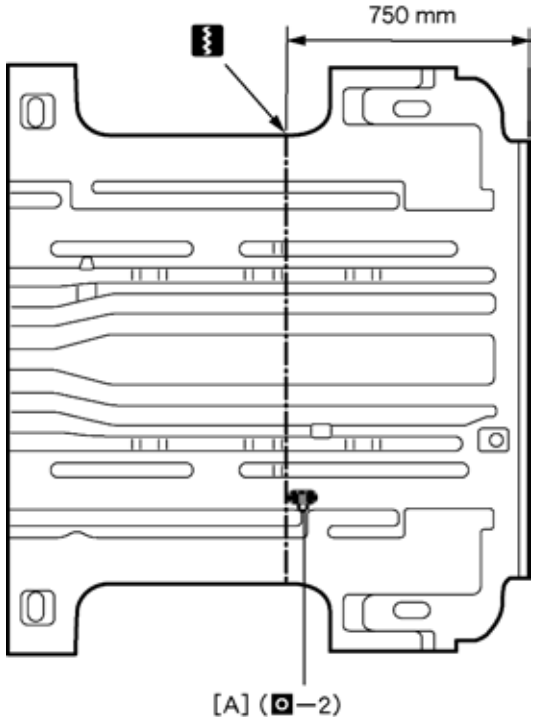



F20617

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.




F20641

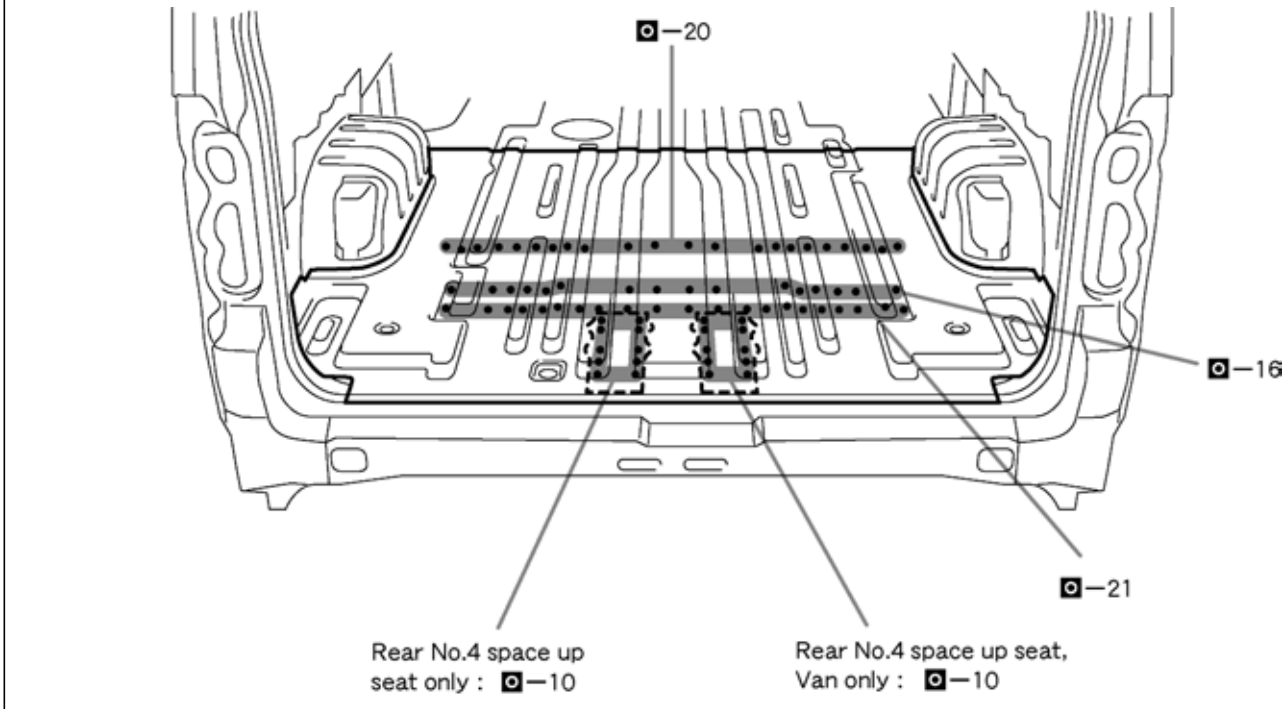
**POINT**

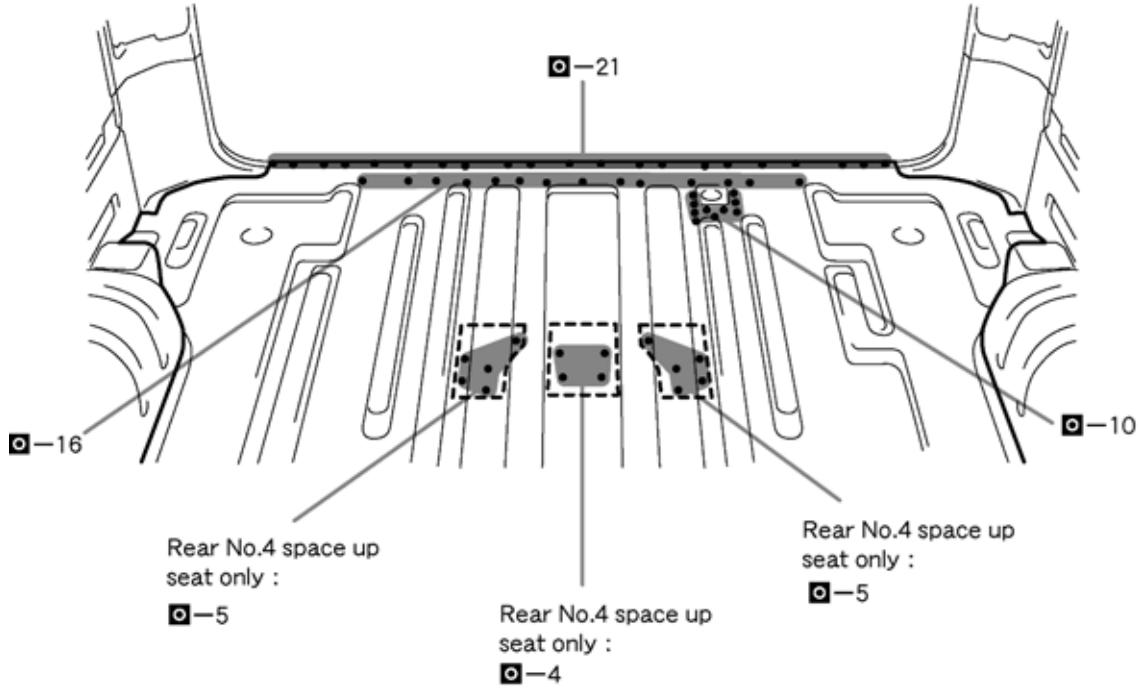
1 Cut the new part so that it overlaps the previous cut location by approximately 20 mm (0.79 in.).
*HINT:*
*1) Perform MIG plug-welding in the area where the panel are overlapped. Apply body sealer to both sides of each panel.*
*2) Confirm that the panels are securely welded together.*

**PART NAME**

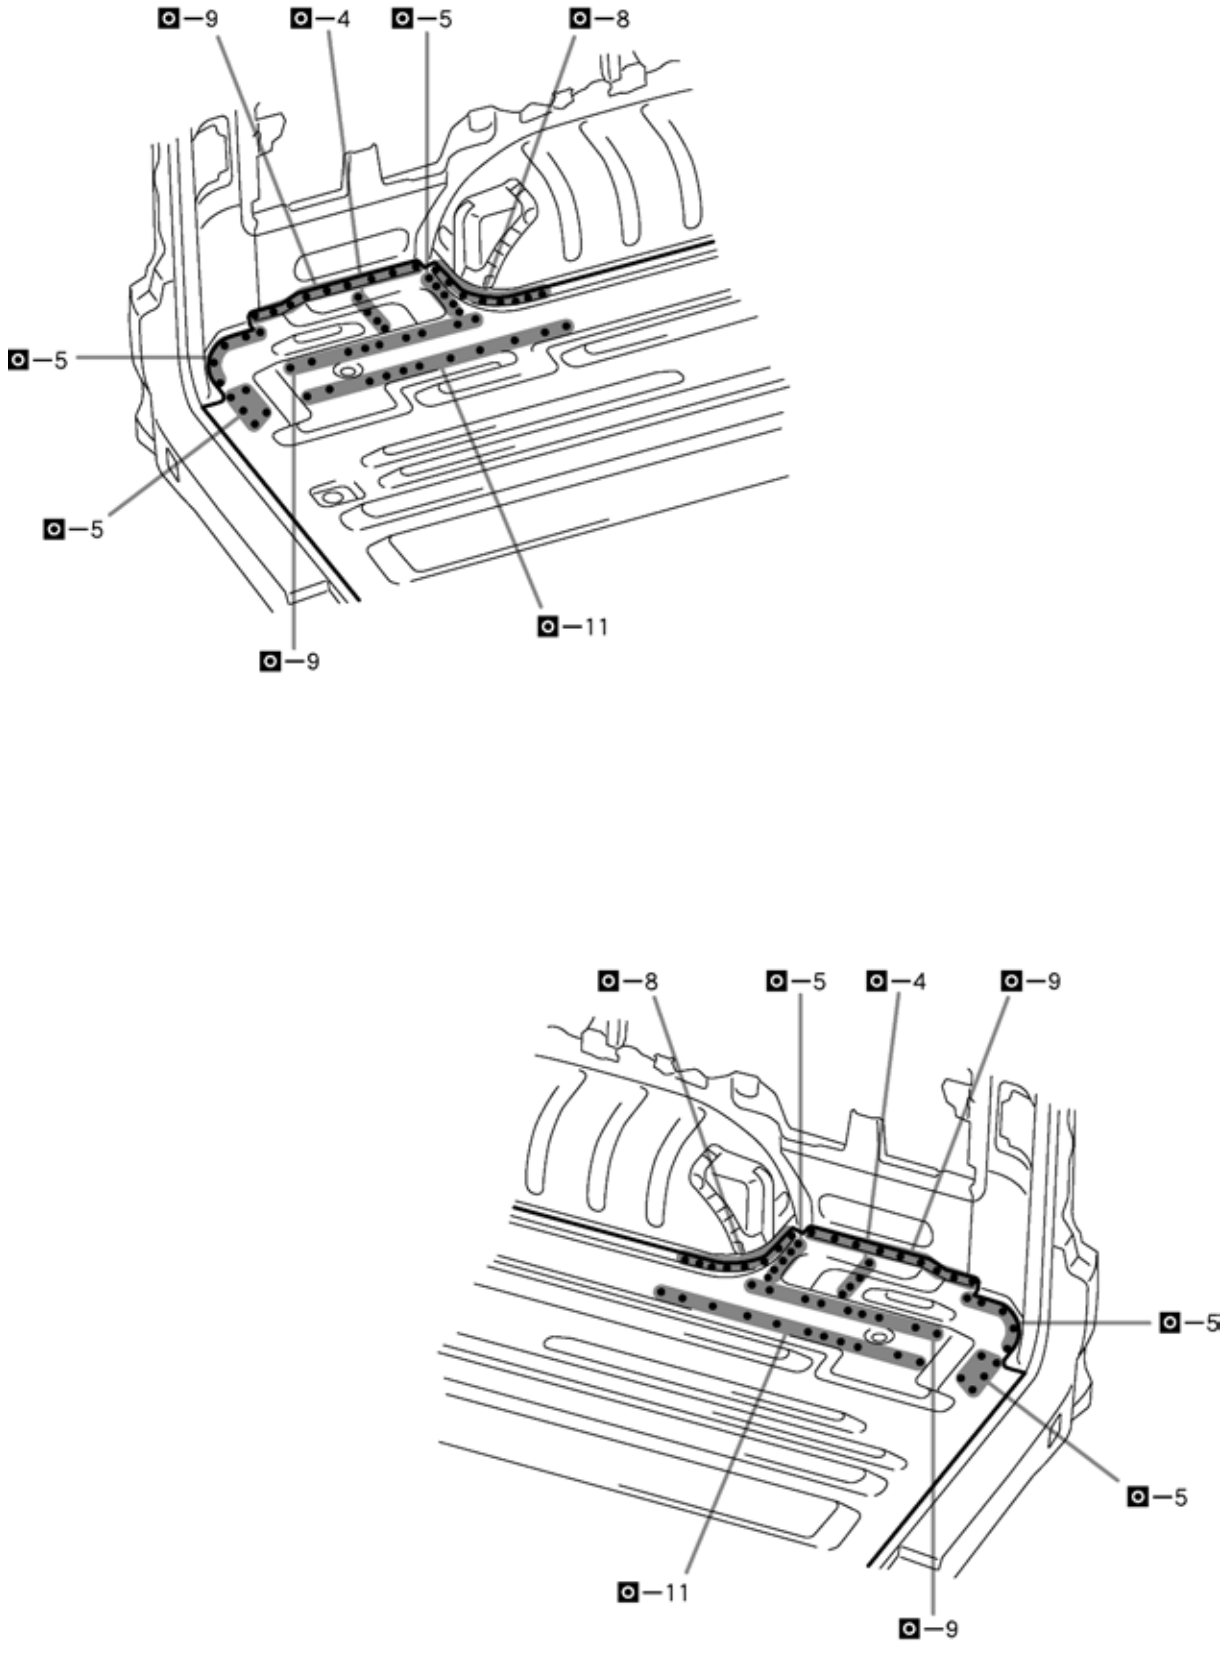
[A] Wire Harness Bracket

750 mm (29.53 in.)


◙—20
◙—16
◙—21
Rear No.4 space up seat only : ◙—10
Rear No.4 space up seat, Van only : ◙—10


◙—21
◙—16
◙—10
Rear No.4 space up seat only : ◙—5
Rear No.4 space up seat only : ◙—4
Rear No.4 space up seat only : ◙—5

F22690


9
4
5
8
5
5
11
9
8
5
4
9
5
5
11
9
F20619