

FRONT FENDER APRON (ASSY)



F16753A

REPLACEMENT
With the radiator side support and front body pillar lower gusset removed.

REMOVAL

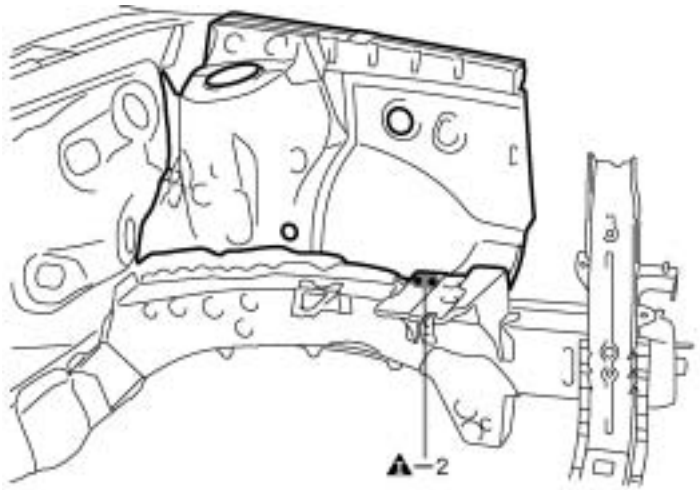

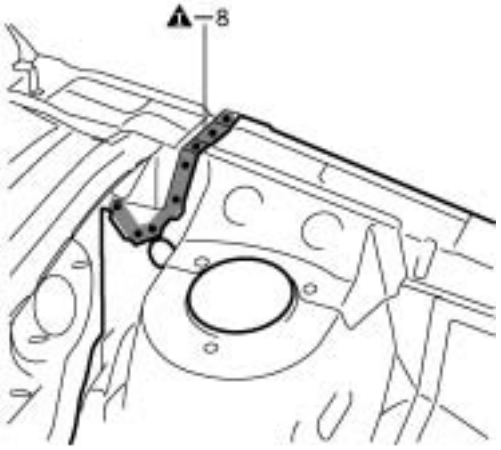


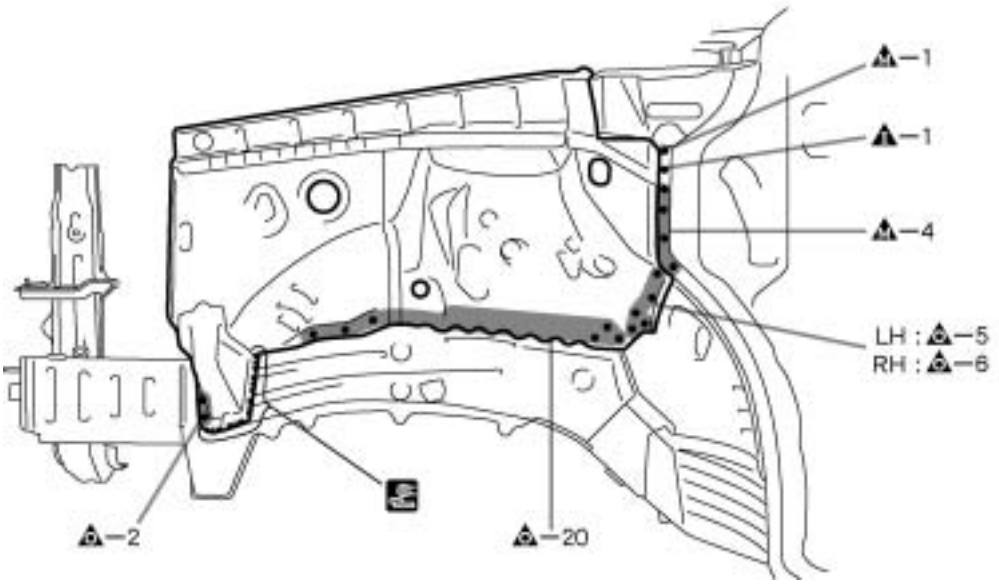

F16753

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

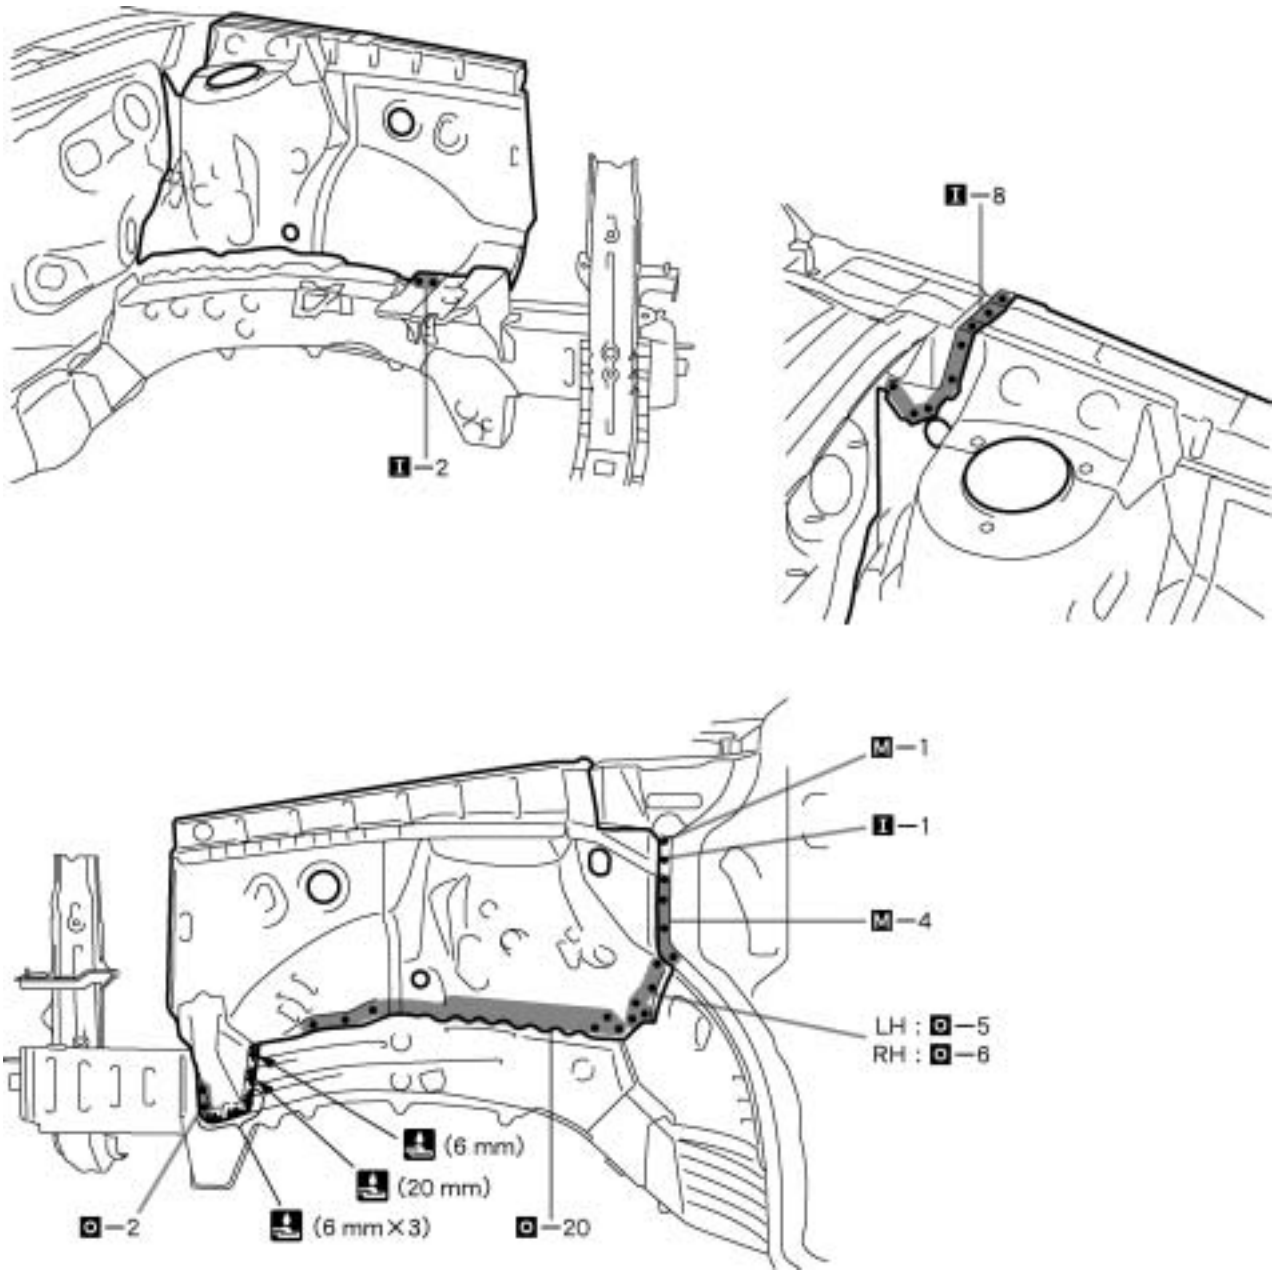

F16754

POINT

1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.

2 Make sure each measurment is corect, as this parts affects the front wheel alignment.

6 mm (0.24 in.) 20 mm (0.79 in.)