
270ER–02

DISPOSAL

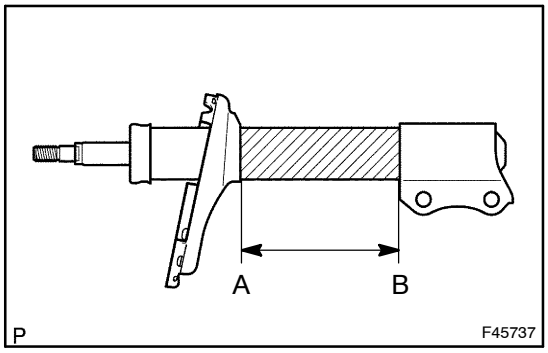

1. DISPOSE OF SHOCK ABSORBER ASSY REAR LH

(a) Fully extend the shock absorber rod.

(b) Using a drill, make a hole in the cylinder somewhere between A and B as shown in the illustration to discharge the gas inside.

CAUTION:

- **Be careful when drilling as shards of metal may fly about. Always use the proper safety equipment.**
- **The gas is colorless, odorless and non–poisonous.**