
REAR SPOILER

7617W–01

REPLACEMENT

1. REMOVE BACK WINDOW PANEL TRIM UPPER (See page 75–20)

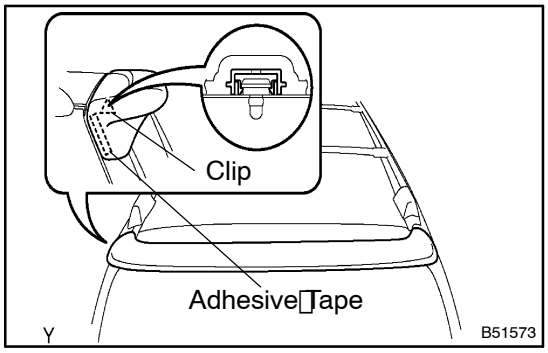

2. REMOVE REAR SPOILER

(a) Remove the 2 bolts and nut.

(b) Using a heat light, heat the body and rear spoiler between 40 to 60°C (104 to 140°F).

NOTICE:

Do not heat the rear spoiler excessively.

(c) Tie objects that can serve as handles (for example, wooden blocks) to all wire ends.

(d) Scrape the adhesive tape off by pulling the piano wire.

NOTICE:

- **If planning to reuse the rear spoiler, take care not to damage the rear spoiler.**
- **Do not damage the body.**

(e) Remove the rear spoiler.

3. INSTALL REAR SPOILER

(a) Using a heat light, heat the body and rear spoiler surface between 40 to 60°C (104 to 140°F).

NOTICE:

Do not heat the body and rear spoiler excessively.

(b) Remove the adhesive tape from the body.

(c) Wipe off the stains with cleaner.

(d) If planning to reuse the rear spoiler:

Clean the rear spoiler .


(1) Using a heat light, heat the body and rear spoiler between 20 to 30°C (68 to 86°F).

NOTICE:

Do not heat the body and rear spoiler excessively.

(2) Remove the adhesive tape from the rear spoiler.

(3) Wipe off the stains with cleaner.

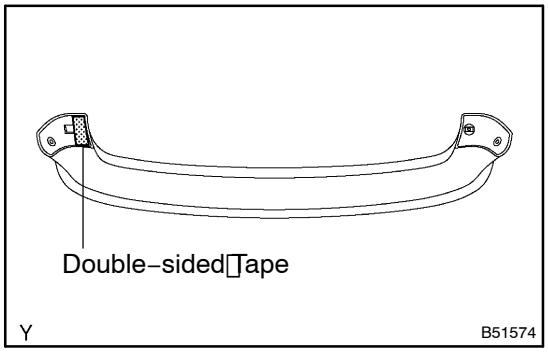

(4) Apply new adhesive tape to the rear spoiler as shown in the illustration.

(e) Using a heat light, heat the body and rear spoiler.

Heating temperature:

Body	40 to 60°C (104 to 140°F)
Spoiler	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and rear spoiler excessively.

(f) Remove the peeling paper from the surface of the rear spoiler.

NOTICE:

After removing the peeling paper, keep the exposed adhesive away from dirt and other contaminants.

(g) Install the rear spoiler.

NOTICE:

Do not apply excessive force onto the rear spoiler but steady pressure with your thumbs.