FRONT DOOR BELT MOULDING ASSY LH


7617Y–01

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.

1. **REMOVE POWER WINDOW REGULATOR SWITCH ASSY (See page 75–6)**
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75–6)**
3. **REMOVE DOOR PULL HANDLE (See page 75–6)**
4. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (See page 75–6)**

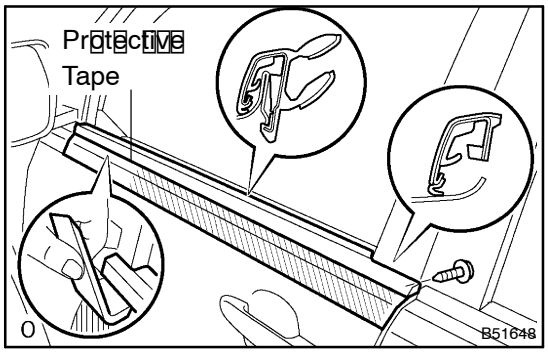

5. **REMOVE FRONT DOOR BELT MOULDING ASSY LH**

(a) Remove the screw.

(b) Put protective tape under the moulding.

(c) Using a moulding remover or scraper, pry out the moulding.