
ROOF DRIP SIDE FINISH MOULDING CENTER LH

76180–01

REPLACEMENT

HINT:
Use the same procedures for the RH side and LH side.

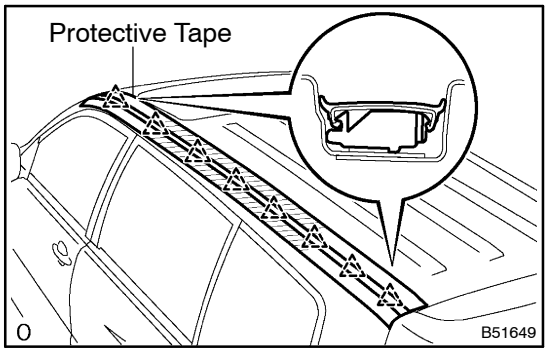

1. REMOVE ROOF DRIP SIDE FINISH MOULDING CENTER LH

(a) Put protective tape around the edges of the moulding.
(b) Using a moulding remover, disengage the moulding's front and rear end clips from the vehicle.
(c) Remove the moulding.

NOTICE:

- **Do not remove the clips from the vehicle body.**
- **If the clips are damaged or removed accidentally, exchange them for supplied ones.**

2. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP NO.2

NOTICE:

Only when replacing the clips.

(a) Remove the adhesive tape that remains on the mounting surface of the body, and then clean the surface with white gasoline.
(b) Using a heat light, heat up the clip installation surfaces of the body and moulding.
Heating temperature:

Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)


NOTICE:

Do not heat the body and moulding excessively.

(c) Set the new clips into the positions as shown in the illustration, and press–fit those clips by hand to install them.
(d) Install the moulding when 30 minutes or more have passed after press–fitting the clips.

HINT:

- Initial hardening time: 30 minutes
- Perfect hardening time: 24 hours

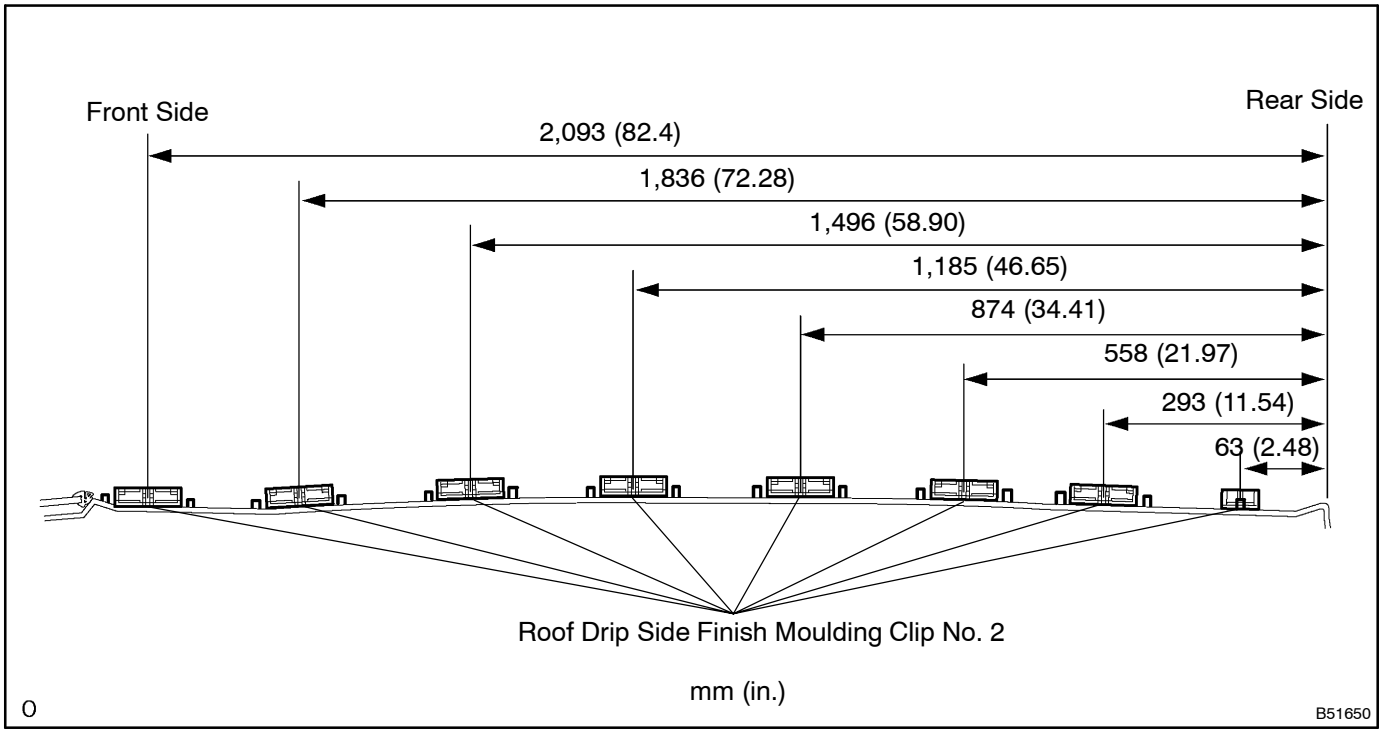
Front Side
Rear Side
2,093 (82.4)
1,836 (72.28)
1,496 (58.90)
1,185 (46.65)
874 (34.41)
558 (21.97)
293 (11.54)
63 (2.48)
Roof Drip Side Finish Moulding Clip No. 2
mm (in.)
B51650