
FRONT FENDER FRONT APRON (ASSY)

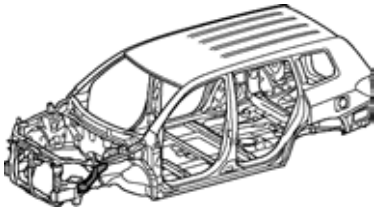

F28381A

With the radiator side support removed.


Symbol meaning

REMOVAL : Remove Weld Points : Cut with Disc Sander etc.

INSTALLATION : Spot Weld : Plug Weld : Fillet Weld

F28381B

REMOVAL·INSTALLATION

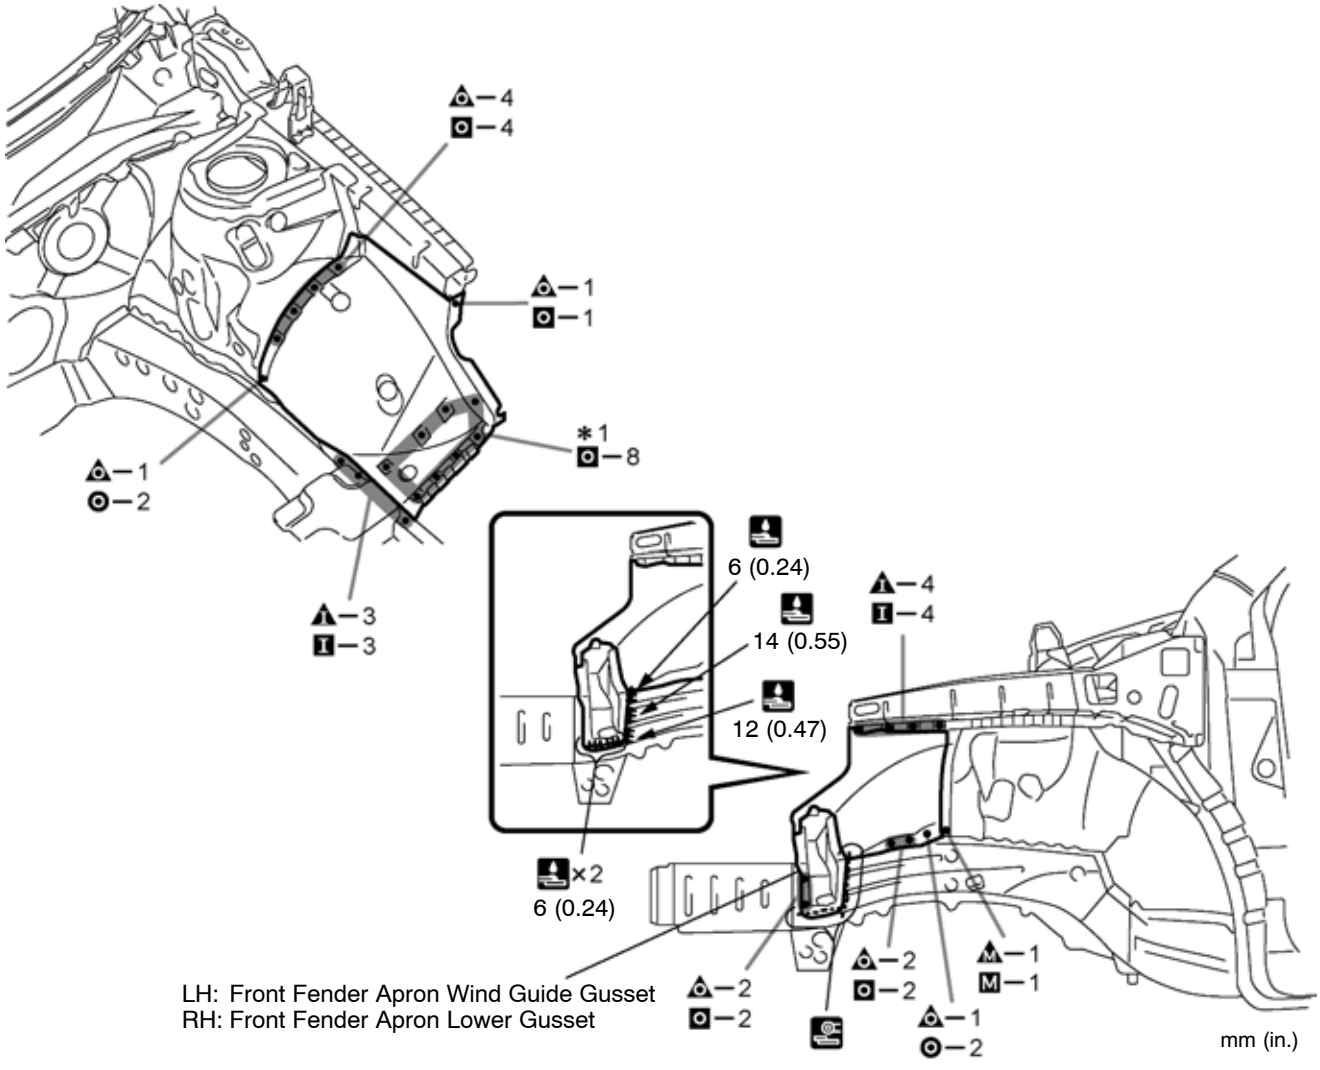

F28381

REMOVAL POINT

1 Remove the front fender apron wind guide gusset and front fender apron lower gusset at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.