
FRONT FENDER APRON (ASSY)

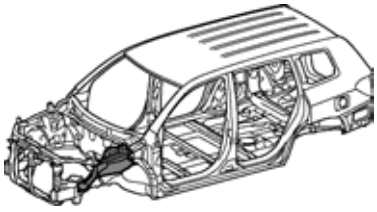

F28384A


With the radiator side support and front body pillar lower gusset removed.

Symbol meaning

REMOVAL	A M I : Remove Weld Points	: Cut with Disc Sander etc.
INSTALLATION	O M I : Plug Weld	: Fillet Weld

F28384B

REMOVAL·INSTALLATION

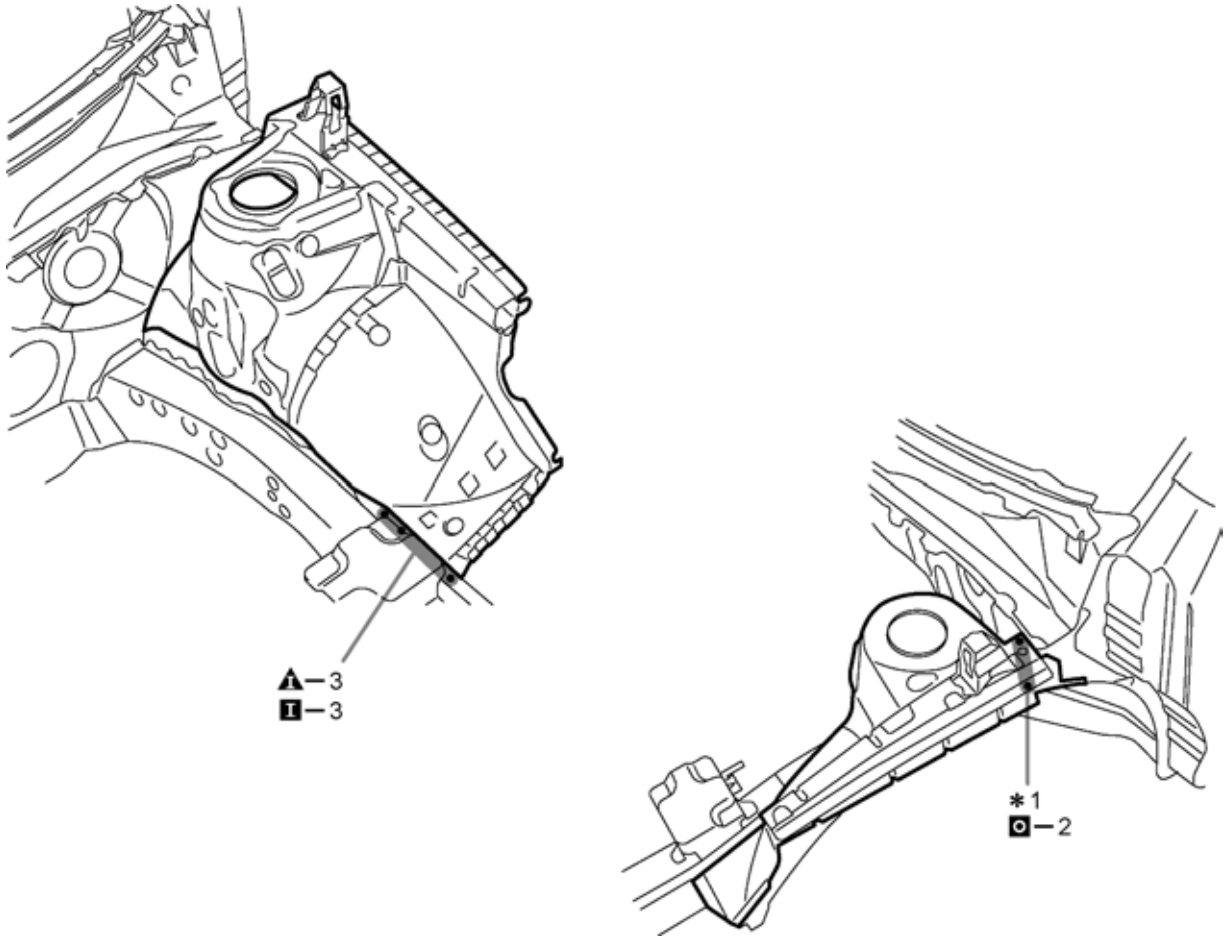

CAUTION

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

F28384


INSTALLATION POINT


1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

Symbol meaning

REMOVAL	A M A : Remove Weld Points	: Cut with Disc Sander etc.
INSTALLATION	O M I : Plug Weld	: Fillet Weld

F28384B

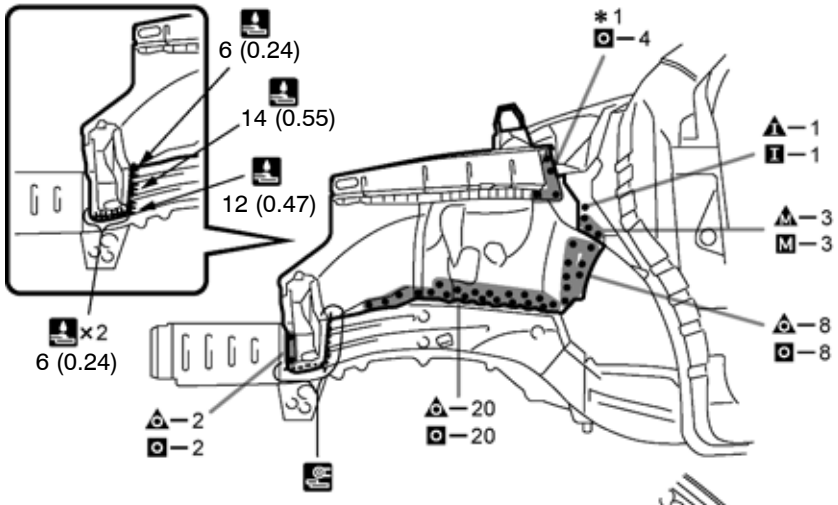

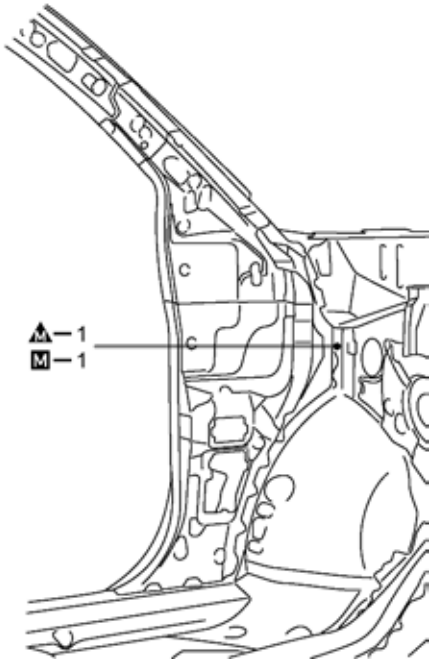

CAUTION

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

mm (in.)

F28385

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.