

NAME PLATE APPLICATION PROCEDURE

1 Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
HINT:
1) Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.

2 Wipe off the remaining double-sided tape using a clean cloth or equivalent.
HINT:
1) If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.


3 After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
HINT:
1) The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.

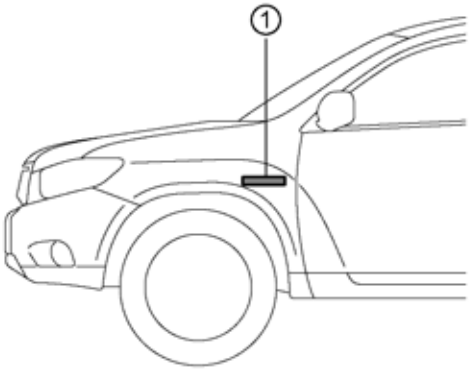


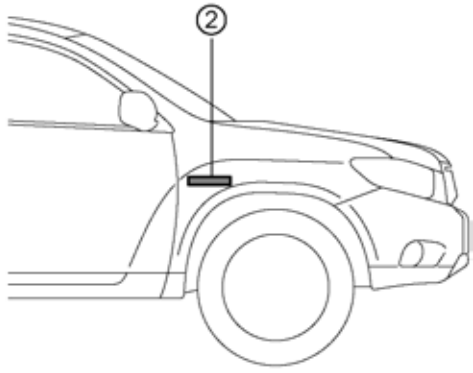

① NO. 2 FRONT FENDER NAME PLATE : LH Side


② NO. 1 FRONT FENDER NAME PLATE : RH Side

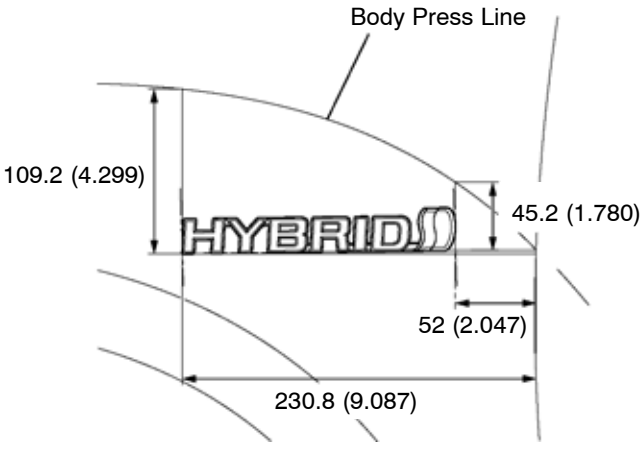

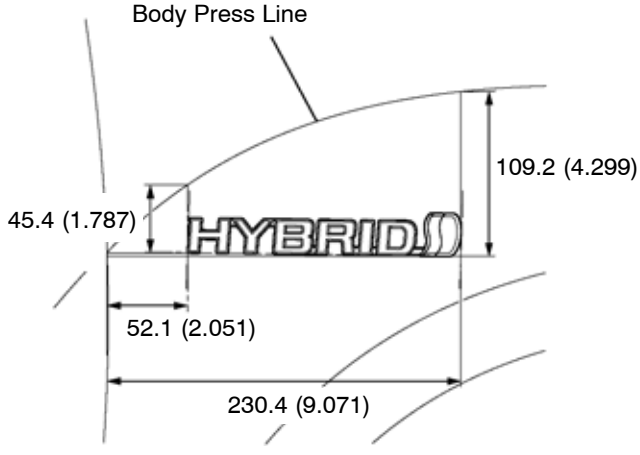


mm (in.)


F28974

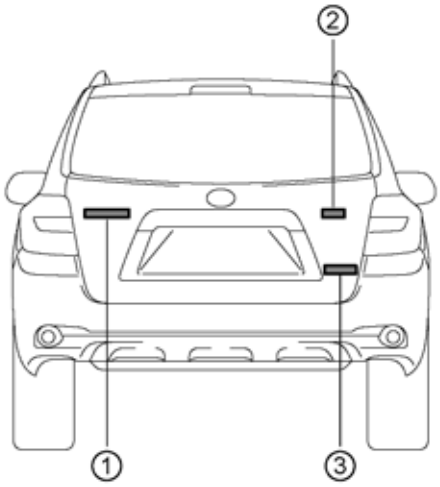


② NO. 5 BACK DOOR NAME PLATE

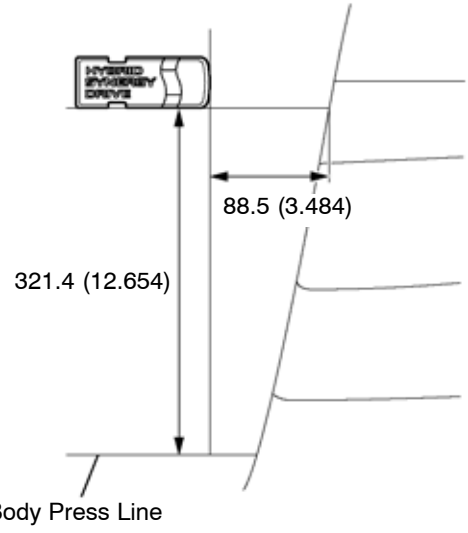

① NO. 2 BACK DOOR NAME PLATE

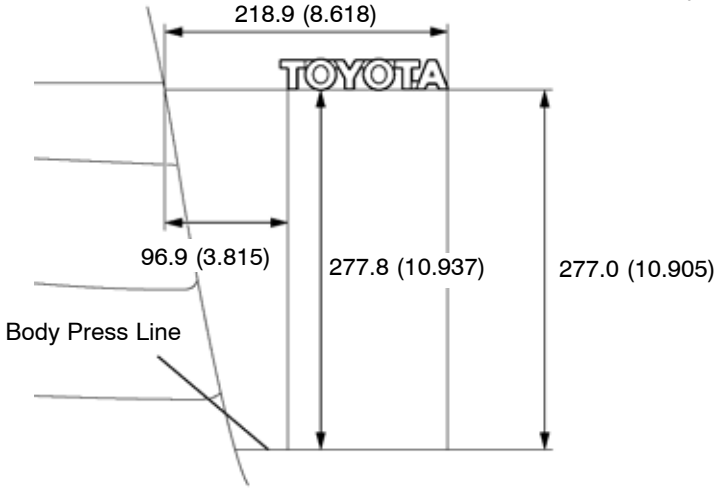

③ BACK DOOR NAME PLATE

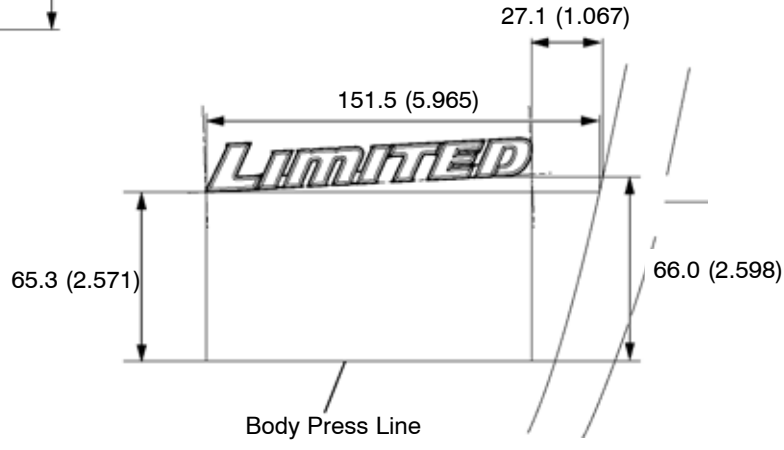

mm (in.)

F28975