

FRONT FENDER APRON (ASSY)




REPLACEMENT

With the radiator side support and front crossmember removed.



F20981-A


REMOVAL

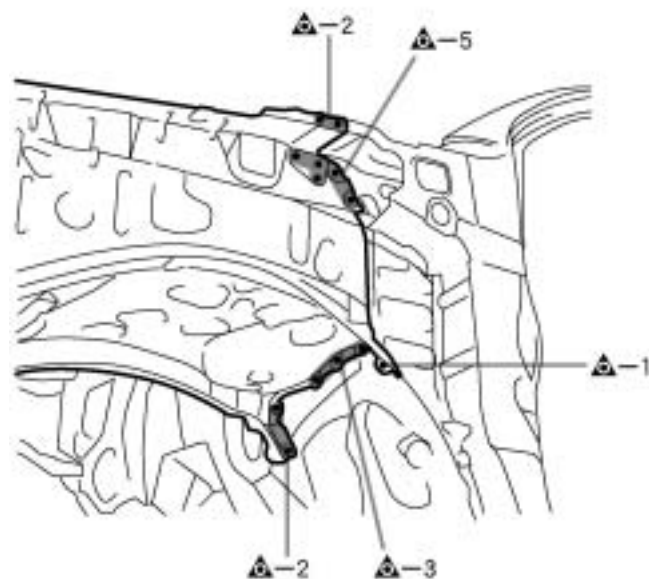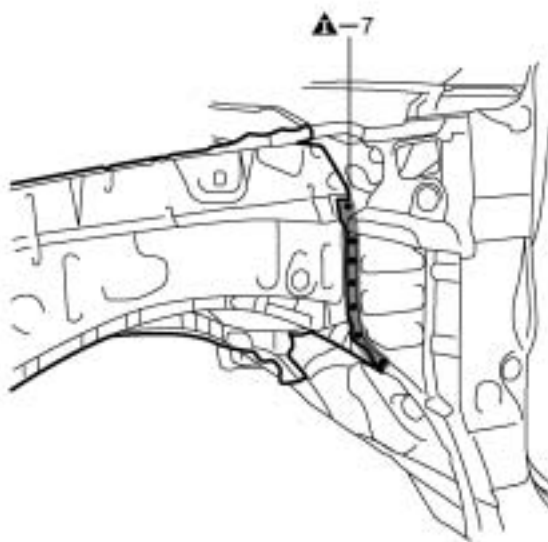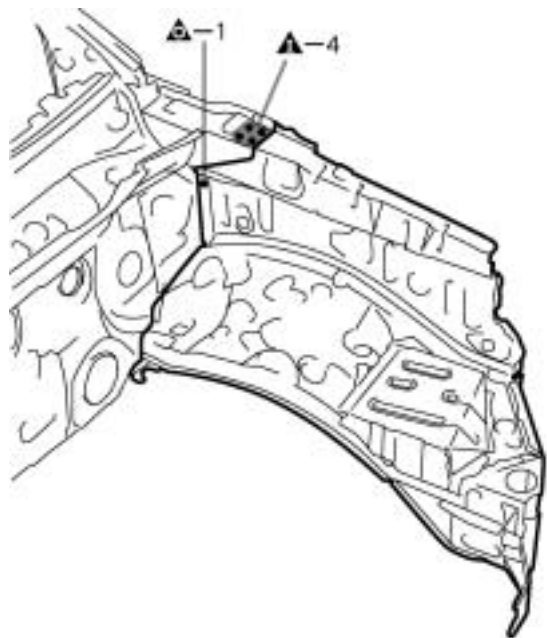

F20981

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

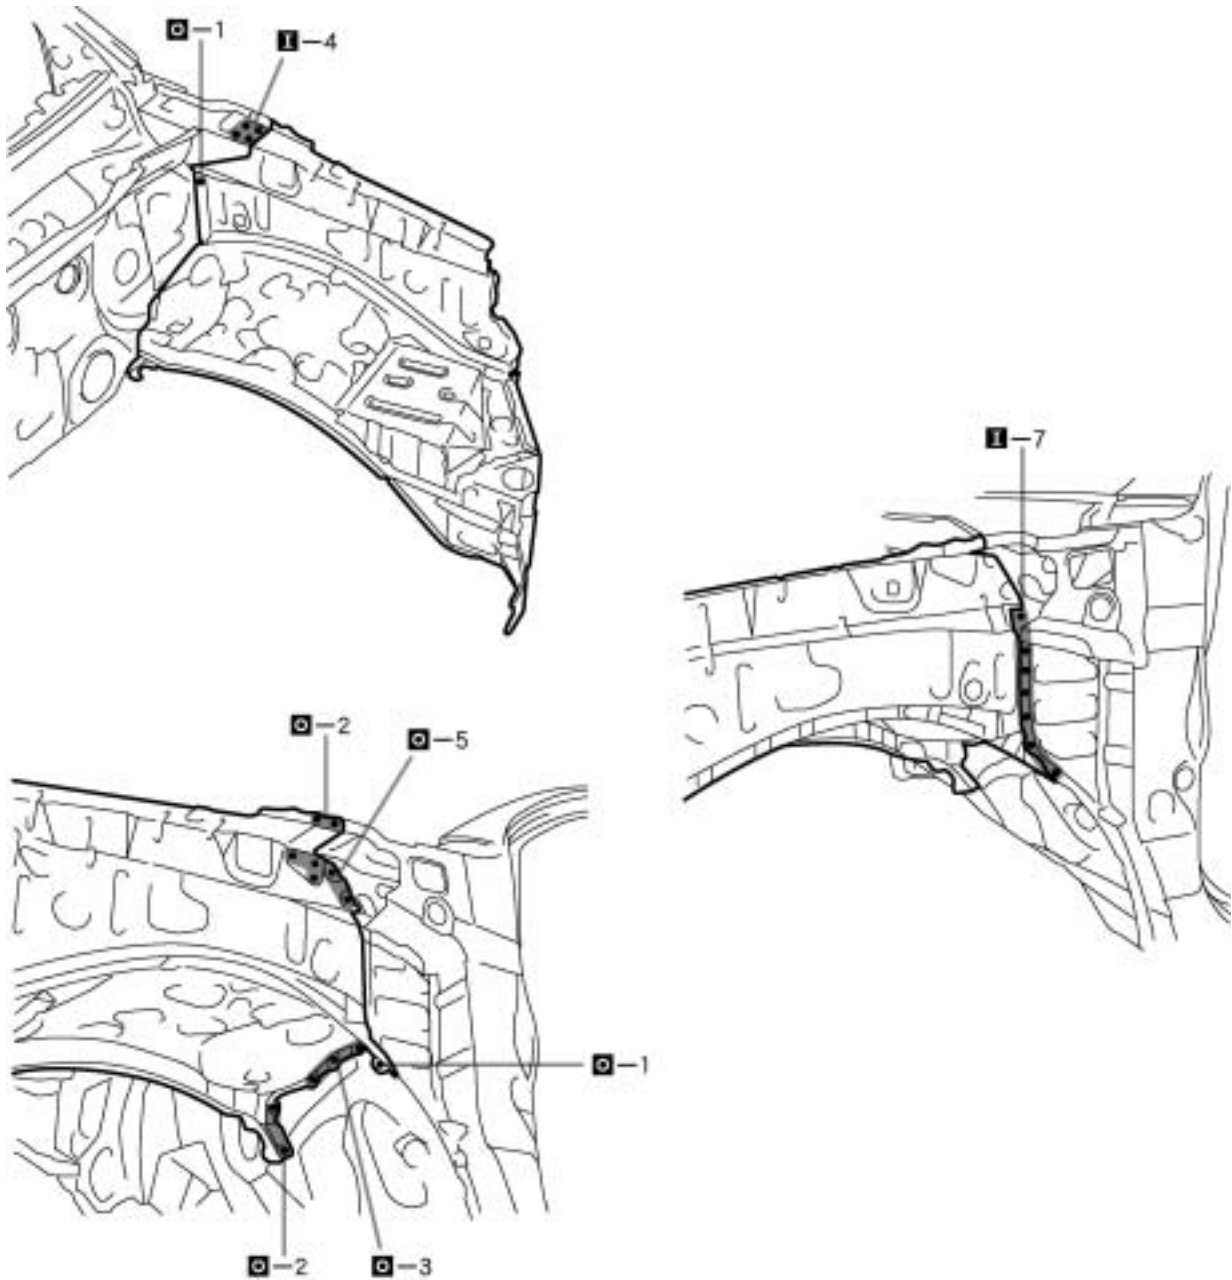

F20982

POINT

- 1 Inspect the fitting of the front fender and hood, etc., before welding since affects the appearance of the finish.