



FRONT FENDER APRON (ASSY)

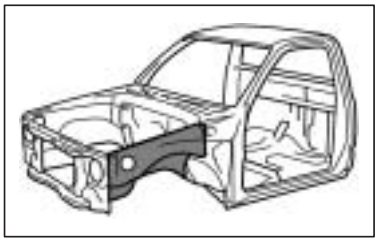


REMOVAL (With the radiator support, cowl top side panel, cowl side panel reinforcement removed.)

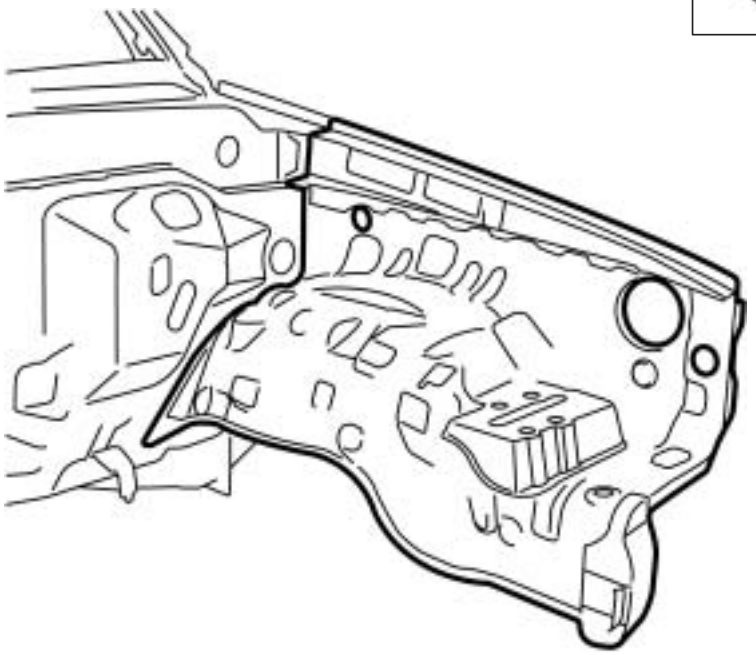


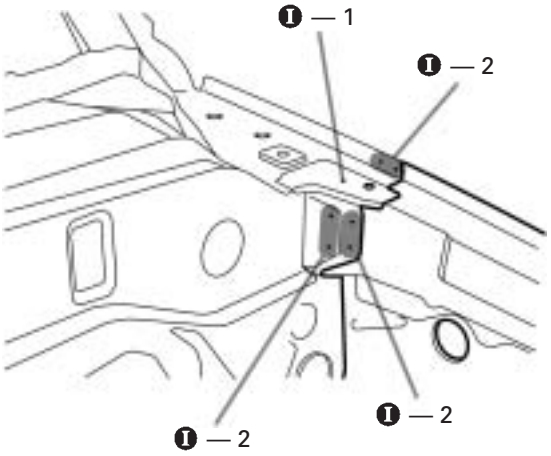


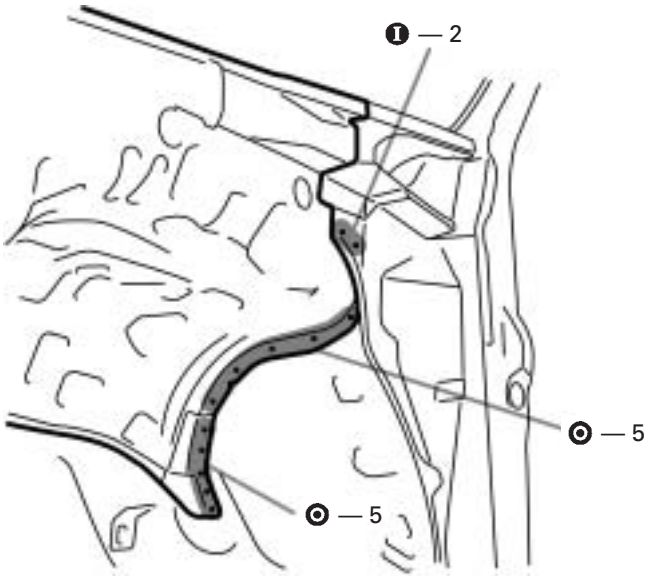

INSTALLATION

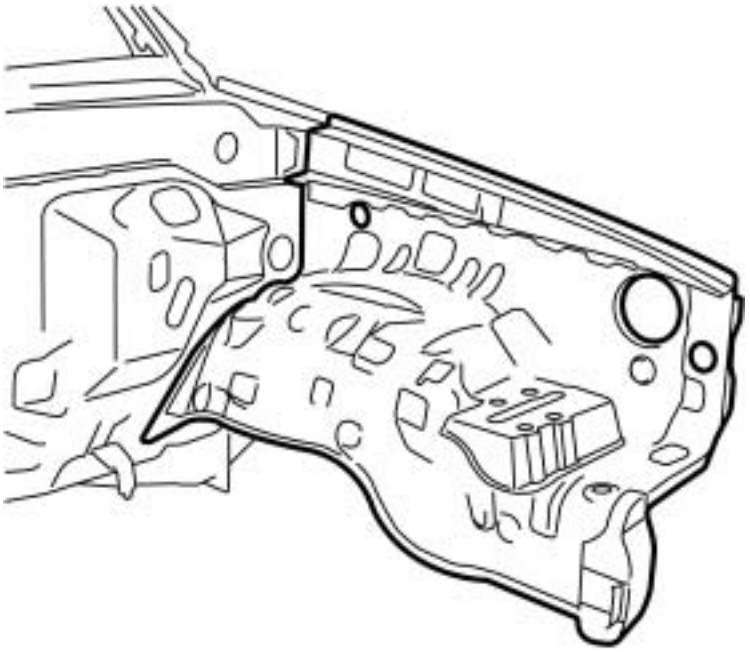

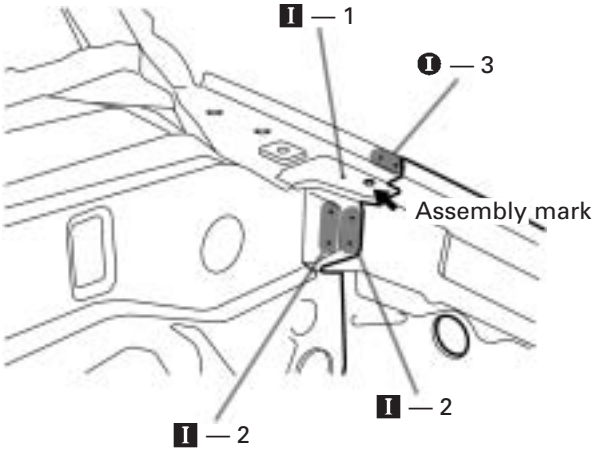

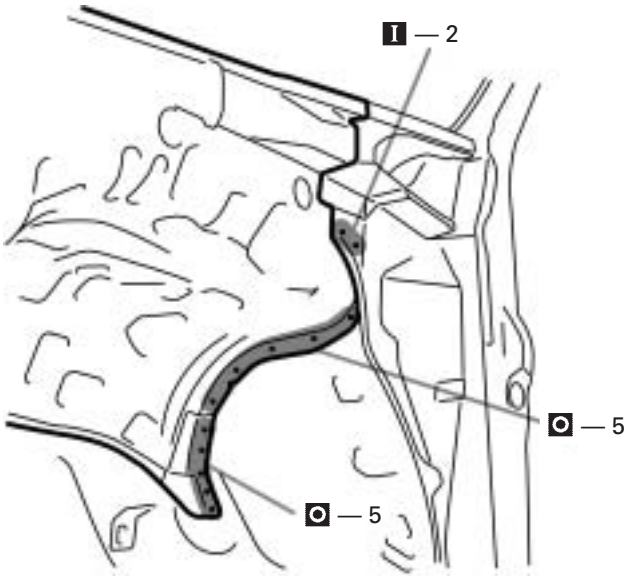

1. When temporarily installing the new parts, determine the installation position by the assembly mark.
2. Temporarily install the front fender and hood, and check the fit.