
FRONT DRIVE SHAFT

■ DESCRIPTION

A Rzeppa type CVJ (Constant Velocity Joint) is fitted on the wheel side and a tripod type CVJ is fitted on the differential side as in the previous model.

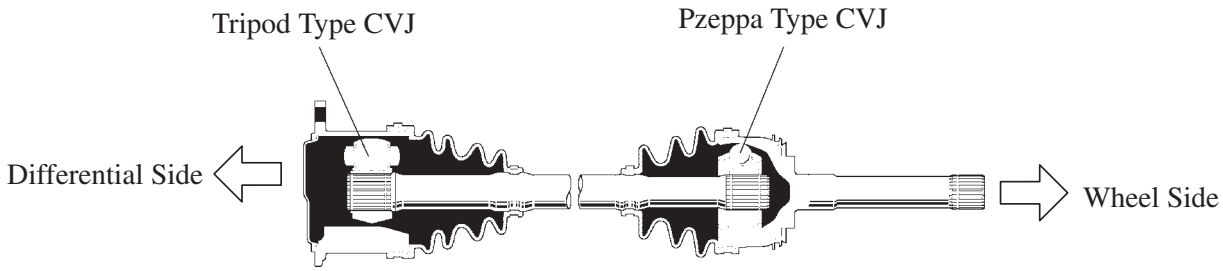


140CH13

AXLES

■ FRONT AXLE


The basic construction and operation of the front axle are the same as those of the previous model. However, the Prerunner uses the same type of front axle that is used on the 4WD model. And, the needle bearing is used on the 4WD model.

The 4WD model, free wheel hab is standard equipment on the models for Australia except models with A.D.D., and optional equipment on the models for Europe except models with A.D.D. and General Countries.

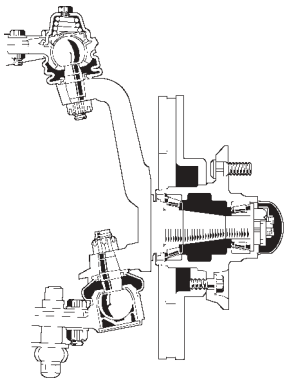

140CH40

2WD Model

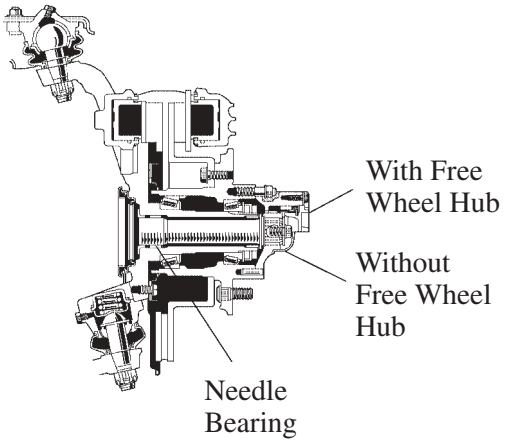

140CH39

4WD Model

CH