
ROOF DRIP SIDE FINISH MOULDING

COMPONENTS

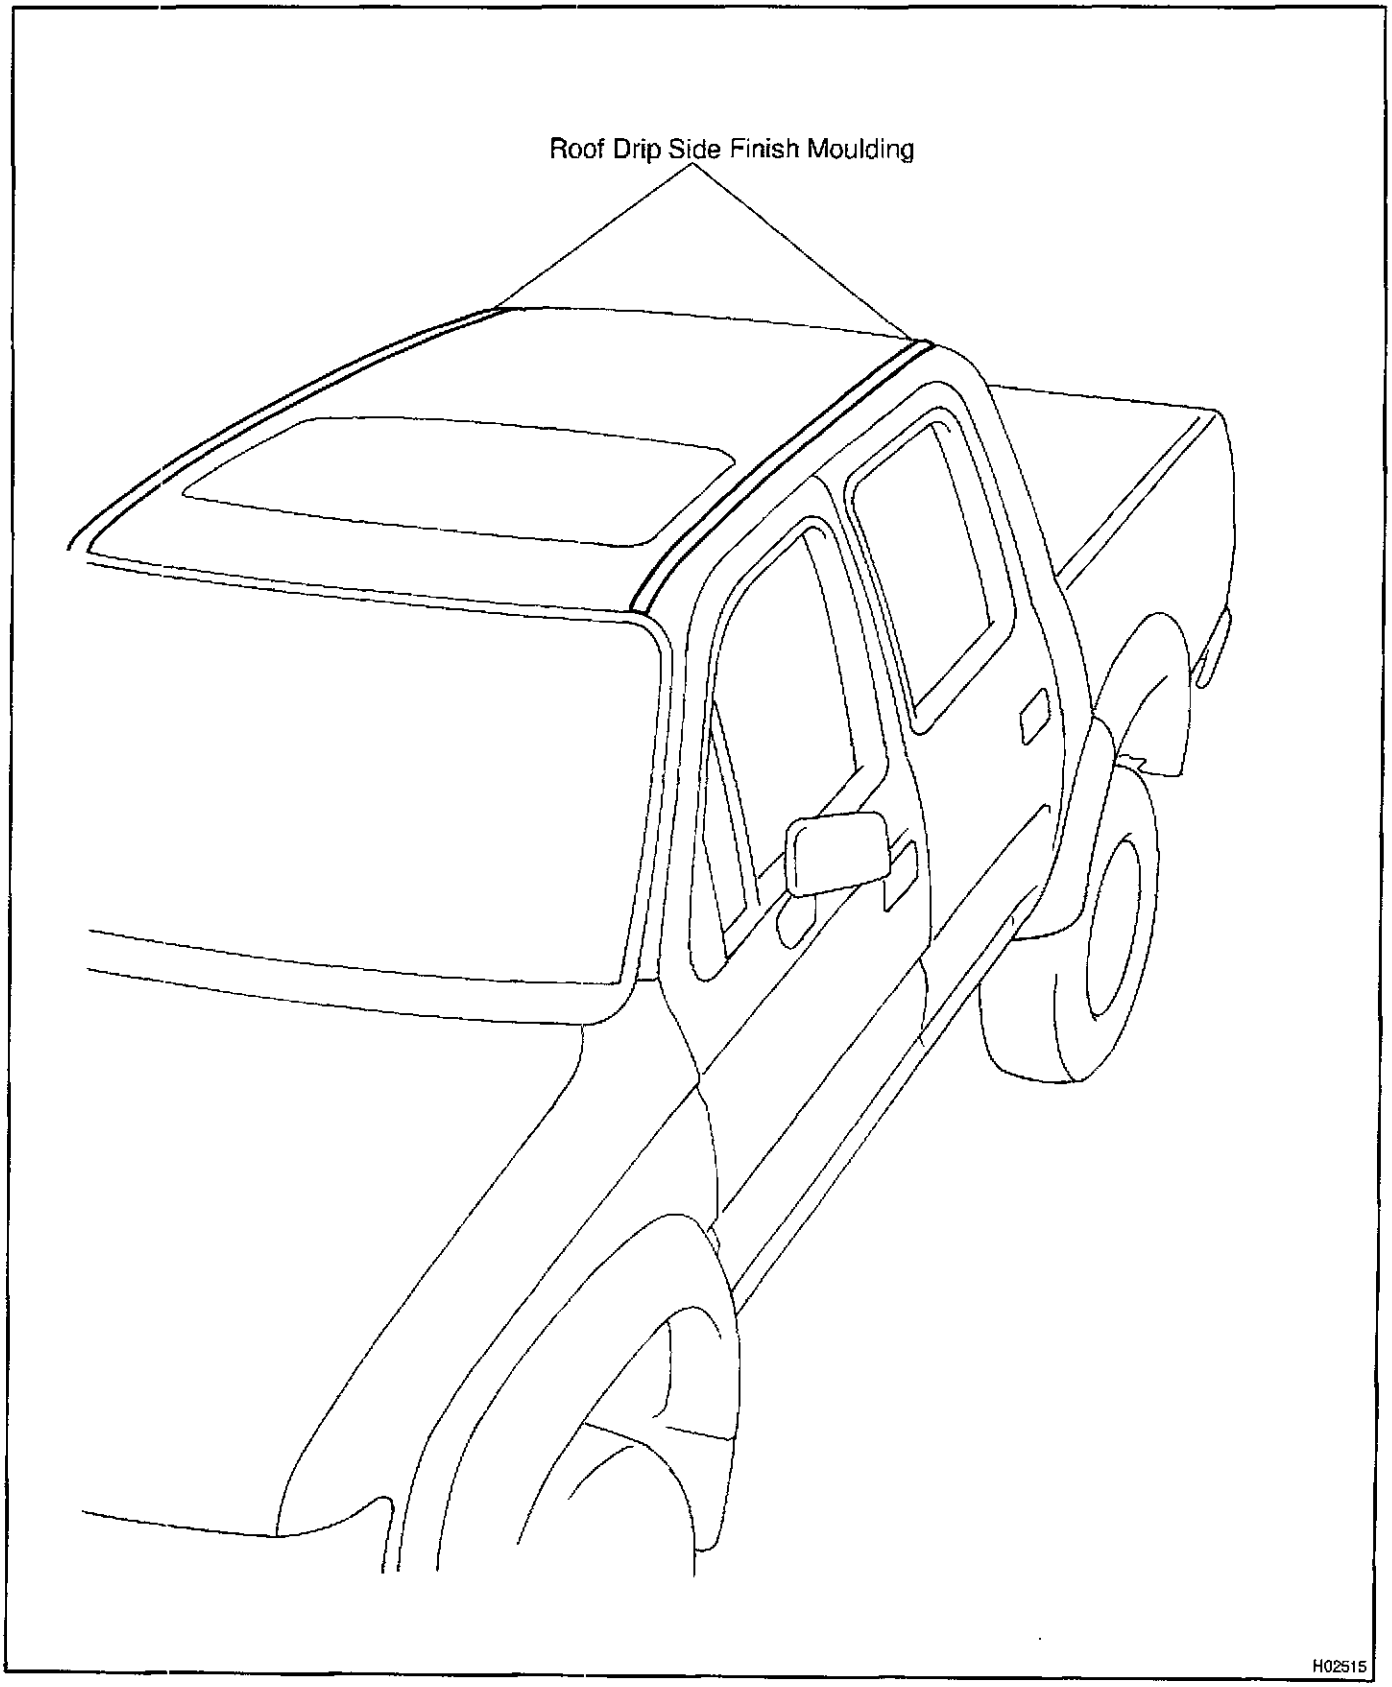

BO01M-01


REMOVAL

1. HEAT MOULDING

Using a heat light, heat the moulding to 40 ~ 60 °C (104 ~ 140 °F)

NOTICE:

Do not heat moulding excessively.

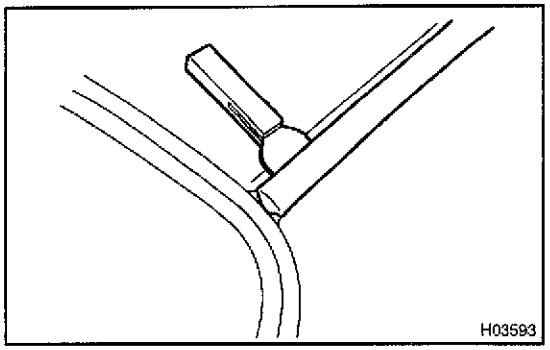


2. REMOVE END OF MOULDING

Using a scraper, pull off the moulding from the rear end.

HINT:

Tape the scraper tip before use.

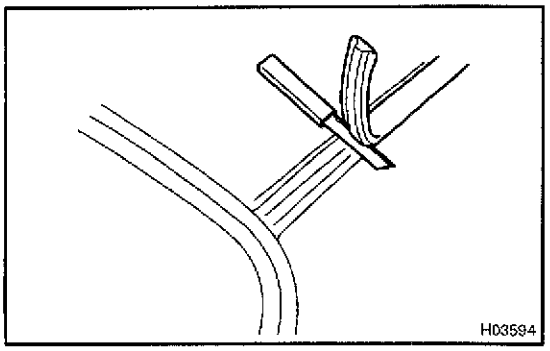

3. REMOVE MOULDING AND ADHESIVE

Pull off the moulding by cutting the adhesive with a knife.

NOTICE:

Do not damage the body with the knife.

BO0IN-01

INSTALLATION

1. CLEAN BODY MOUNTING SURFACE

(a) Using a heat light, heat the body mounting surface to 40 ~ 60 °C (104 ~ 140 °F).

NOTICE:

Do not heat the body excessively.

(b) Remove the adhesive tape from the body.

(c) Wipe off stains with cleaner.

2. If reusing moulding:

CLEAN MOULDING

(a) Using a heat light, heat the moulding to 20 ~ 30 °C (68 ~ 86 °F).


NOTICE:


Do not heat moulding excessively.

(b) Remove the adhesive tape from the moulding.

(c) Wipe off stains with cleaner.

(d) Apply new adhesive tape to the moulding as shown in the illustration.

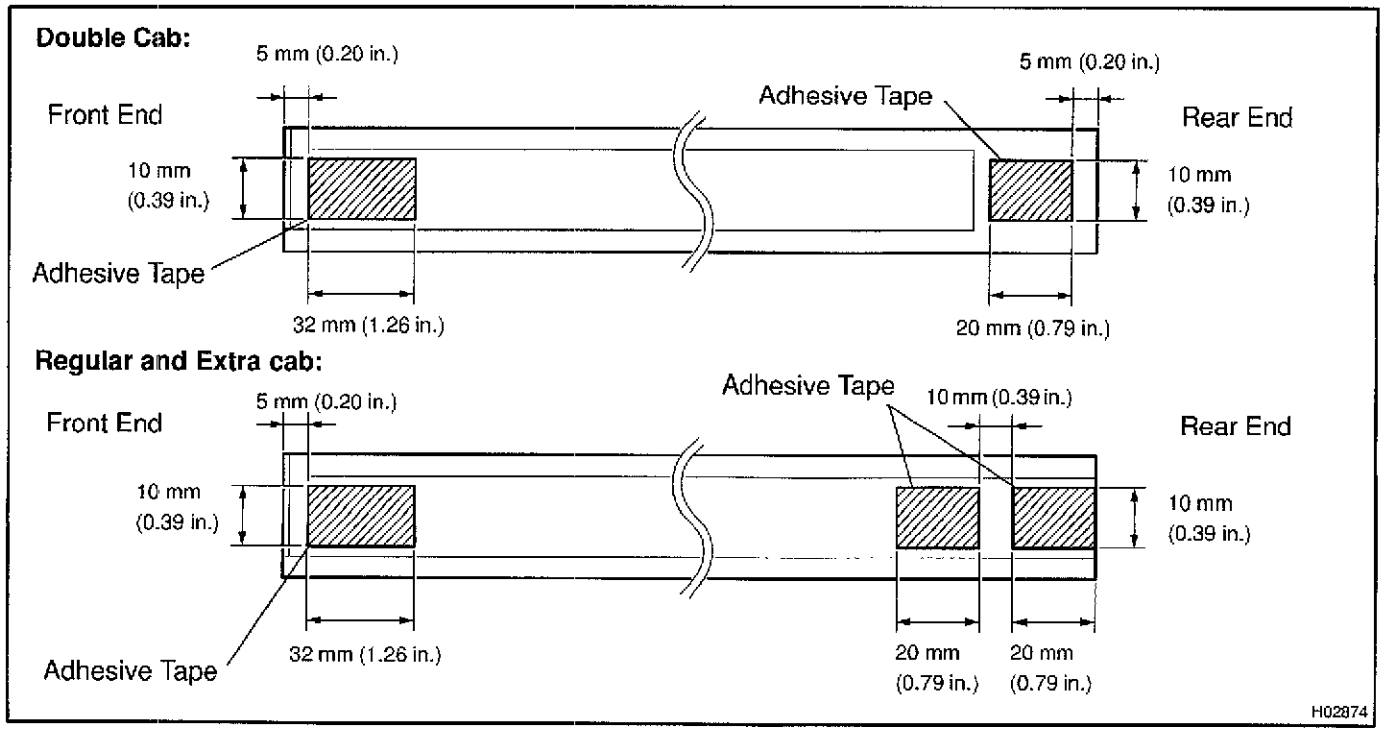

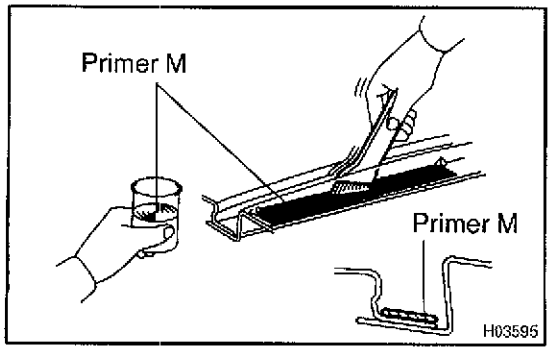


3. COAT CONTACT SURFACE OF BODY WITH PRIMER "M"

Using a brush, coat the contact surface on the body with Primer M.

NOTICE:

- **Let the primer coating dry for 3 minutes or more.**
- **Do not coat to the adhesive.**
- **Do not keep any of the opened Primer M for later use.**

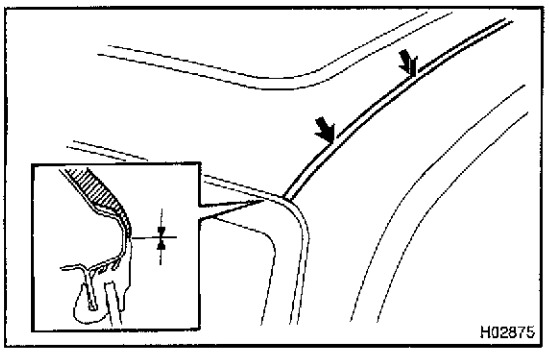

4. **INSTALL MOULDING**

(a) Using a heat light, heat the body and moulding.
Body: 40 ~ 60 °C (104 ~ 140 °F)
Moulding: 20 ~ 30 °C (68 ~ 86 °F)

NOTICE:

Do not heat moulding excessively.

(b) Lift the moulding release sheet from the face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.

(c) Push the moulding to the body, as shown in the illustration.

NOTICE:

- **Make sure that the body and moulding are heated to the proper temperature.**
- **Do not depress the adhesive coated parts excessively but just hold them down with your thumb.**
- **Scrape off any overflowing adhesive with a plastic spatula and clean the surface with a dry rag.**
- **After installation, do not wash the vehicle for 24 hours.**