

AC2FJ–01

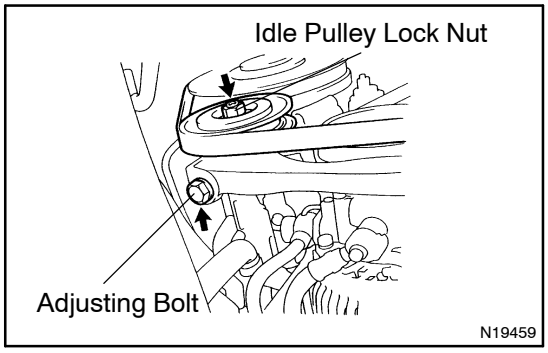

INSTALLATION


1. **TIGHTEN IDLE PULLEY LOCK NUT TEMPORARILY**
   Torque: 2.5 N·m (25 kgf·cm, 22 in.·lbf)
2. **INSTALL DRIVE BELT**
3. **APPLY DRIVE BELT TENSION BY TURNING ADJUSTING BOLT CLOCKWISE**
   Drive belt tension:
   New belt: 372 – 608 N (38 – 62 kgf)
   Used belt: 196 – 392 N (20 – 40 kgf)
4. **TIGHTEN IDLE PULLEY LOCK NUT**
   Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

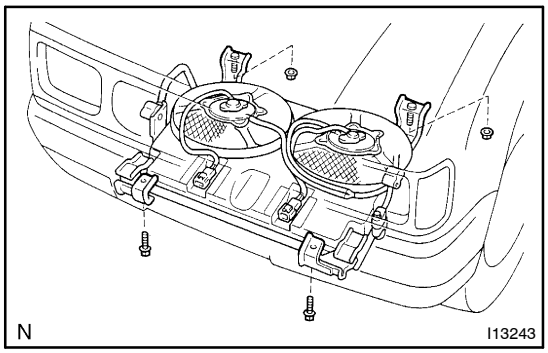

5. **INSTALL CONDENSER**

(a) Install the 2 condenser set bolts.
Torque:
Nut: 12.7 N·m (130 kgf·cm, 9 ft·lbf)
Bolt: 19 N·m (194 kgf·cm, 14 ft·lbf)

(b) Connect the 2 condenser fan connector.

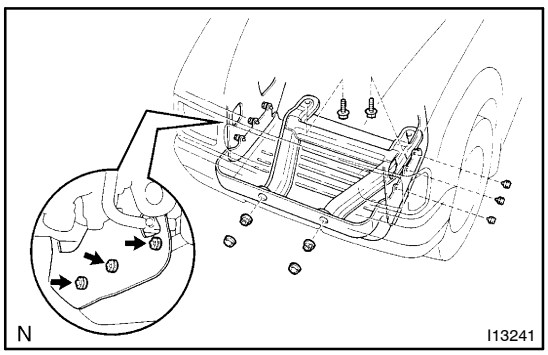

6. **INSTALL UNDER COVER**

(a) Install the under cover with 2 bolts and 2 nuts.
Torque: 29 N·m (296 kgf·cm, 21 ft·lbf)

(b) Install the 6 clips.