

CO0NL–02

INSTALLATION

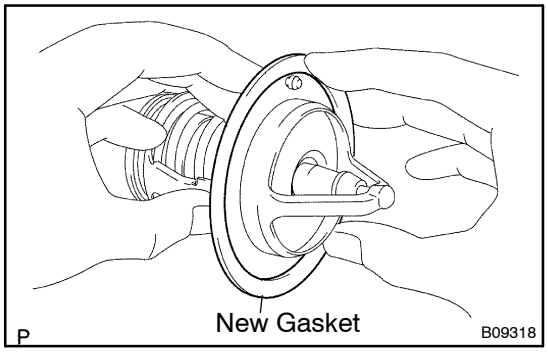

1. PLACE THERMOSTAT IN CYLINDER BLOCK


(a) Install a new gasket to the thermostat.

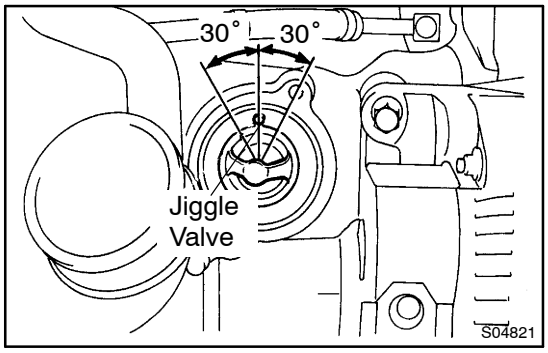

(b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

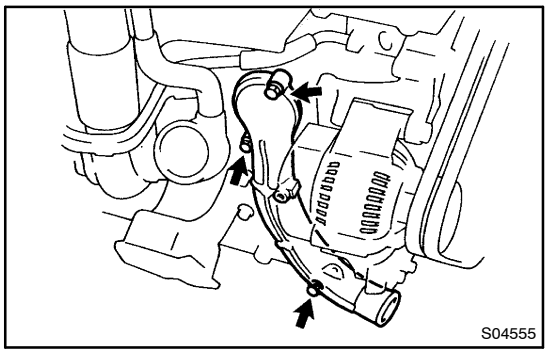

2. INSTALL WATER INLET TO CYLINDER BLOCK

Install the water inlet with the 3 bolts.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

NOTICE:

Torque the 2 upper bolts first.

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR COOLANT LEAKS