

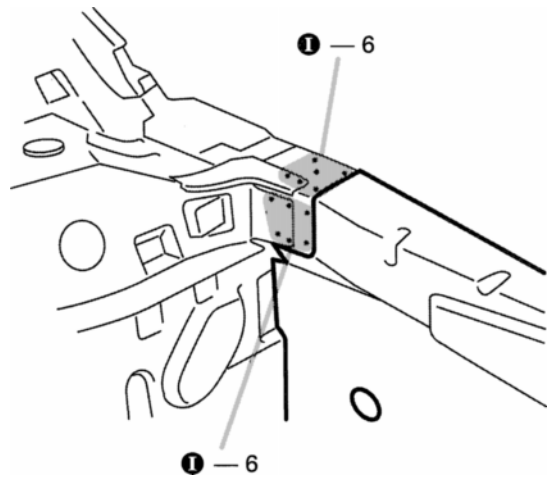
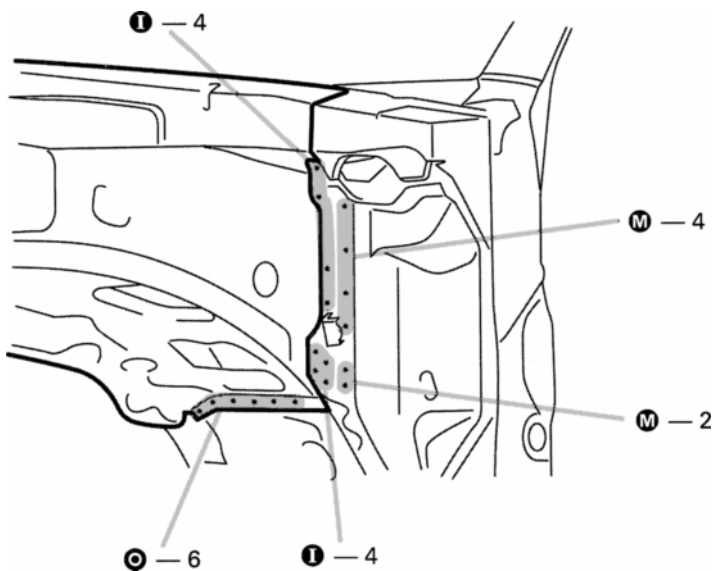
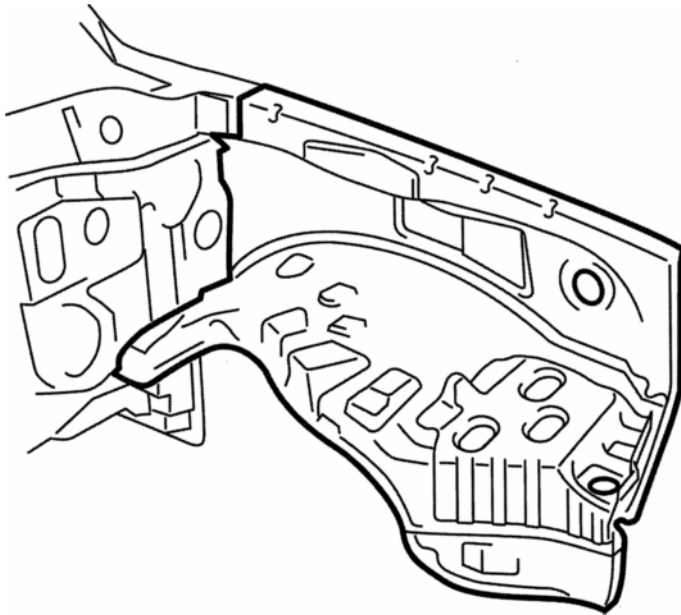


FRONT FENDER APRON (ASSY)

REMOVAL (With the radiator support, cowl top side panel removed.)

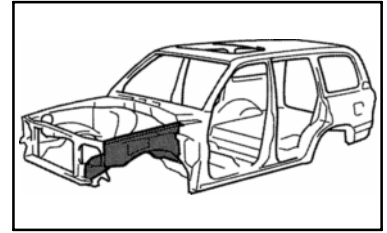

INSTALLATION

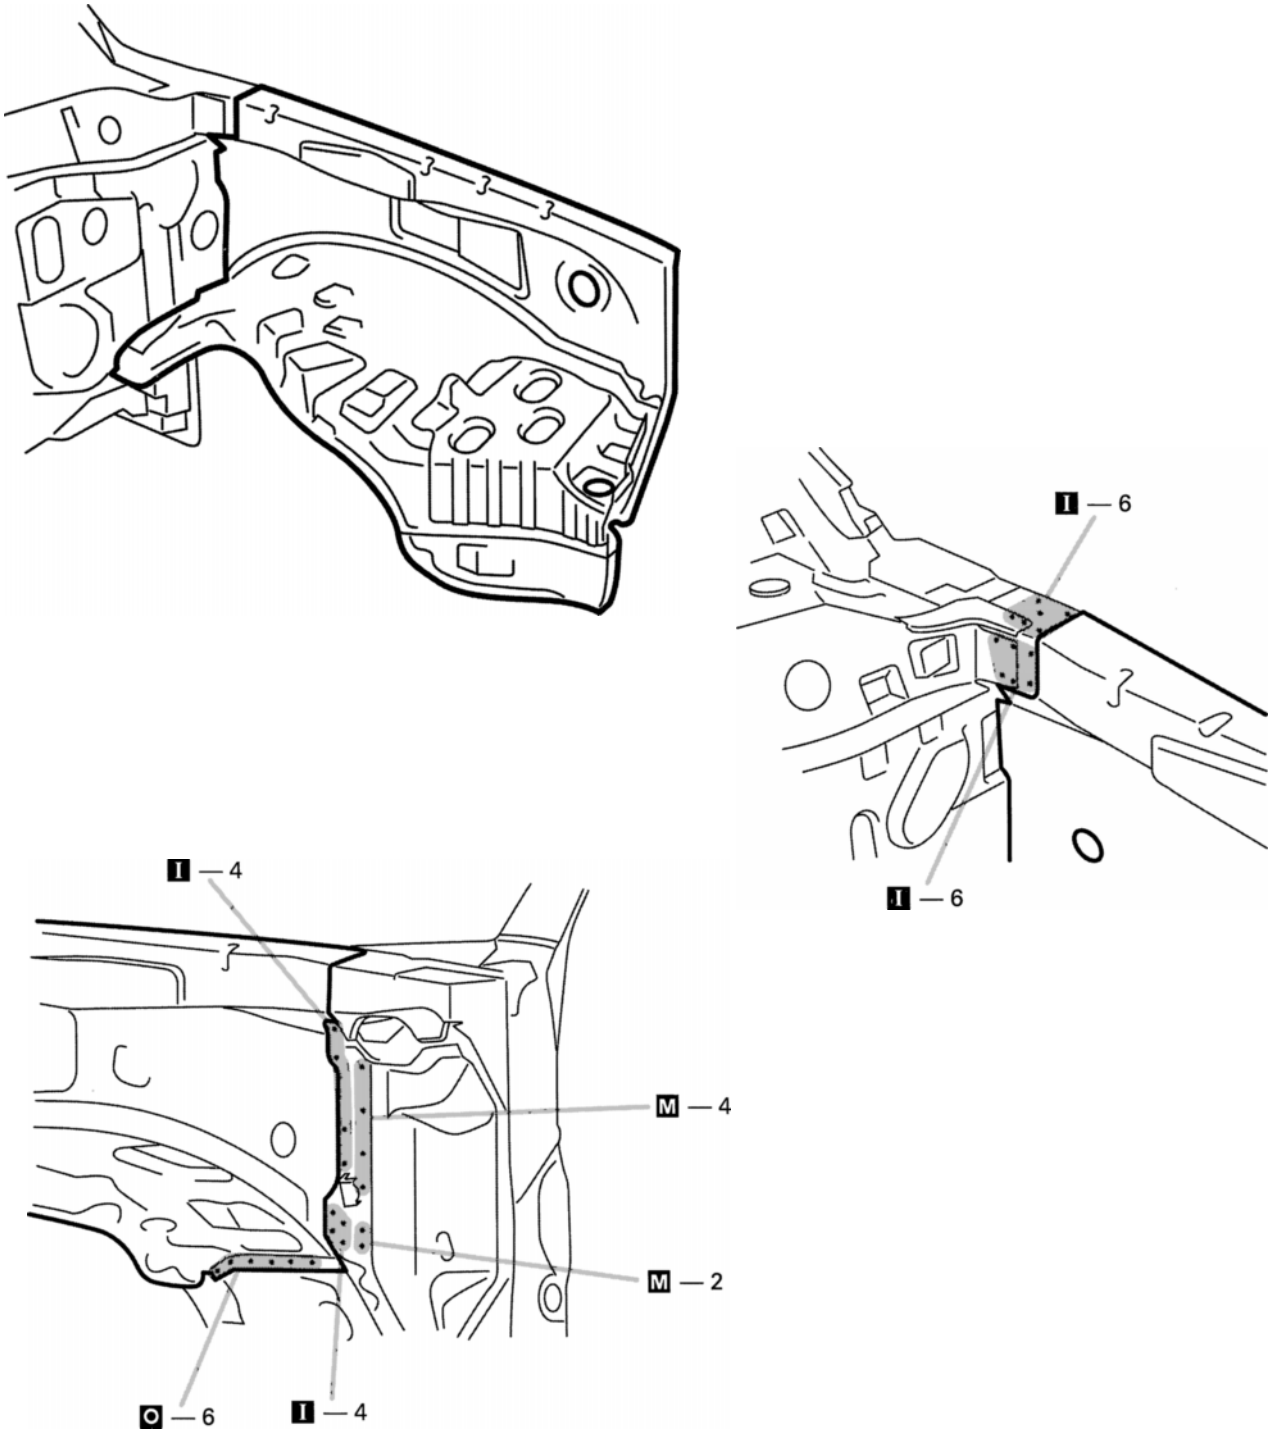

1. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.
2. Temporarily install the front fender and hood, and check the fit.

-MEMO-