


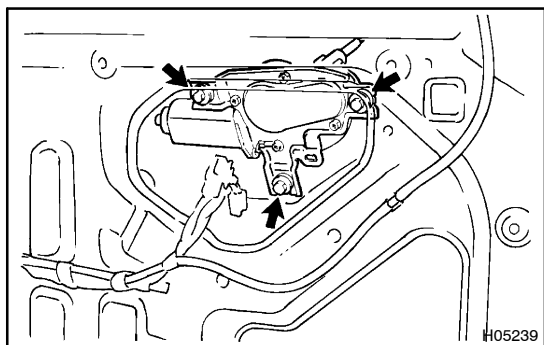

INSTALLATION

1. INSTALL REAR WIPER MOTOR


- (a) Install the rear wiper motor with 3 bolts.
- (b) Connect the connector.

2. INSTALL THESE PARTS:

- (a) Service hole cover
- (b) Back door trim
- (c) Back door garnish
- (d) w/ High-Mount Stop Light:
High-mount stop light

3. INSTALL REAR WIPER ARM

- (a) Operate the wiper once and turn the wiper switch OFF.
- (b) Install the grommet, wiper arm and tighten nut by hand.
- (c) Operate the wiper once and turn the wiper switch OFF.

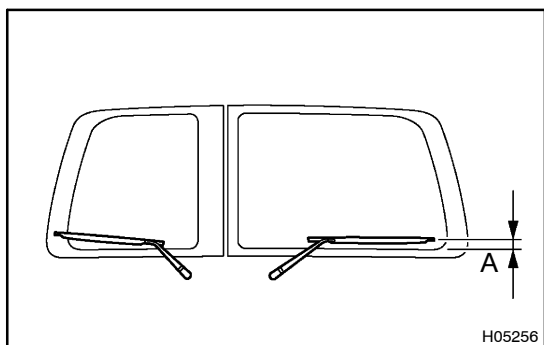

- (d) Adjust the installation position of the wiper arm to the position shown the illustration.

A: 38 ± 10 mm (1.59 ± 0.39 in.)

- (e) Torque the nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (f) Close the cover.

4. w/ Spare Wheel Carrier: INSTALL SPARE WHEEL