


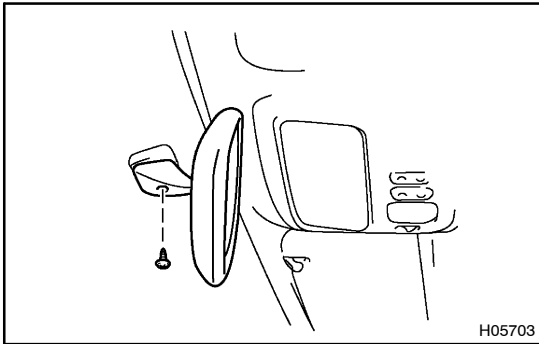

REMOVAL

1. REMOVE THESE PARTS:

(See page BO-137)

- (a) Front door opening trims
- (b) Front pillar garnishes
- (c) Sun visors
- (d) Double visors
- (e) Holder
- (f) Overhead console box
- (g) Inner rear view mirror

2. REMOVE WIPER ARM AND COWL TOP VENTILATOR LOUVER

(See page BO-51)


3. REMOVE OUTSIDE MOULDING

- (a) Using a screwdriver, remove the outside No.2 moulding.

HINT:

Tape the screwdriver tip before use.

- (b) Using a drill of less than $\varnothing$ 4 mm (0.16 in.).

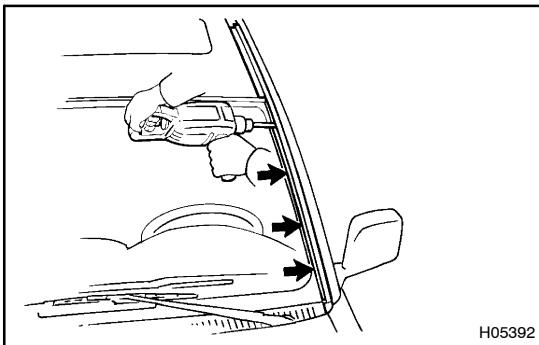

- (c) Gently and vertically put the drill to the rivet, and cut the rivet flanges.


NOTICE:

- **Prizing the hole with a drill can lead to damage to the rivet hole or breaking the drill.**
- **Take care as the cut rivet is hot.**
- (d) Even if flange is taken off, continue drilling and push out remaining fragments with the drill.
- (e) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

- (f) Tie both piano wire ends to a wooden block or a similar object.

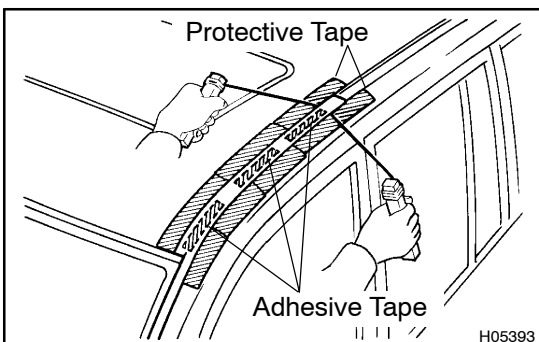

- (g) Cut the adhesive tape by pulling the piano wire as shown.


NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
- **Do not damage the body.**

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.


- (h) Remove the moulding.

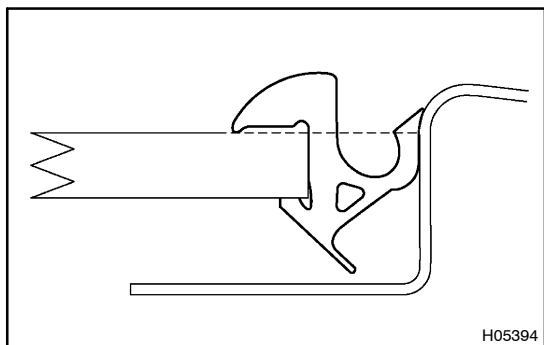**4. REMOVE OUTSIDE UPPER MOULDING**

Using a knife, cut off the moulding as shown.

NOTICE:

Do not damage the body with the knife.

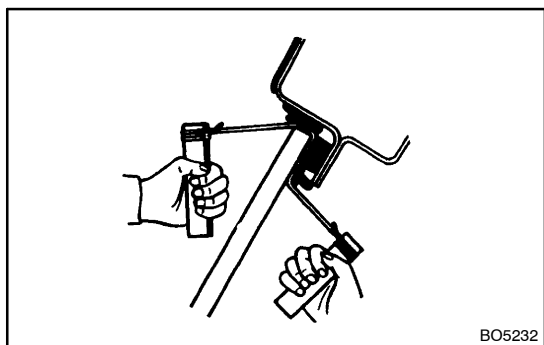
**5. REMOVE WINDSHIELD GLASS**

(a) Push piano wire through between the body and glass from the interior.

(b) Tie both wire ends to a wooden block or a similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

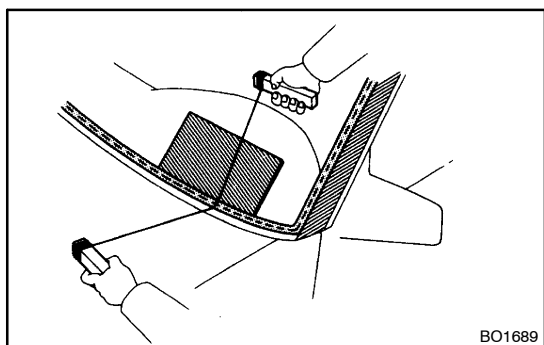**NOTICE:**

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

(c) Cut the adhesive by pulling the piano wire around it.

(d) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting the glass.