


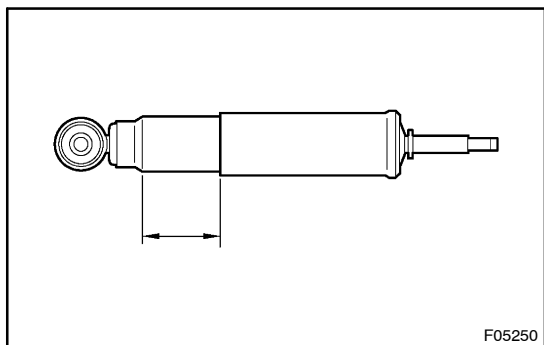

DISPOSAL

w/o AHC System:

DISCARD SHOCK ABSORBER

Before discarding the shock absorber, drill a hole of 2 – 3 mm (0.079 – 0.118 in.) in diameter at the location shown in the illustration to discharge the gas inside.

CAUTION:

- **When drilling, chips may fly out, work carefully.**
- **The gas is colorless, odorless and non-poisonous.**