


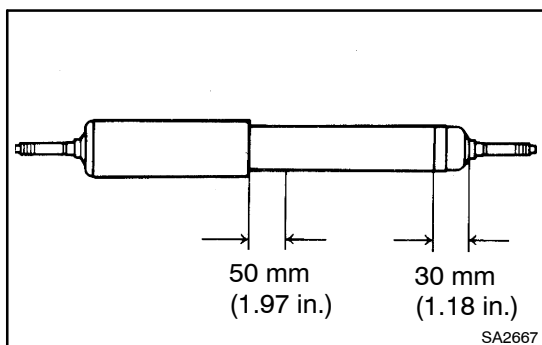

DISPOSAL

1. FULLY EXTEND SHOCK ABSORBER ROD
2. DRILL HOLE TO DISCHARGE GAS FROM CYLINDER

Using a drill, make a hole on the top of the shell as shown to discharge the gas inside.

CAUTION:

The gas coming out is harmless, but be careful of chips which may fly up when drilling.