


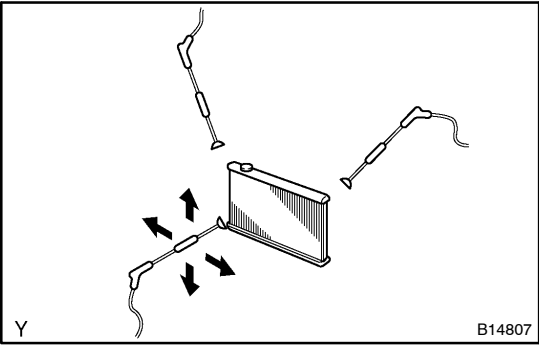

# RADIATOR

## ON-VEHICLE CLEANING

CO1B0-01

### INSPECT FINS FOR BLOCKAGE

If fins are clogged, wash them with water or a steam cleaner and dry with compressed air.

**NOTICE:**

- If the distance between the steam cleaner and the core is too close, there is a possibility of damaging the fin, so keep the following injection distance.

| Injection Pressure                                                  | Injection Distance |
|---------------------------------------------------------------------|--------------------|
| 2,942 – 4,903 kpa<br>(30 – 50 kg/cm <sup>2</sup> , 427 – 711 psi)   | 300 mm (11.811 in) |
| 4,903 – 7,845 kpa<br>(50 – 80 kg/cm <sup>2</sup> , 711 – 1,138 psi) | 500 mm (19.685 in) |

- If the fins are bent, straighten them with a screwdriver or pliers.
- Never apply water directly onto the electronic components.