



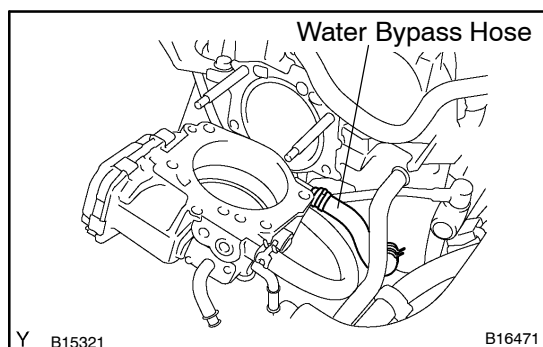

INSTALLATION

1. INSTALL THROTTLE BODY

- (a) Connect the water bypass hose to the manifold thermostat on the throttle body.

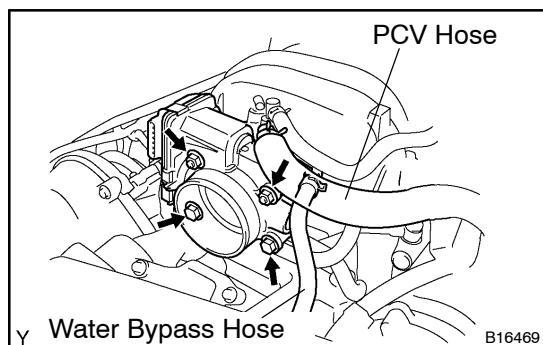

- (b) Install a new gasket and the throttle body with the 2 bolts and the 2 nuts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (c) Connect the water bypass hose and the PCV hose to the throttle body.
- (d) Connect the throttle control connector.

2. INSTALL INTAKE AIR CONNECTOR

3. FILL WITH ENGINE COOLANT (See page [CO-2](#))

4. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS

5. INSTALL V-BANK COVER