

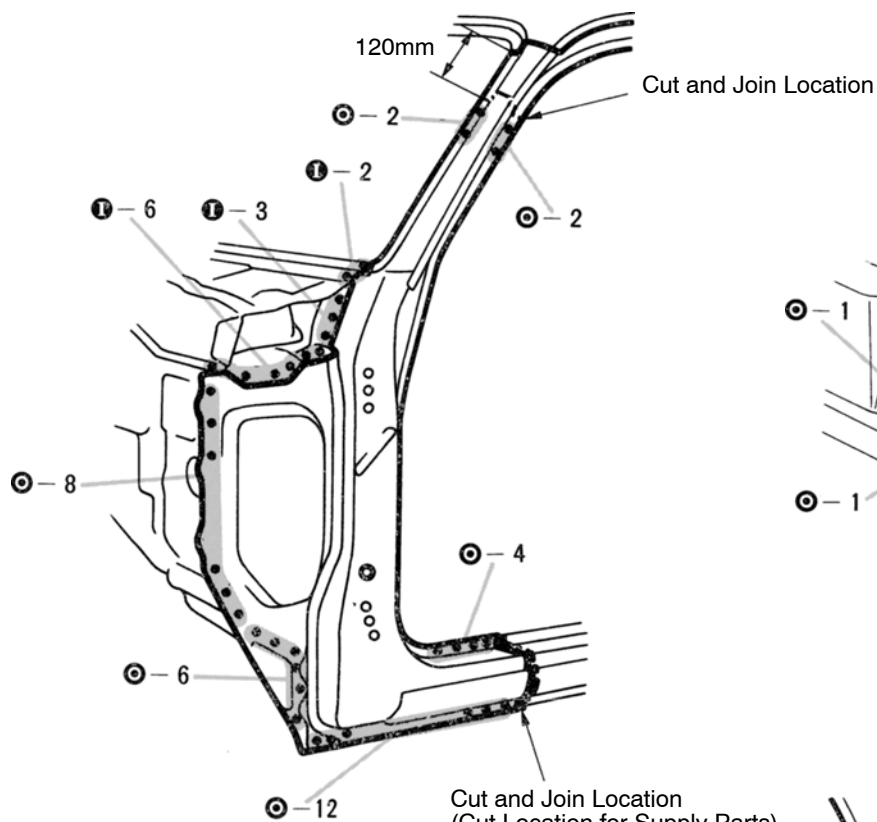
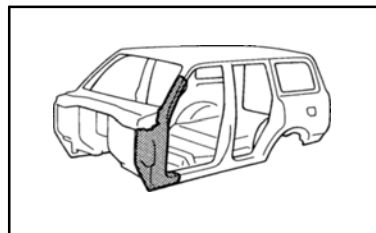


FRONT BODY PILLAR (CUT)


REMOVAL

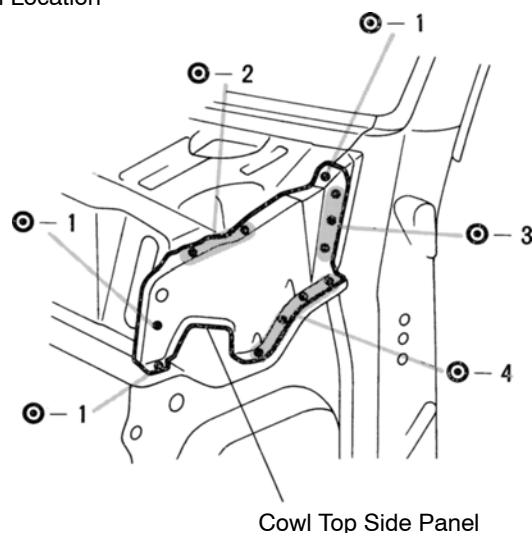

[Cut and Join Location]

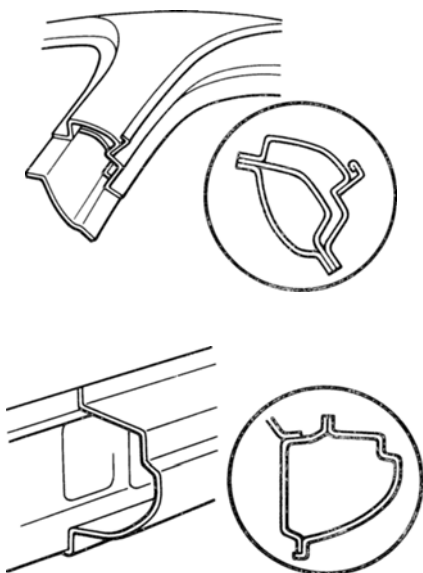



Cut with disc sander etc.

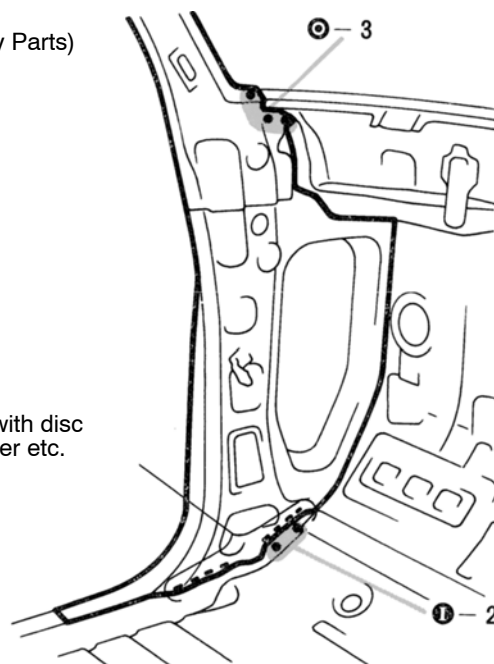





mm	in
120	4.72

1. Cut and join the parts at the locations shown above.
2. After removing the cowl top side panel remove the front body pillar.

INSTALLATION (Continued on Next Page)

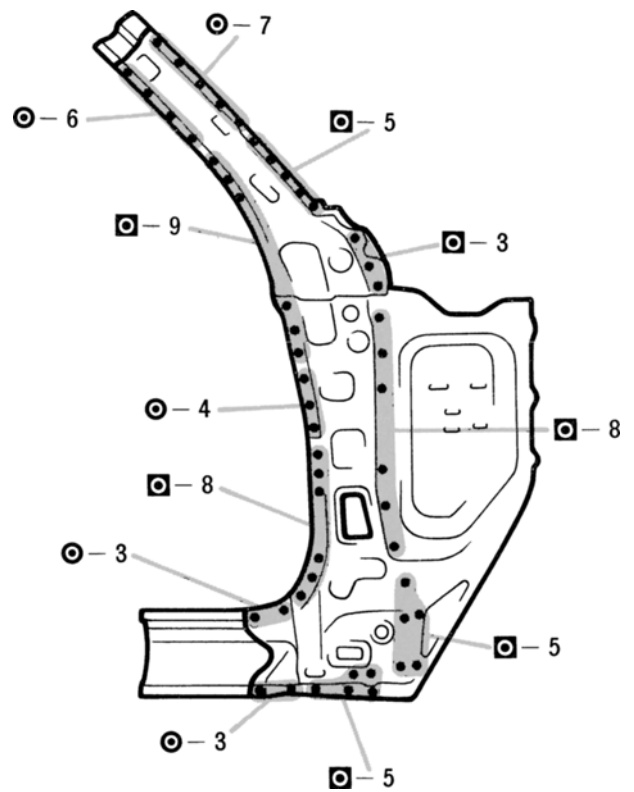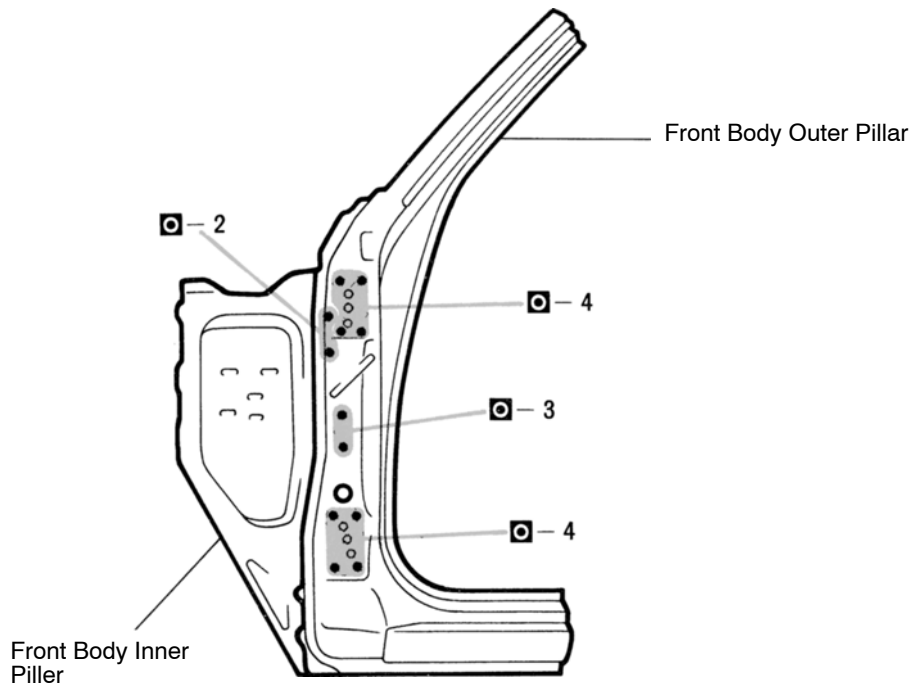

INSTALLATION (Cont'd)

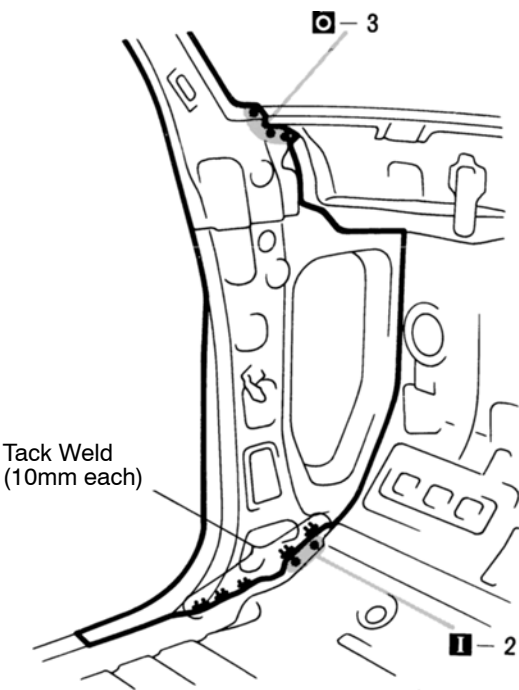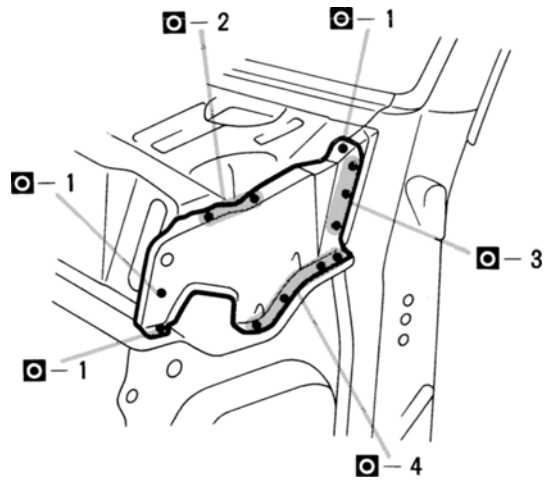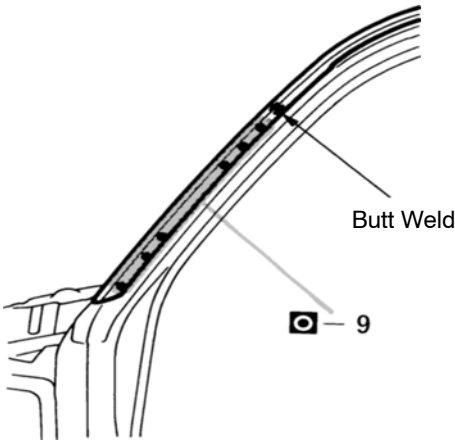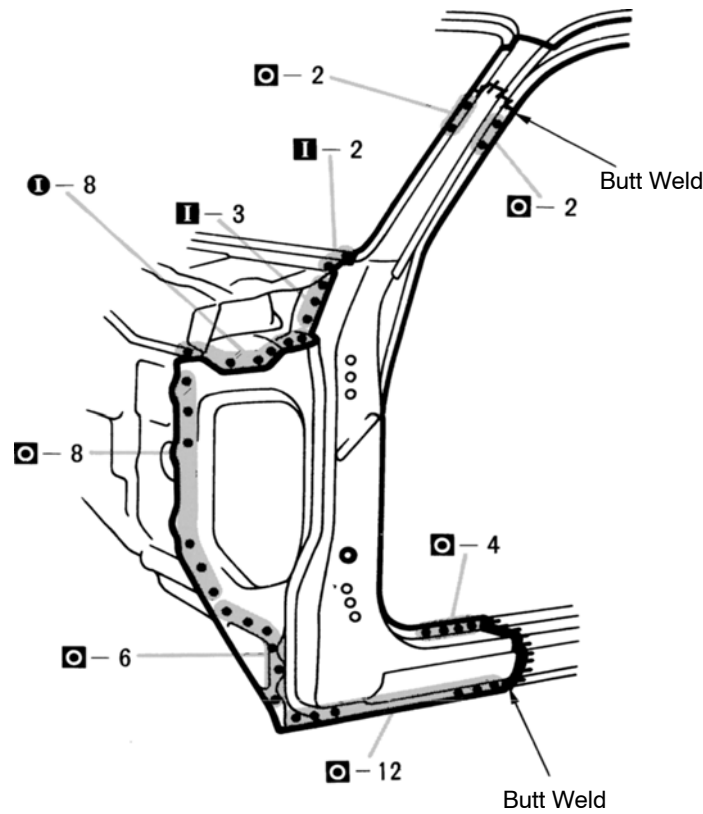

mm	in
10	0.39

