
260BJ–01

DISPOSAL

HINT:

Dispose of the RH side by the same procedures with the LH side.

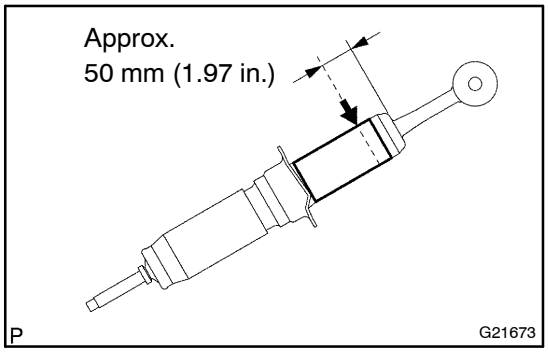

1. DISPOSE OF SHOCK ABSORBER ASSY FRONT LH

(a) Fully extend the shock absorber piston rod, and fix it at a tilt in a vise or similar tool.

(b) Using a drill or similar tool, slowly make a hole at approx. 50 mm (1.97 in.) from the top end of the shock absorber, and discharge the gas inside of it.

CAUTION:

- **The gas is colorless, odorless and harmless.**
- **Since the discharged gas may cause chips to fly off, cover the drill with a shop rag when making a hole.**