
270B2–01

DISPOSAL

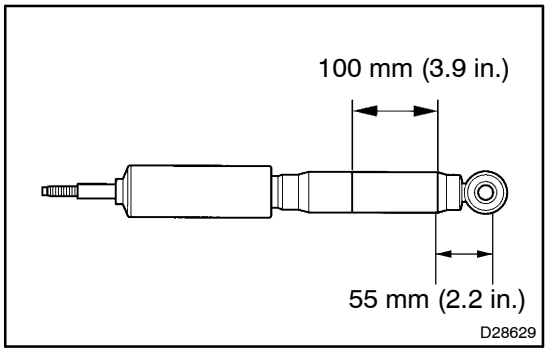

1. DISPOSE OF SHOCK ABSORBER ASSY REAR LH

(a) Fully extend the shock absorber rod.

(b) Using a drill, make a hole in the cylinder as shown in the illustration to discharge the gas inside.

CAUTION:

- **When drilling, chips may fly out and so, work carefully.**
- **The gas is colorless, odorless and non–poisonous.**