
LOW PITCHED HORN ASSY

69068–01

REPLACEMENT

1. REMOVE LOW PITCHED HORN ASSY

(a) Disconnect the connector.
(b) Remove the bolt and horn.

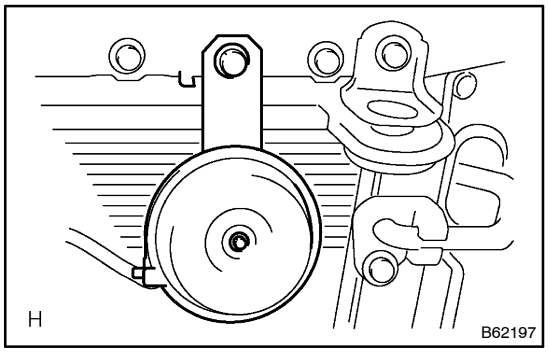

2. INSTALL LOW PITCHED HORN ASSY

(a) Place the stay onto the baffle part in the radiator support upper, and then install the horn with the bolt.
Torque: 20 N·m (199 kgf·cm, 15 ft·lbf)
(b) Connect the connector.