
HIGH PITCHED HORN ASSY

69067–01

REPLACEMENT

1. REMOVE HIGH PITCHED HORN ASSY

(a) Disconnect the connector.
(b) Remove the bolt and horn.

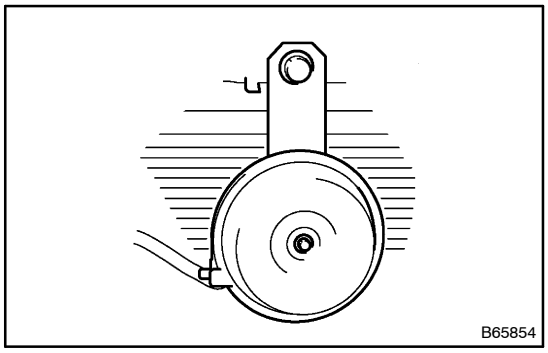

2. INSTALL HIGH PITCHED HORN ASSY

(a) Place the stay onto the baffle part in the radiator support upper, and then install the horn with the bolt.
Torque: 20 N·m (199 kgf·cm, 15 ft·lbf)
(b) Connect the connector.