
760PR-01


REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.

1. REMOVE BACK DOOR LINK SUB-ASSY LOWER

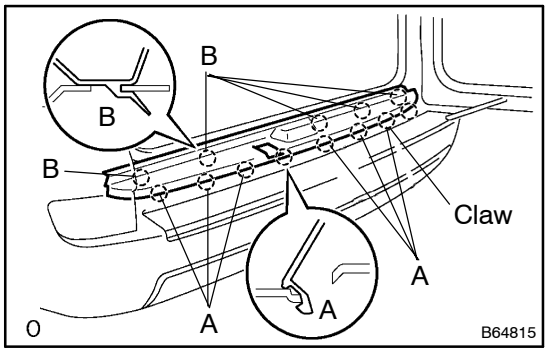

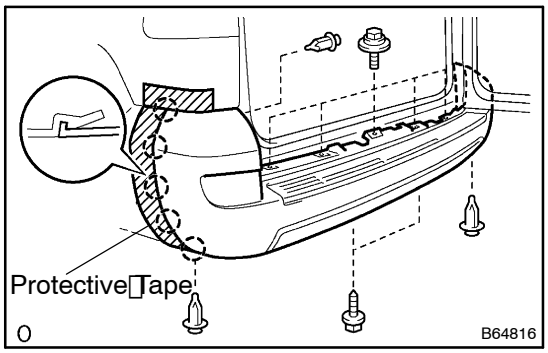

2. REMOVE REAR BUMPER PIECE

(a) Using a screwdriver, disengage the claws and remove the hole cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the bolt and back door stay.

(c) Using a screwdriver, disengage the 12 claws and remove the bumper piece.

HINT:

Tape the screwdriver tip before use.

3. REMOVE REAR BUMPER COVER

(a) Put protective tape under the quarter panel and quarter outside moulding.

(b) w/ Fog Lamp:
Disconnect the fog lamp connector.

(c) Remove the 7 bolts.

(d) Disengage the 10 claws and remove the 3 clips and bumper cover.

4. REMOVE REAR BUMPER ENERGY ABSORBER

5. REMOVE REAR BUMPER REINFORCEMENT NO.1

(a) Remove the 3 bolts and bumper reinforcement.

6. REMOVE REAR BUMPER REINFORCEMENT NO.2

(a) Remove the 3 bolts and bumper reinforcement.

7. REMOVE REFLEX REFLECTOR ASSY LH (W/O REAR FOG LAMP)

8. REMOVE REFLEX REFLECTOR ASSY RH (W/O REAR FOG LAMP)

9. REMOVE REAR LAMP ASSY LH (W/ REAR FOG LAMP) **(See page 65-20)**

10. REMOVE REAR LAMP ASSY RH (W/ REAR FOG LAMP) **(See page 65-20)**

11. INSTALL REAR BUMPER REINFORCEMENT NO.1

12. INSTALL REAR BUMPER REINFORCEMENT NO.2

13. INSTALL BACK DOOR LINK SUB-ASSY LOWER