
CAB MOUNTING NO. 1 BRACKET (ASSY)

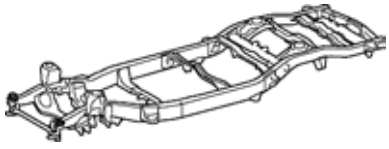

F29265A


With the frame side rail plate removed.


Symbol meaning


: Cut with Disc Sander etc.

F29265B

REMOVAL

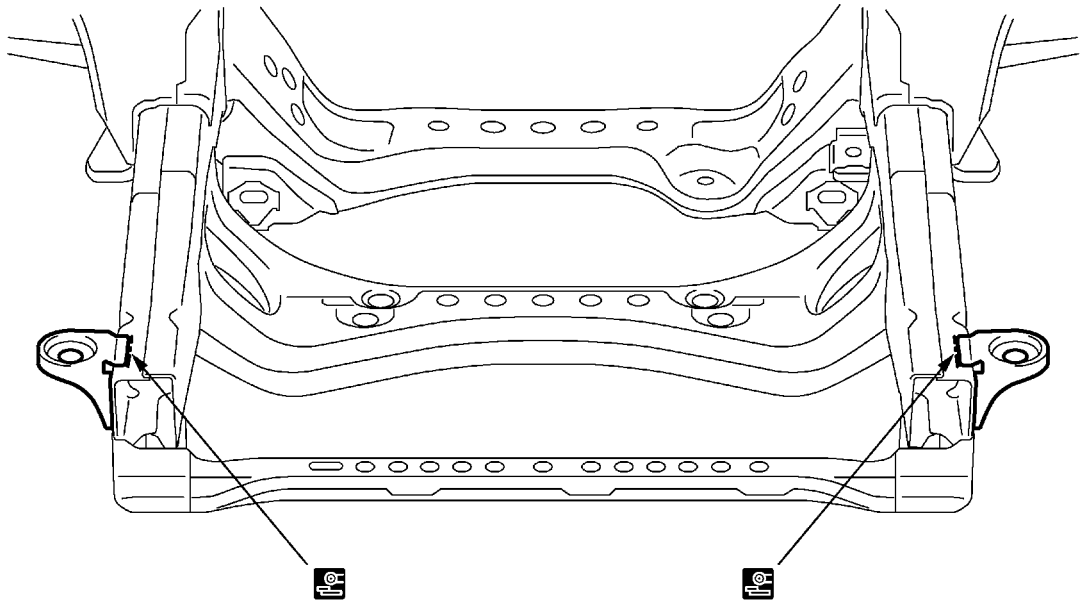

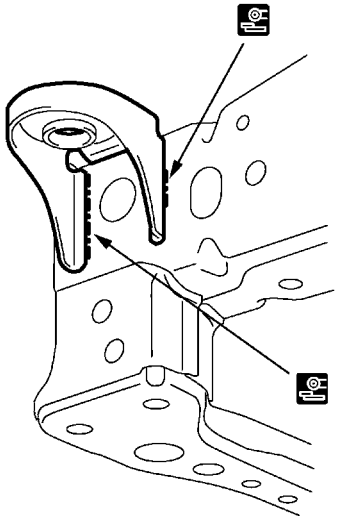

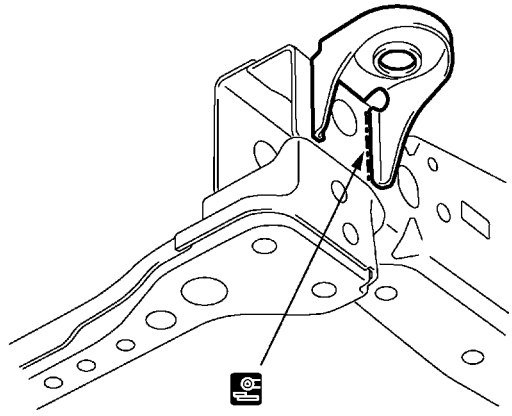


F29265

Symbol meaning

: Fillet Weld

F29266B

INSTALLATION

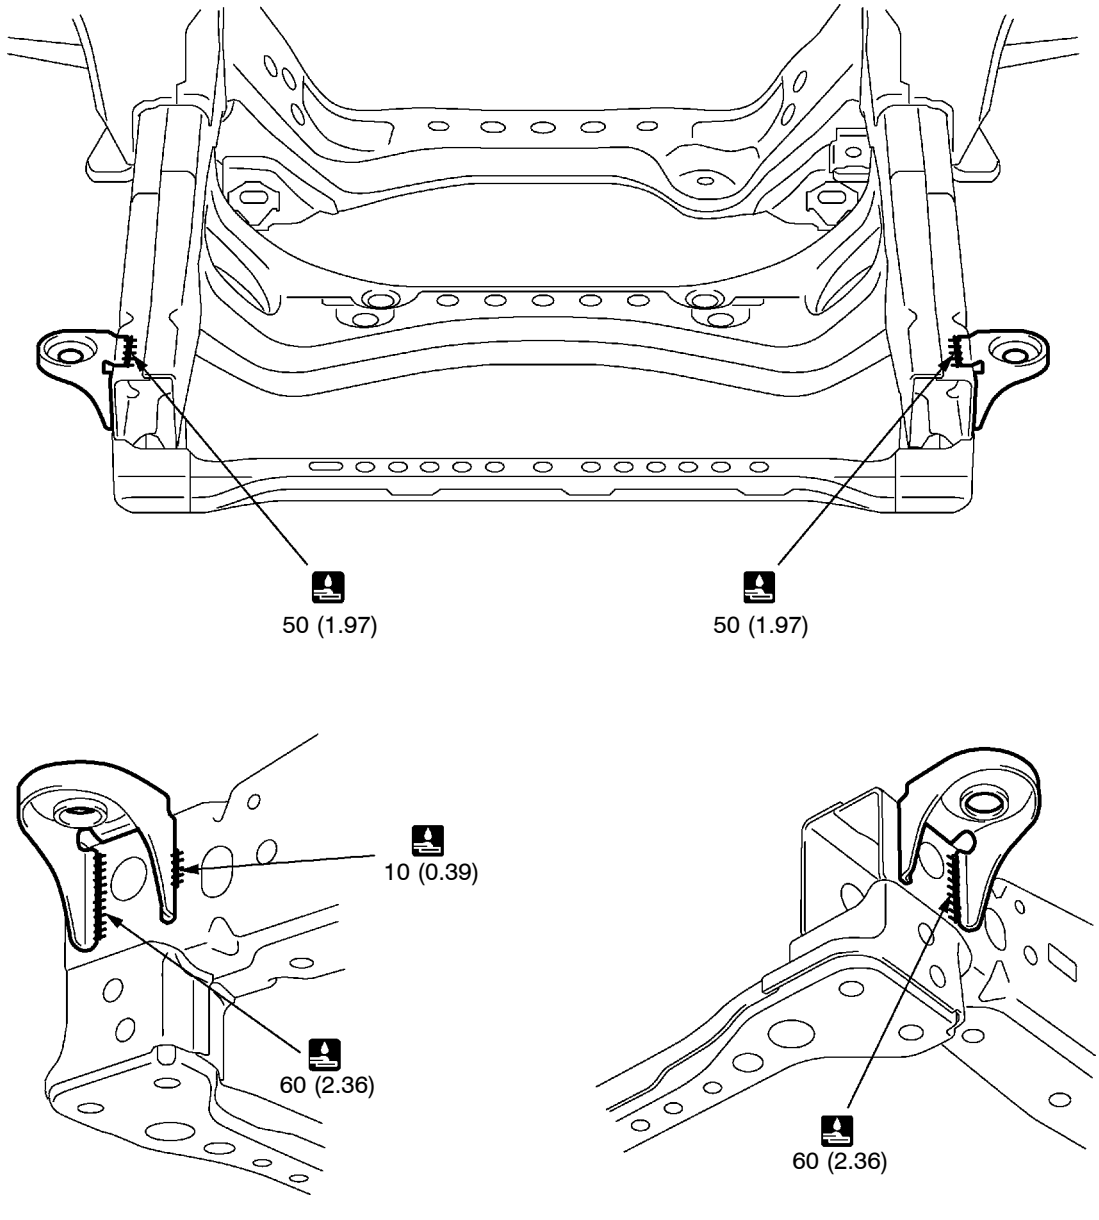

mm (in.)

F29266

INSTALLATION POINT

1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
2 Before installing the cab mounting No. 1 brackets, set the cab (upper body) on the vehicle frame and confirm the cab mounting No. 1 brackets' installation positions.
3 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.