
NAME PLATE APPLICATION PROCEDURE

1 Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
HINT:
Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.

2 Wipe off the remaining double-sided tape using a clean cloth or equivalent.
HINT:
If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.


3 After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
HINT:
The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.

[USA, Canada]

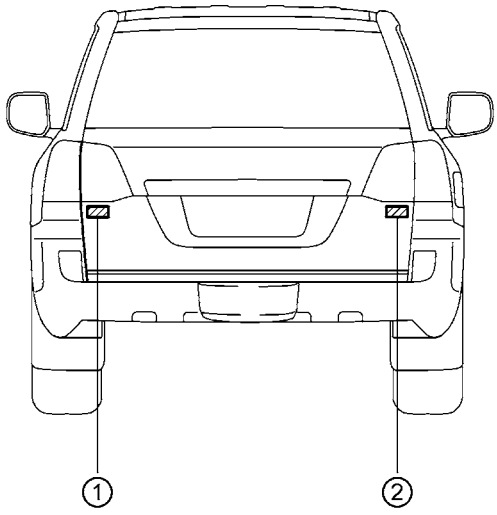

① REAR NO. 3 BODY NAME PLATE


② NO. 5 BACK DOOR NAME PLATE

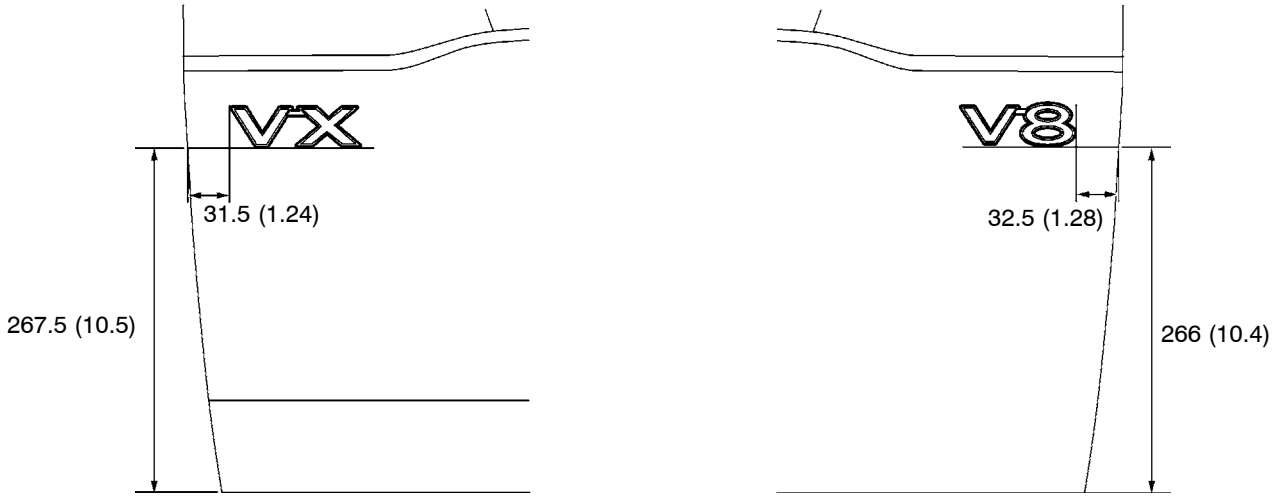


mm (in.)

F29295


[Except USA, Canada]
for Type A:

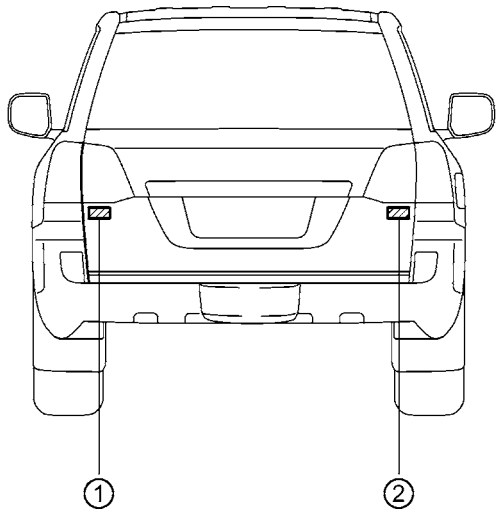


① REAR NO. 3 BODY NAME PLATE

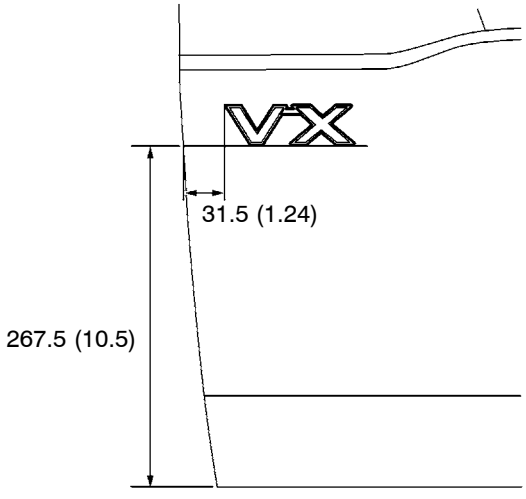

② NO. 5 BACK DOOR NAME PLATE

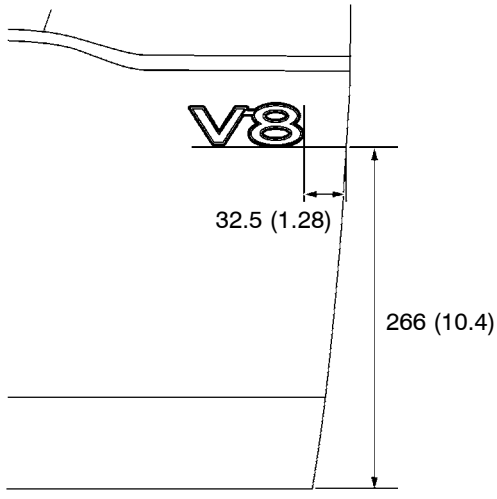


① REAR NO. 3 BODY NAME PLATE

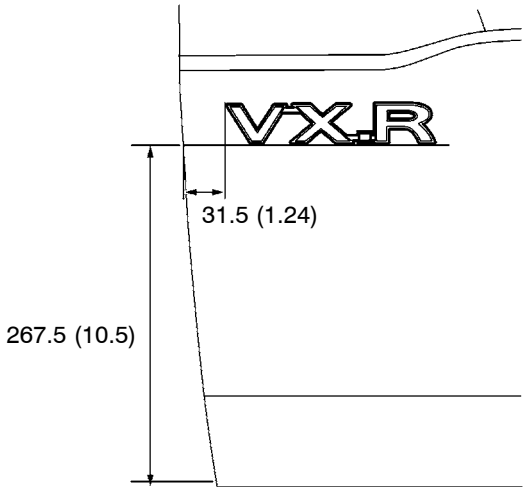


mm (in.)

F29296


[Except USA, Canada]
for Type B:

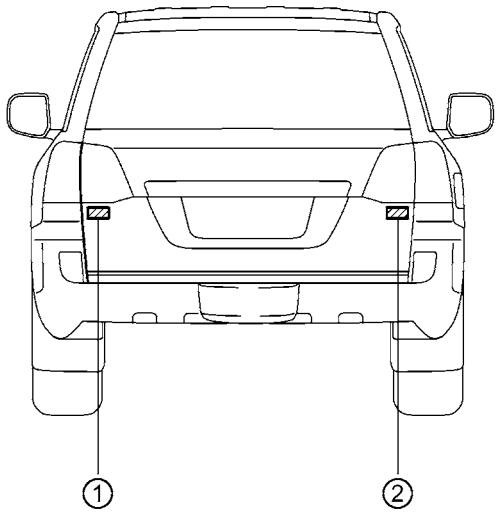


① REAR NO. 3 BODY NAME PLATE

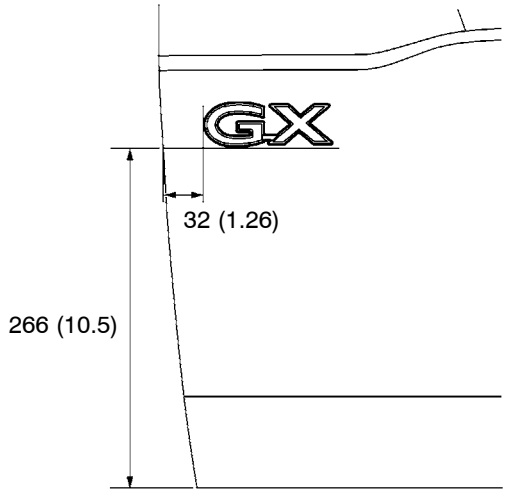

② NO. 5 BACK DOOR NAME PLATE

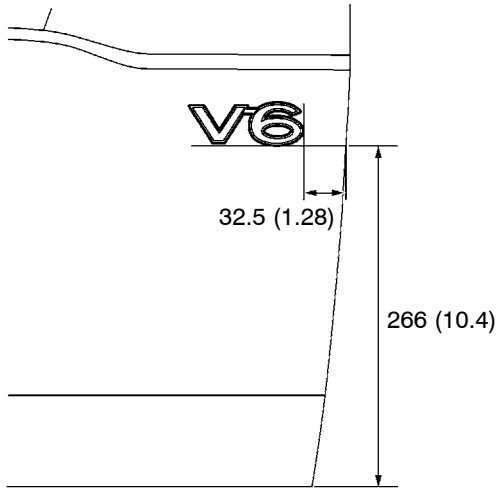


① REAR NO. 3 BODY NAME PLATE

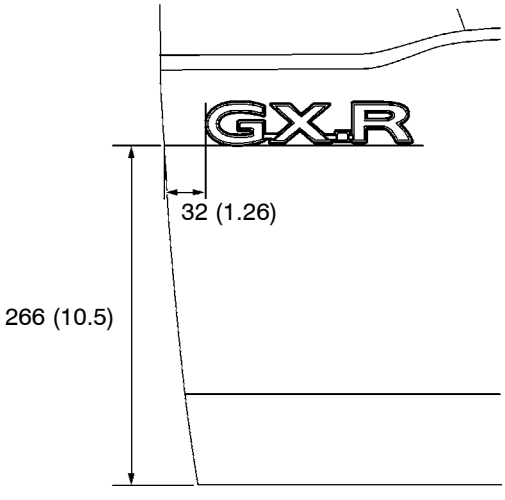


mm (in.)

F29297


[Except USA, Canada]
for Type C:

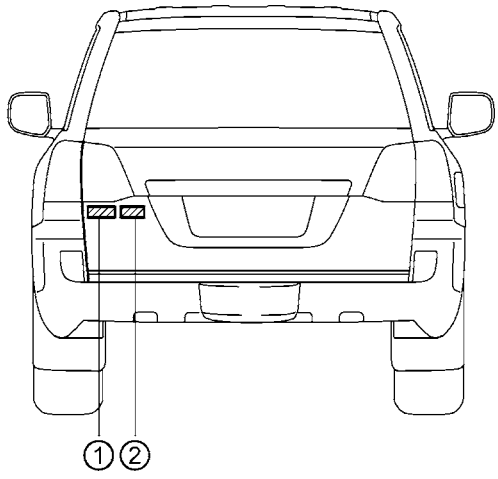

① BACK DOOR NAME PLATE

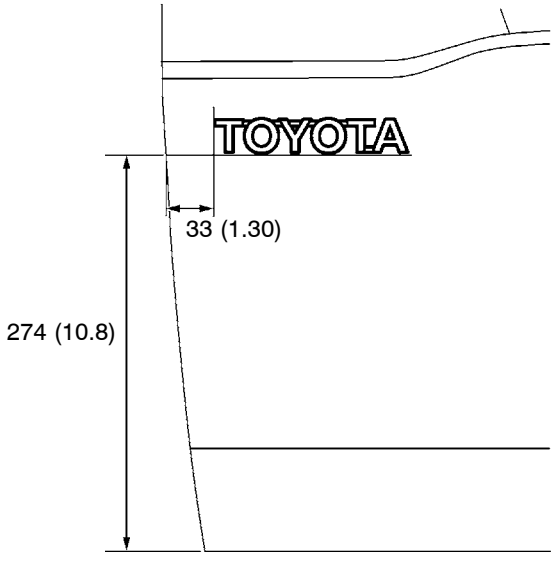


② NO. 6 LUGGAGE COMPARTMENT DOOR NAME PLATE

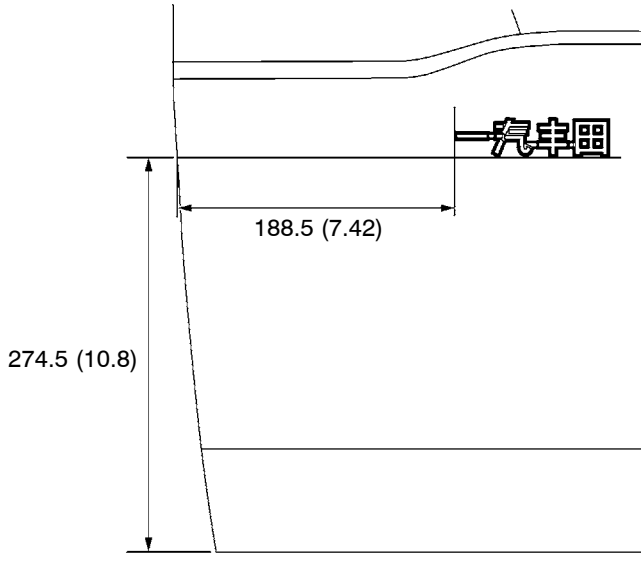


mm (in.)

F29298


[Except USA, Canada]
for Type C:

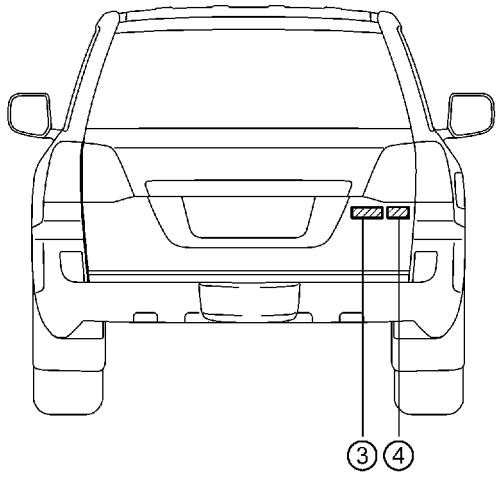


③ REAR NO. 3 BODY NAME PLATE

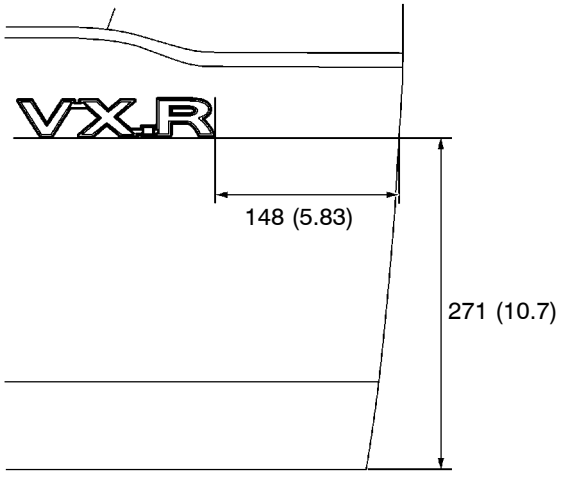


④ NO. 5 BACK DOOR NAME PLATE

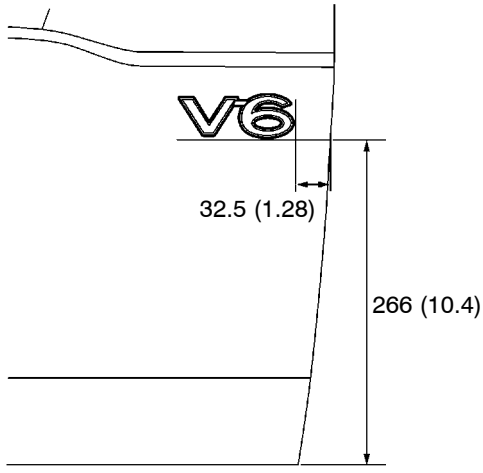

③ REAR NO. 3 BODY NAME PLATE

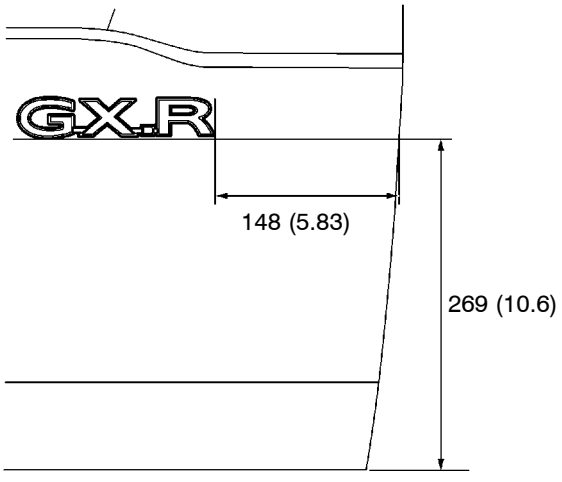

④ NO. 5 BACK DOOR NAME PLATE

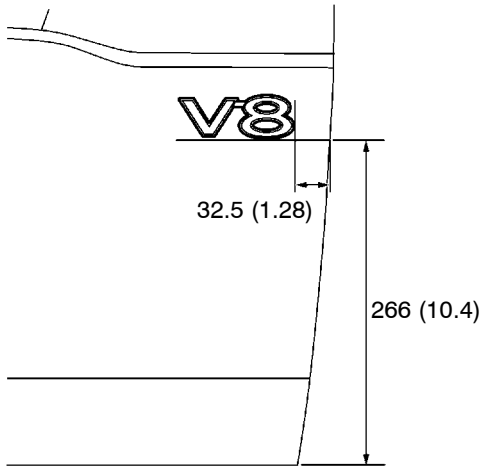

mm (in.)

F29299