
F RELAY LOCATIONS


: Cowl Side J/B LH Assembly	Cowl Side Left

(Before Aug. 2015 Production)

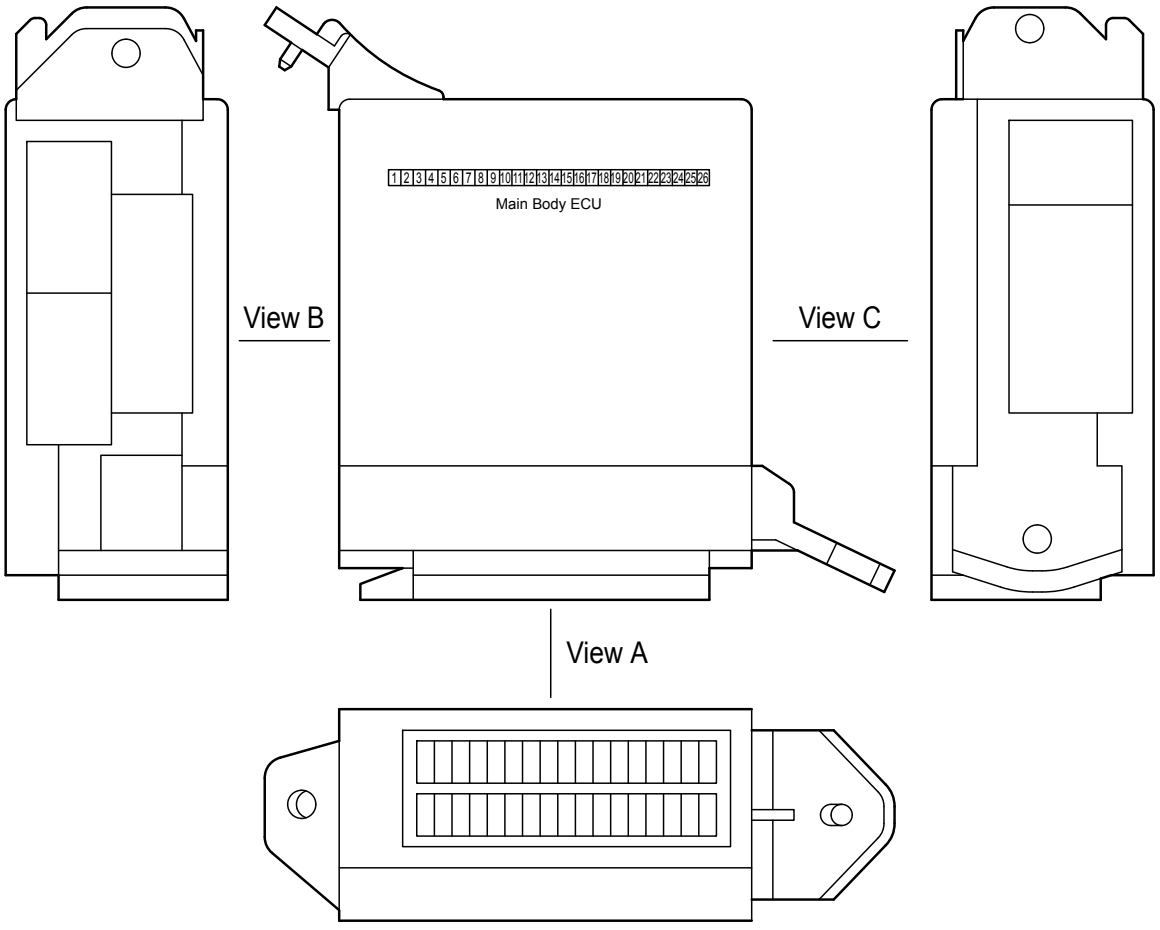

: Cowl Side J/B LH Assembly	Cowl Side Left


View A

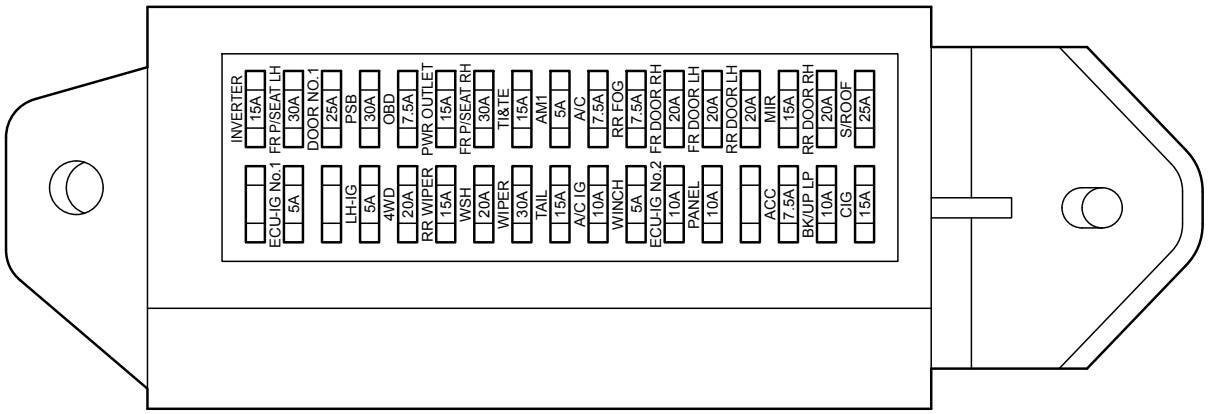

F RELAY LOCATIONS


: Cowl Side J/B LH Assembly	Cowl Side Left

(Before Aug. 2015 Production)

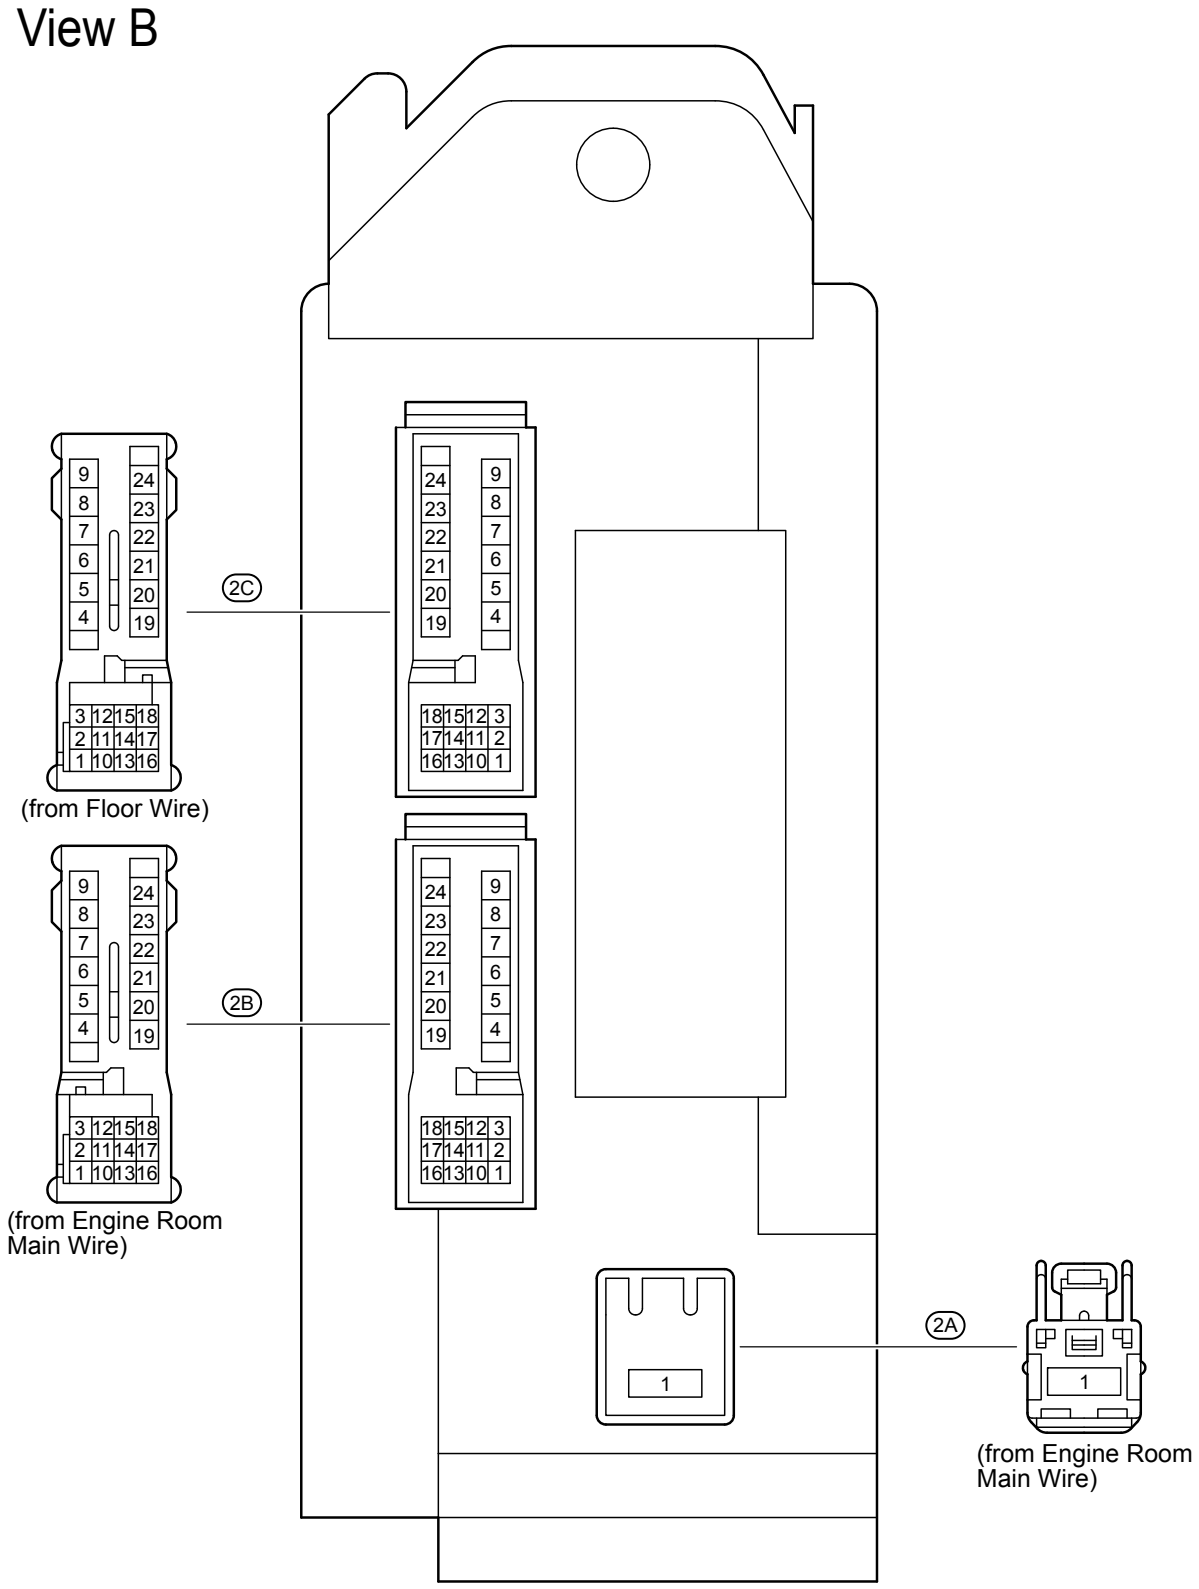

: Cowl Side J/B LH Assembly	Cowl Side Left


View C

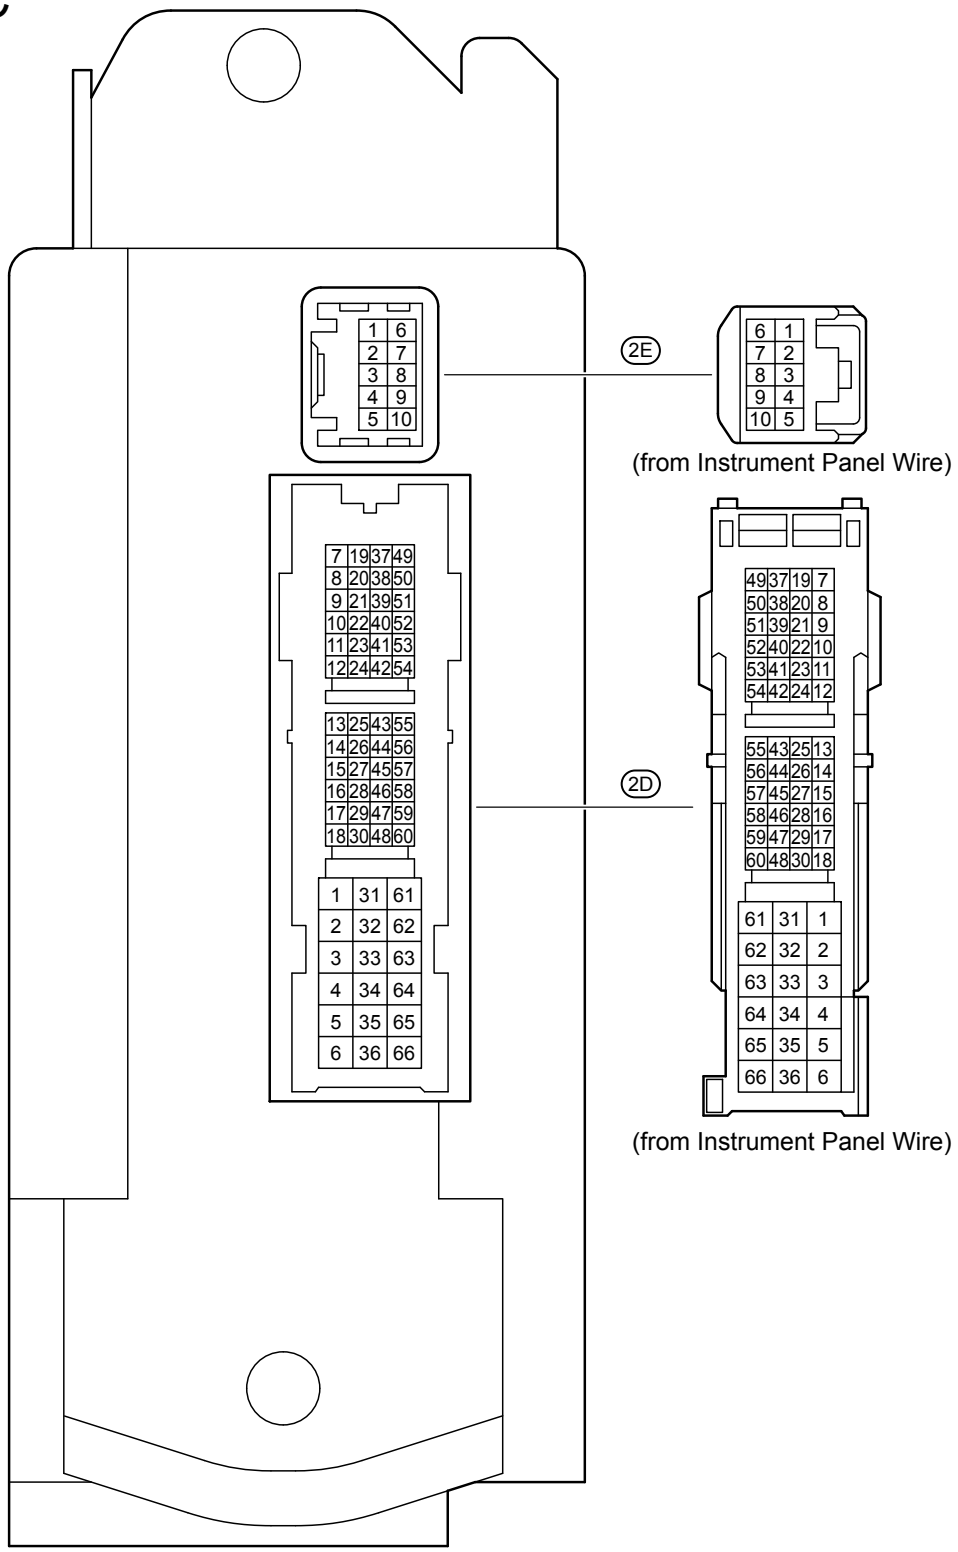

F RELAY LOCATIONS


: Cowl Side J/B LH Assembly	Cowl Side Left

(From Aug. 2015 Production)

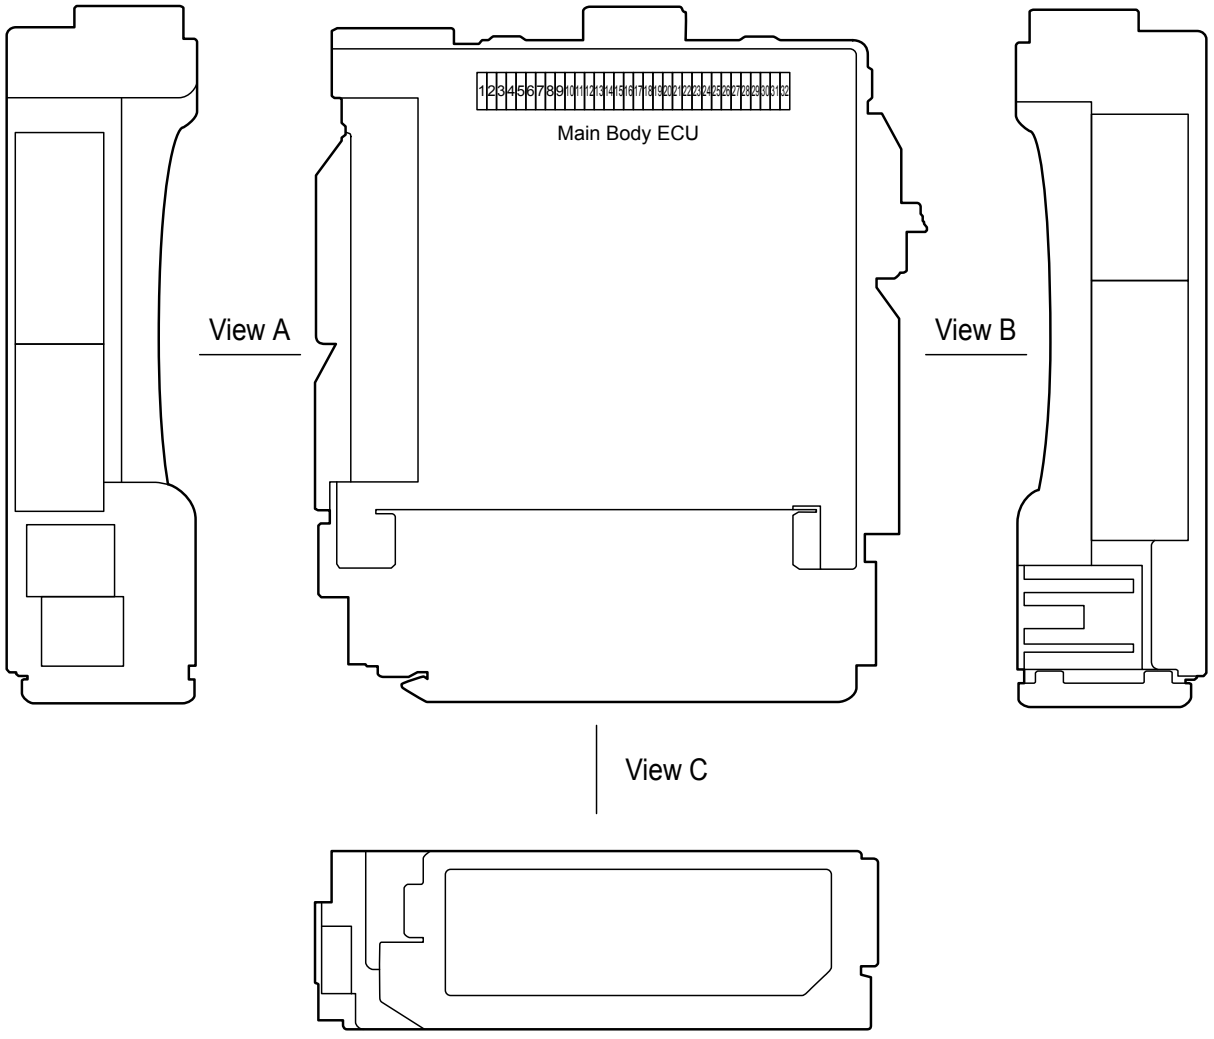

: Cowl Side J/B LH Assembly	Cowl Side Left

View A

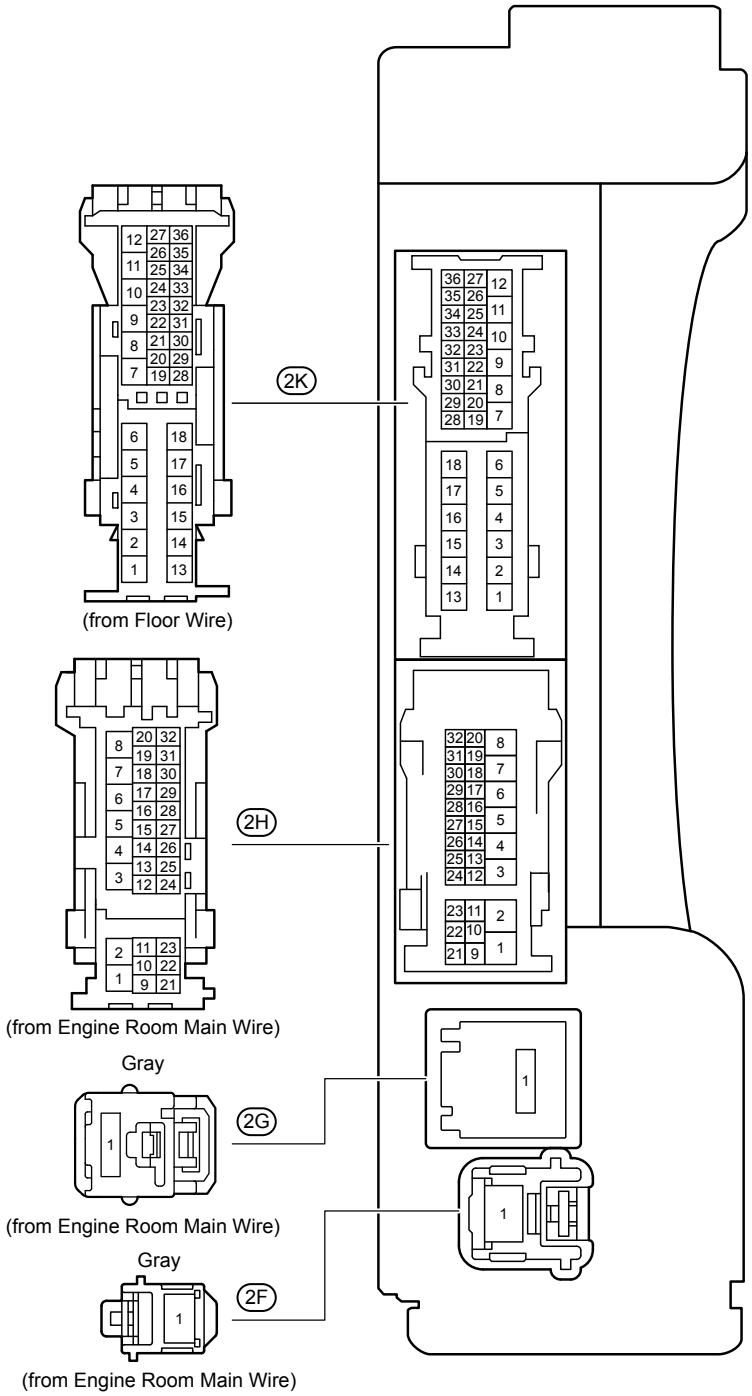


F RELAY LOCATIONS

: Cowl Side J/B LH Assembly	Cowl Side Left

(From Aug. 2015 Production)

View B

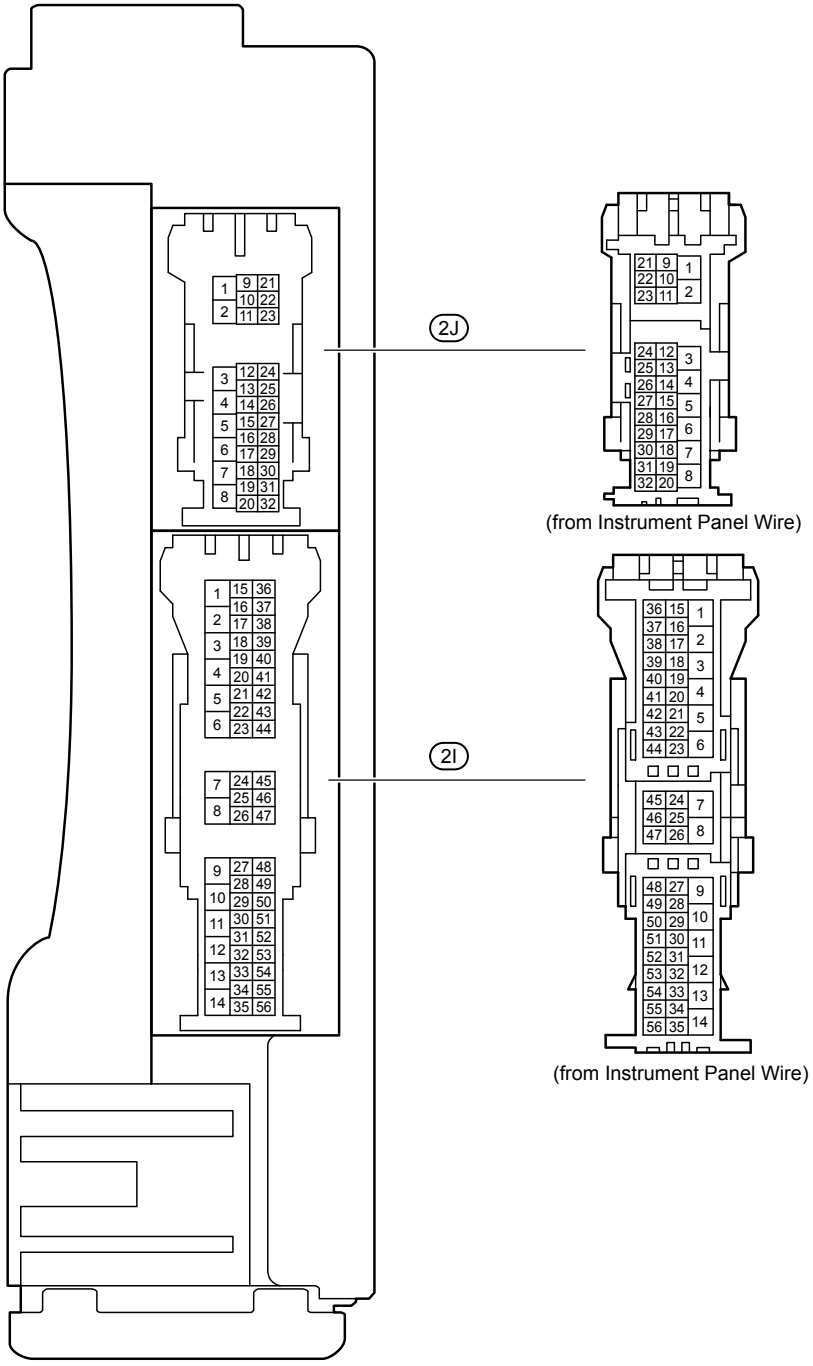

: Cowl Side J/B LH Assembly	Cowl Side Left

View C

* 1:30A P/SEAT F/R (for High Current)
* 2:30A P/SEAT F/L (for High Current)
* 3:30A DOOR F/D
  (All Door Jam Protection)
* 4:30A DOOR F/D (for High Current)
  (Driver's Door Only Jam Protection)

