



F RELAY LOCATIONS

 : Cowl Side J/B LH Assembly Cowl Side Left (See Page 24,25)
(Before Aug. 2015 Production)

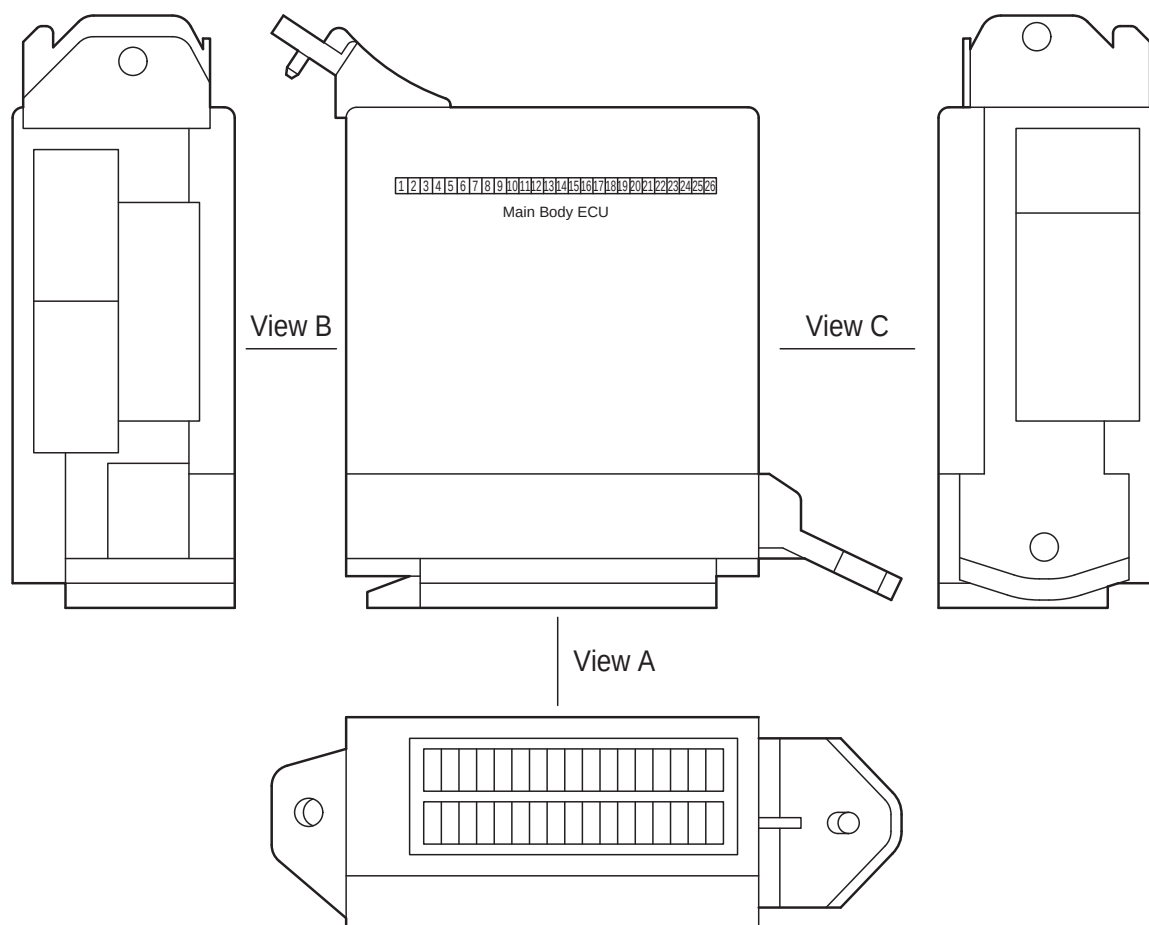


View A

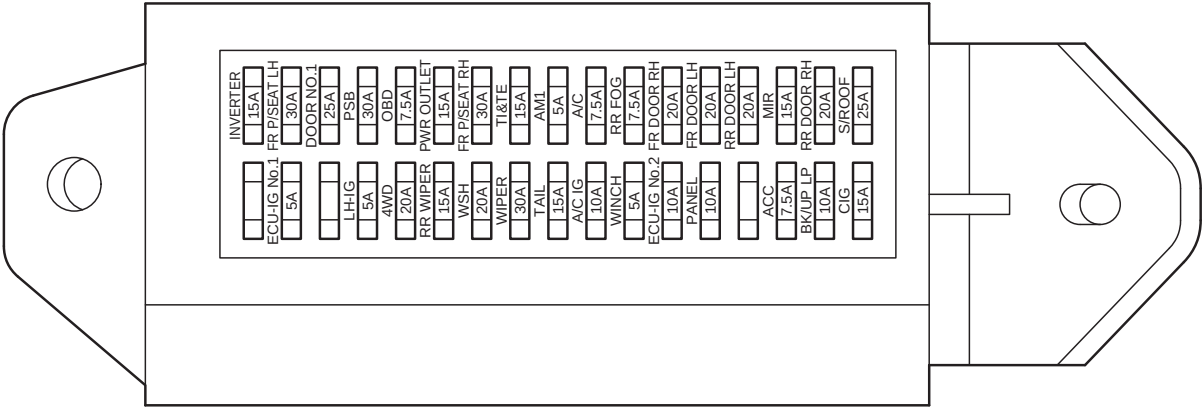


F RELAY LOCATIONS

 : Cowl Side J/B LH Assembly Cowl Side Left (See Page 24,25)
(Before Aug. 2015 Production)

View B

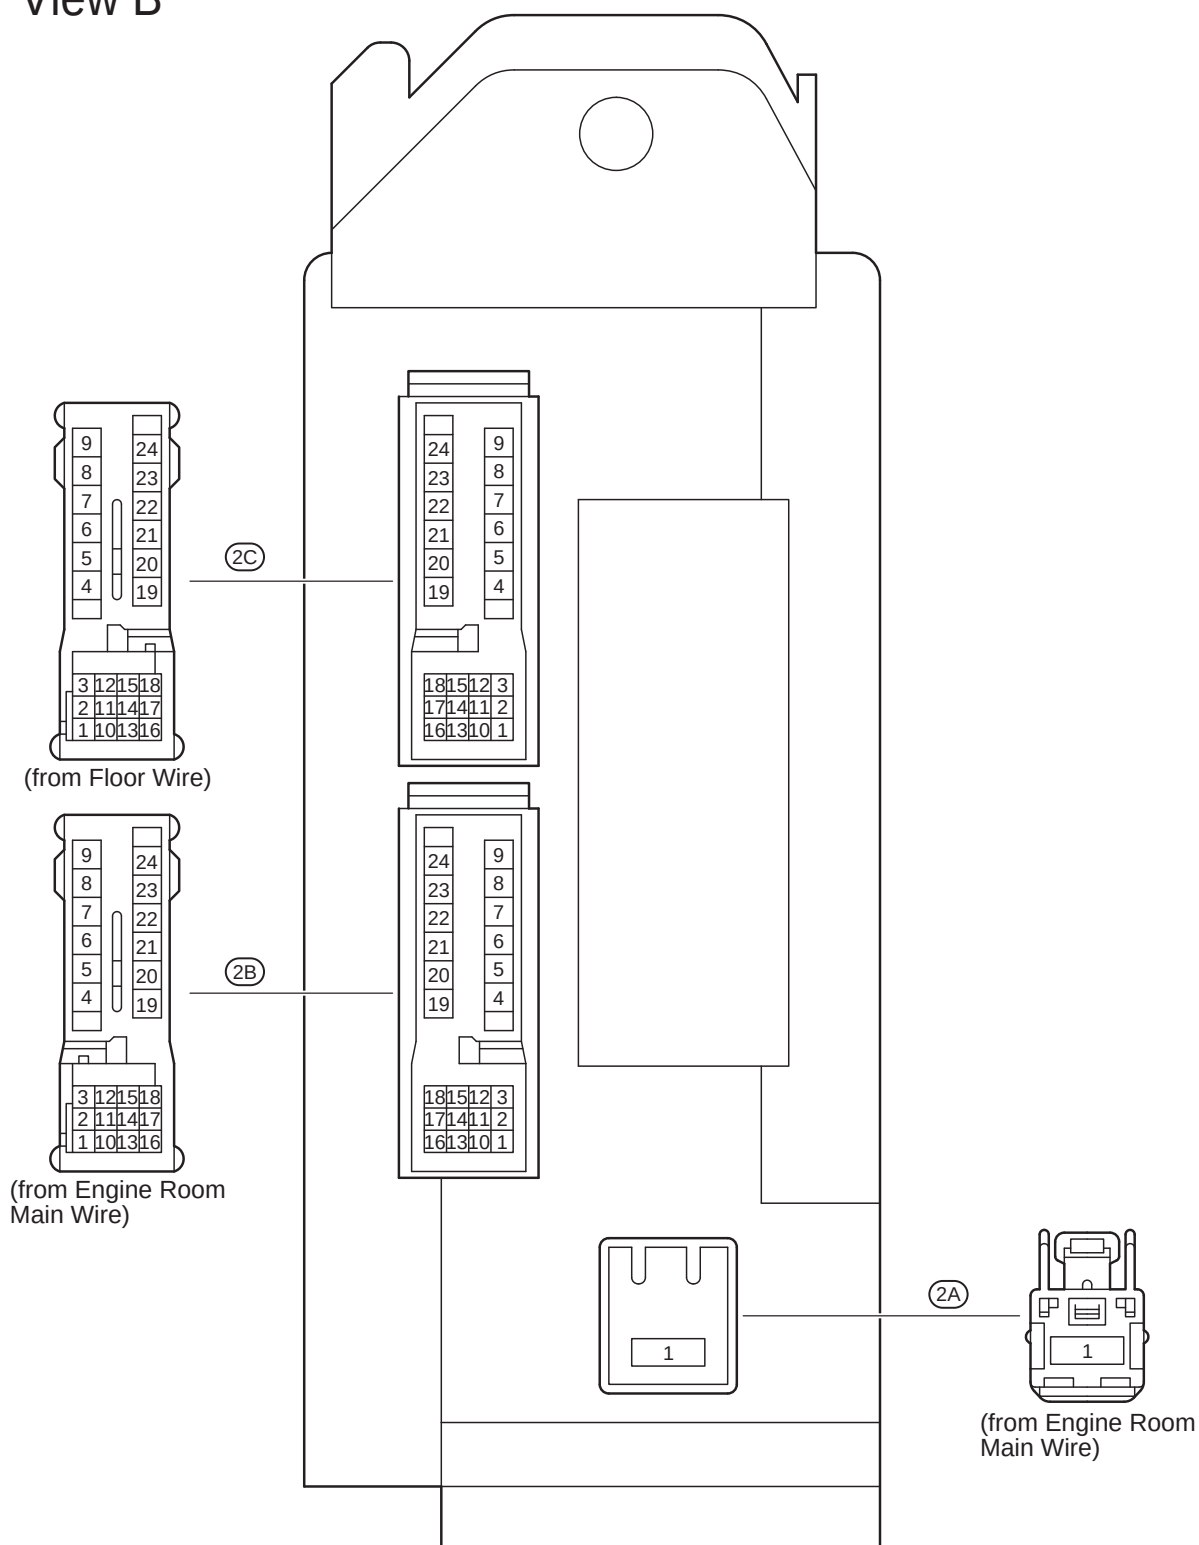


View C

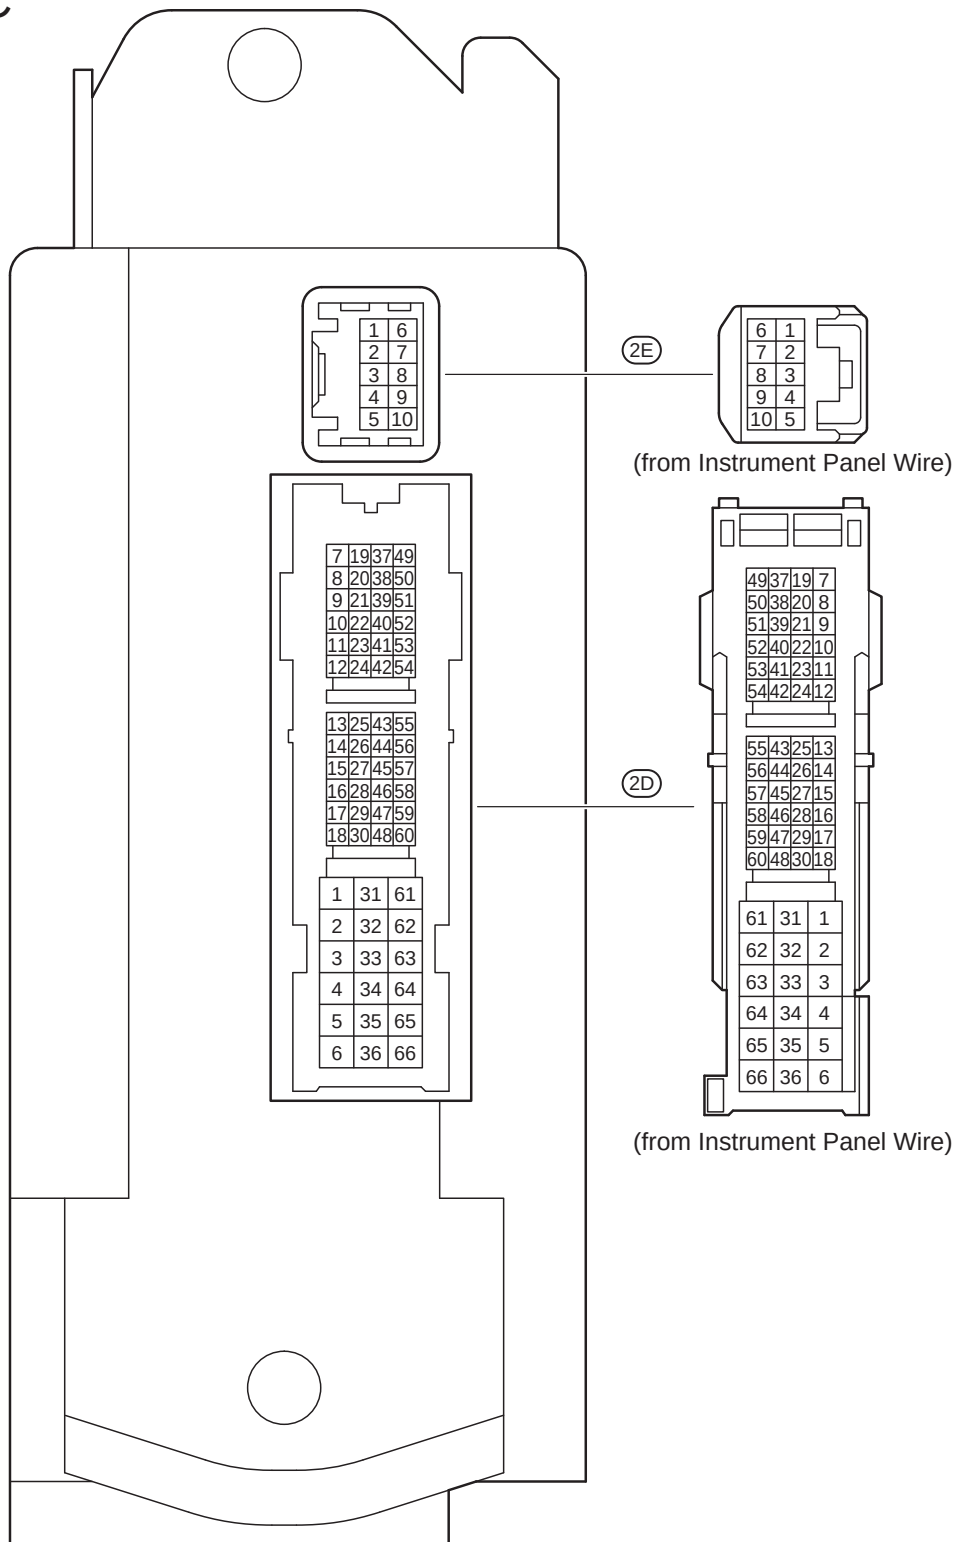


F RELAY LOCATIONS

 : Cowl Side J/B LH Assembly Cowl Side Left (See Page 26,27)

(From Aug. 2015 Production)

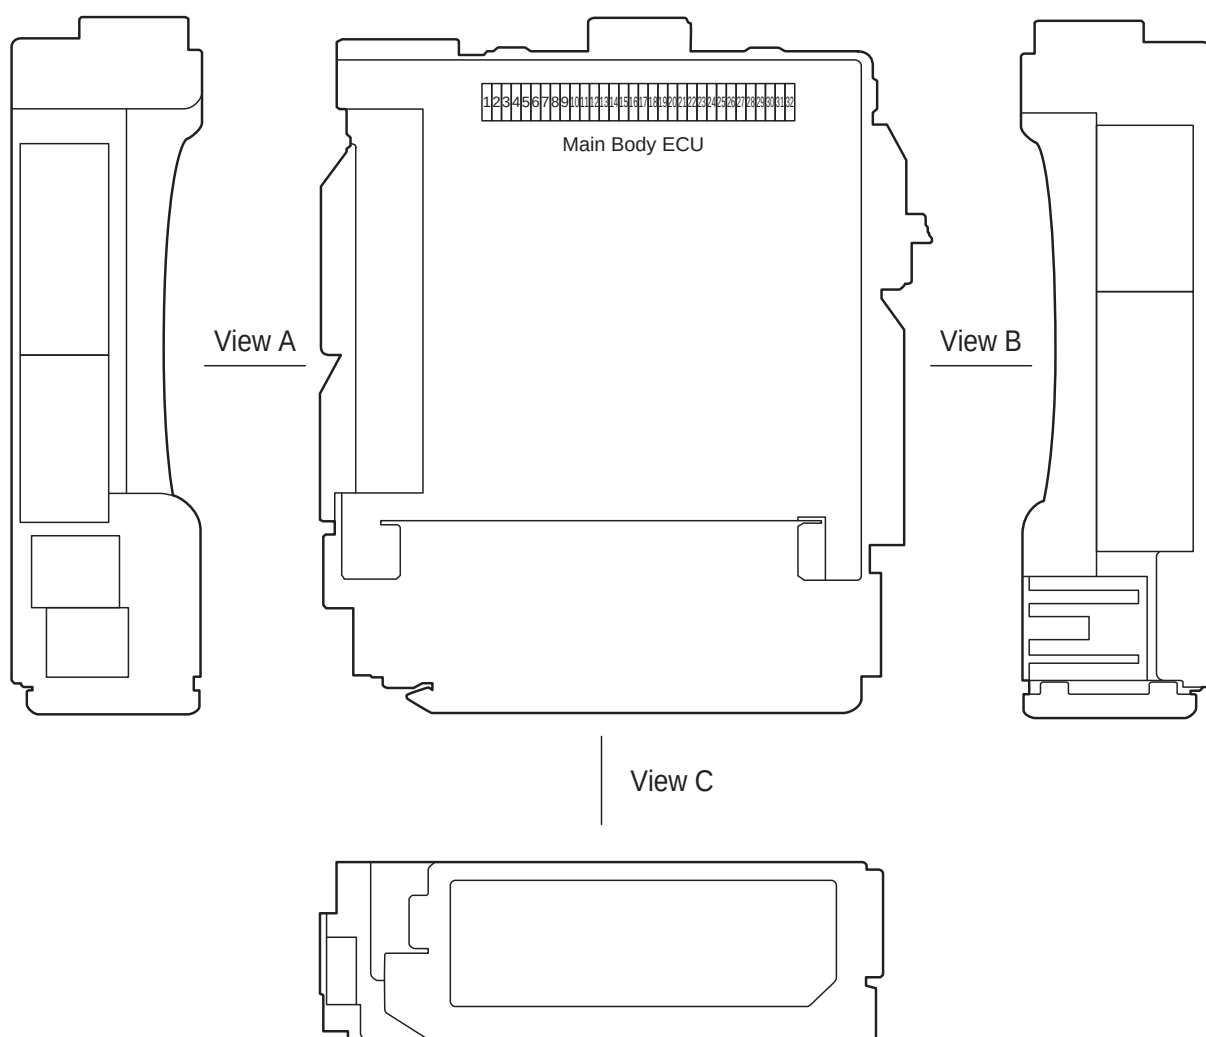


View A

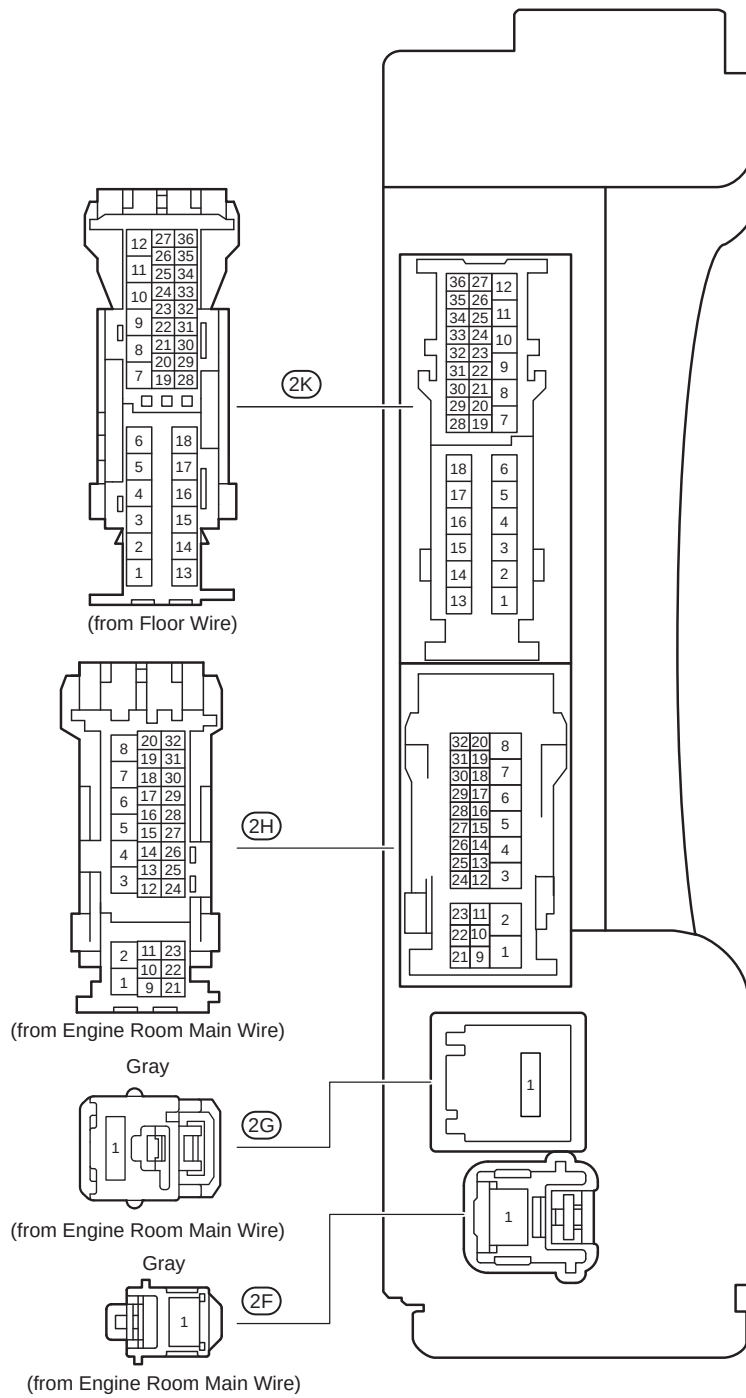


F RELAY LOCATIONS

 : Cowl Side J/B LH Assembly **Cowl Side Left (See Page 26,27)**
(From Aug. 2015 Production)

View B

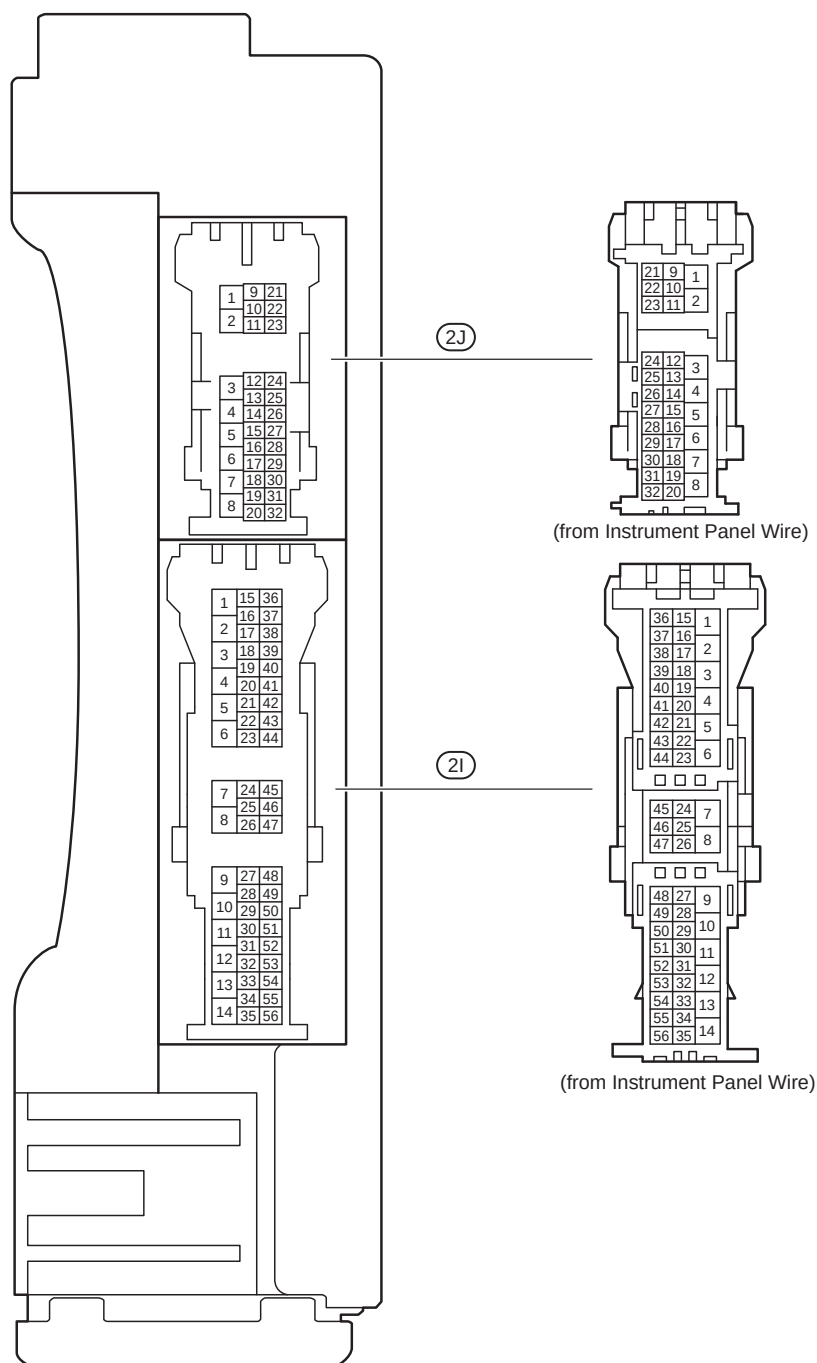

View C

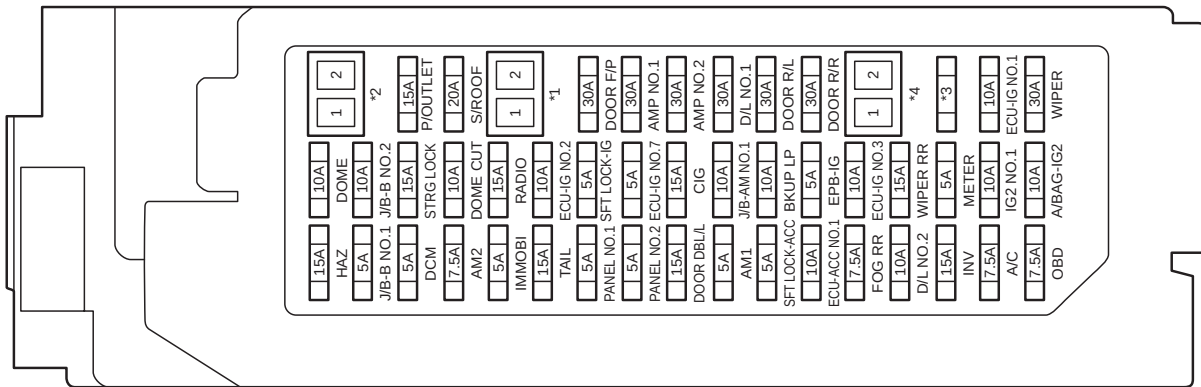

- * 1:30A P/SEAT F/R (for High Current)
- * 2:30A P/SEAT F/L (for High Current)
- * 3:30A DOOR F/D
(All Door Jam Protection)
- * 4:30A DOOR F/D (for High Current)
(Driver's Door Only Jam Protection)