
# CENTER BODY PILLAR (CUT)


F16153A

## REPLACEMENT

## REMOVAL

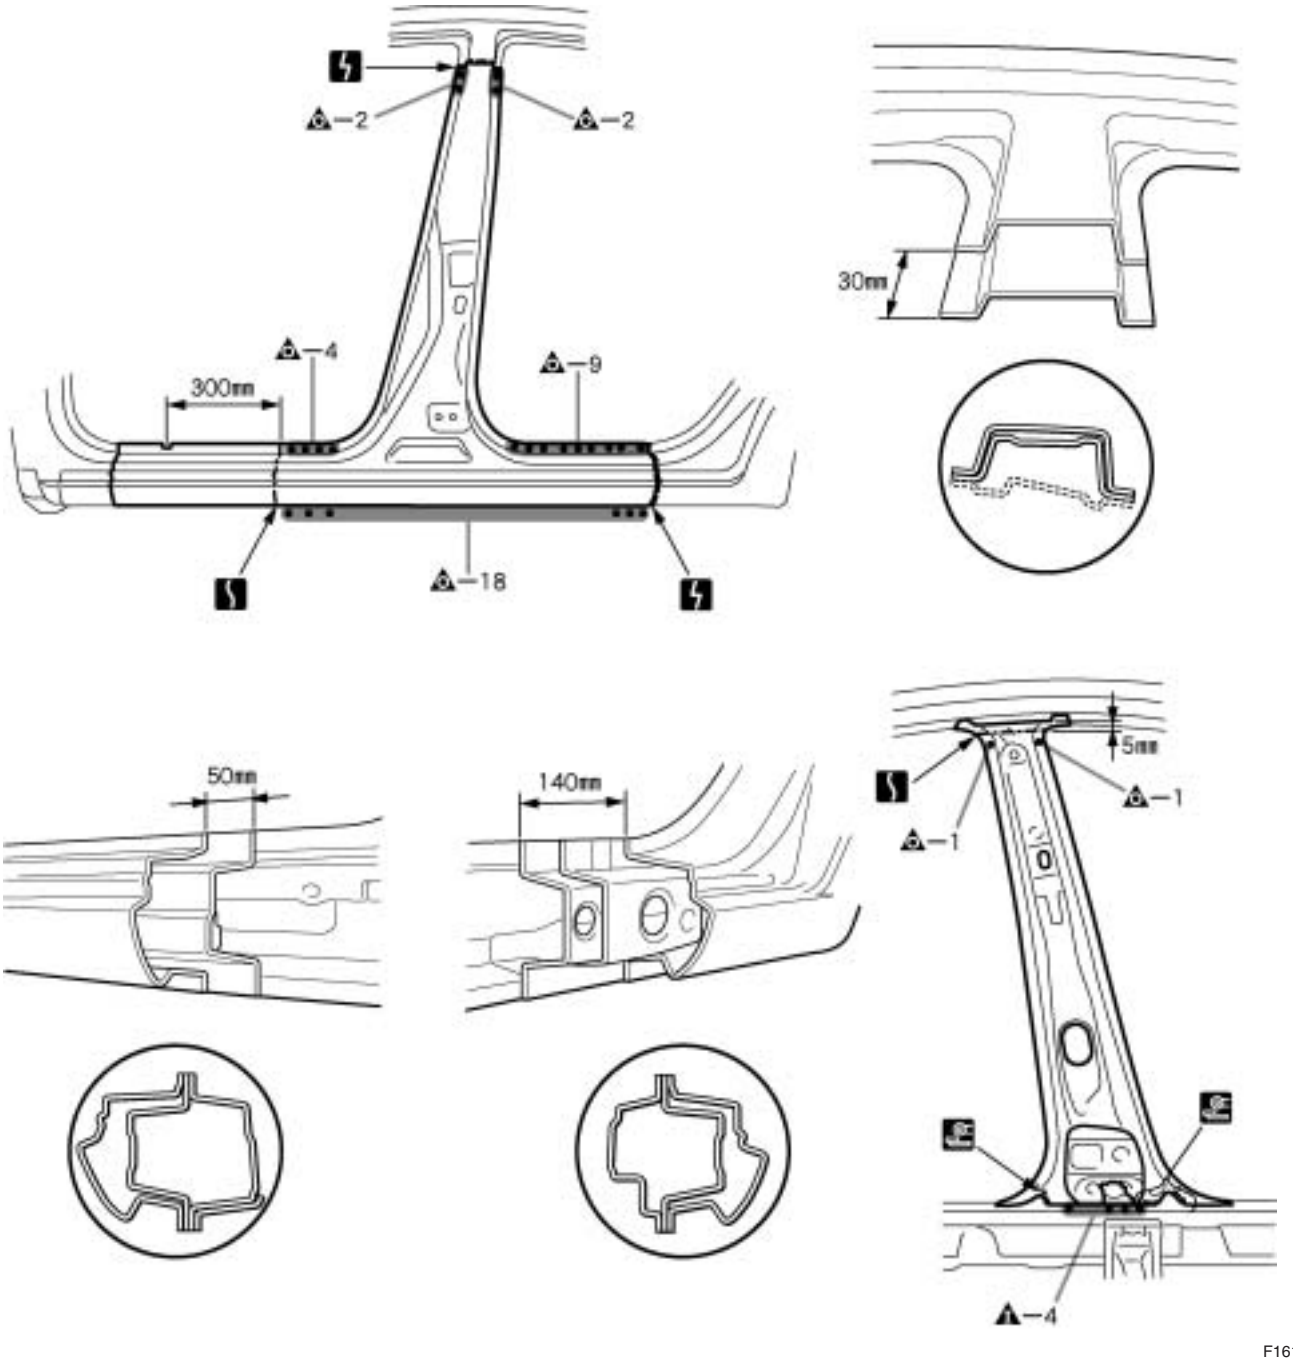


F16153

5mm (0.20in.) 30mm (1.18in.) 50mm (1.97in.) 140mm (5.51in.) 300mm (11.81in.)

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

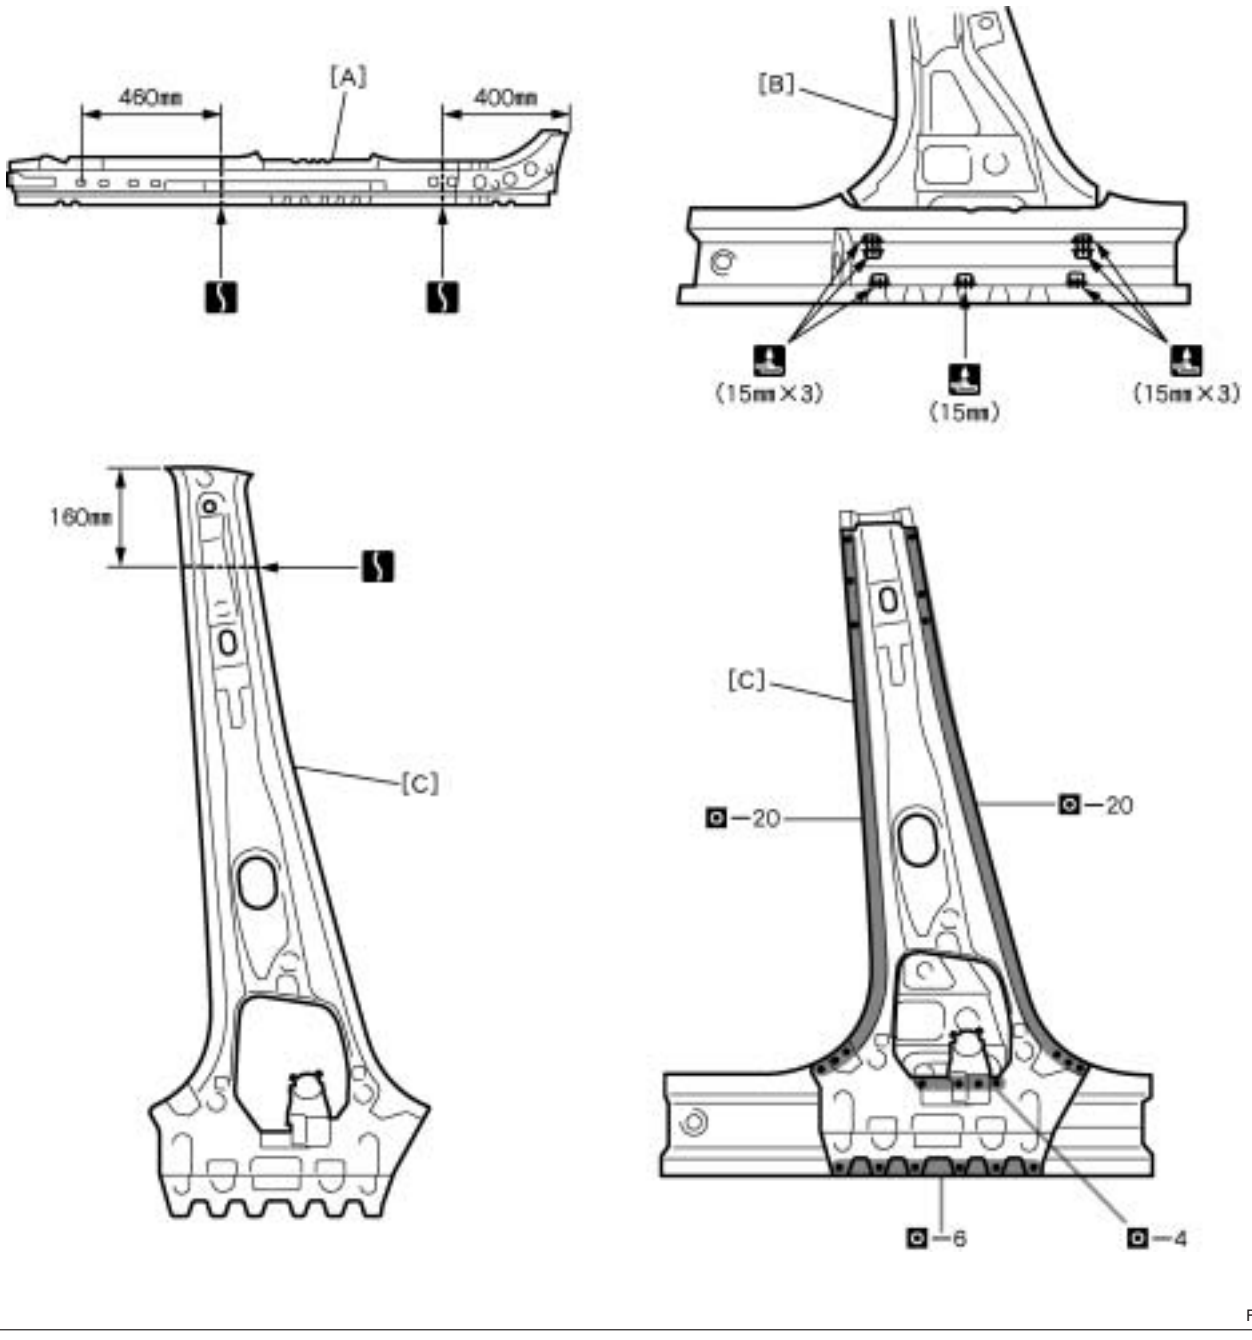


F16154


**POINT**

1 Before temporarily installing the new parts, weld the [A], [B], and [C] with standard points.

**PART NAME**

[A] Rocker Outer Reinforcement [B] Center Body Pillar Reinforcement [C] Center Body Inner Pillar

15mm (0.59in.) 160mm (6.30in.) 400mm (15.75in.) 460mm (18.11in.)

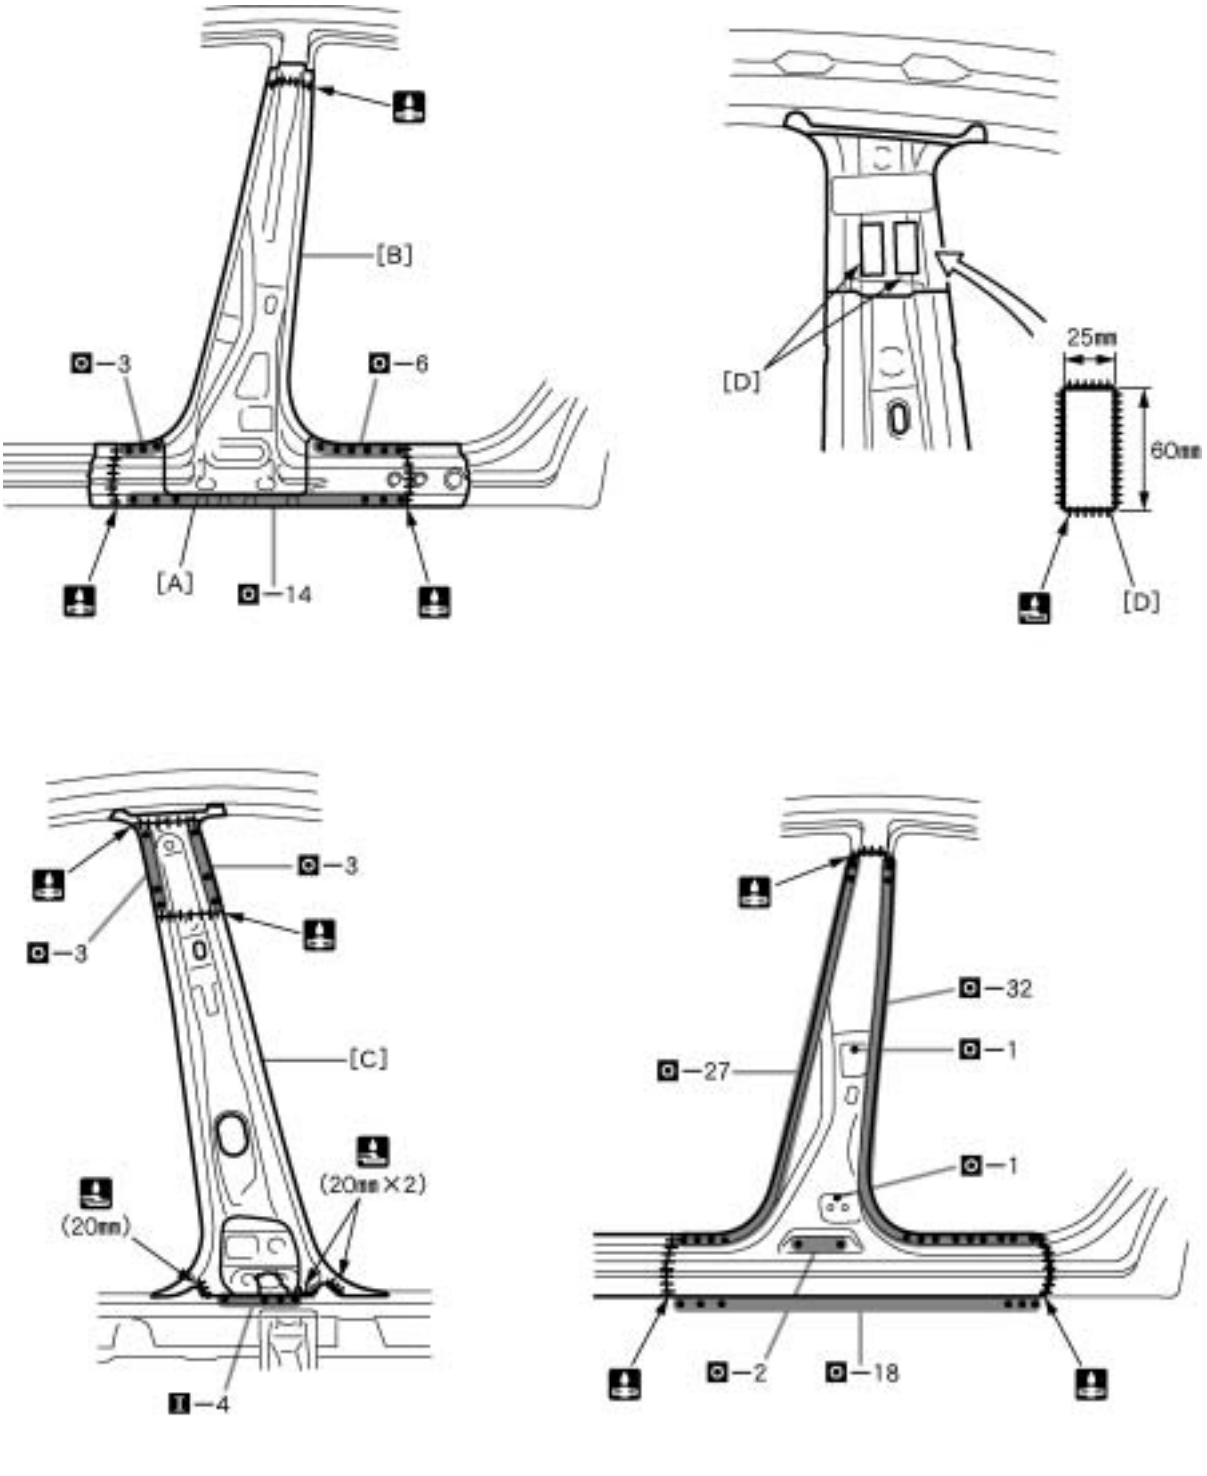


F16155

**POINT**

1 Inspect the fitting of the front door and rear door, etc., before welding, since this affects the appearace of the finish.
2 Weld the [D] from inside of the butted portion.
*Hint:*
*1) Make the [D] from the remainder of new parts.*
3 After welding the reinforcement to the vehicle, install the outer pillar.

**PART NAME**

[A] Rocker Outer Reinforcement [B] Center Body Pillar Reinforcement [C] Center Body Inner Pillar
[D] Stiffener

20mm (0.79in.) 25mm (0.98in.) 60mm (2.36in.)