

WINDSHIELD WIPER SWITCH ASSY

660HC–01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
2. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60–20)
3. REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 60–20)
4. REMOVE HORN BUTTON ASSY (SEE PAGE 60–20)
5. REMOVE STEERING WHEEL ASSY (SEE PAGE 50–8)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
6. REMOVE TILT LEVER BRACKET (SEE PAGE 50–8)
7. REMOVE STEERING COLUMN COVER (SEE PAGE 50–8)

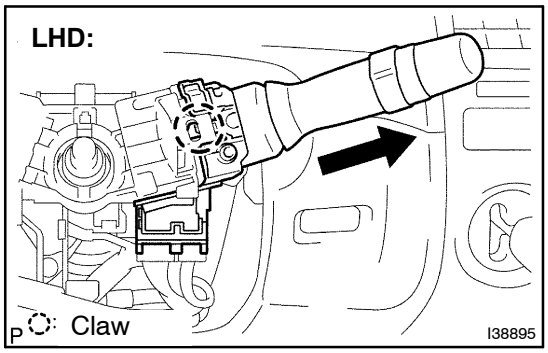

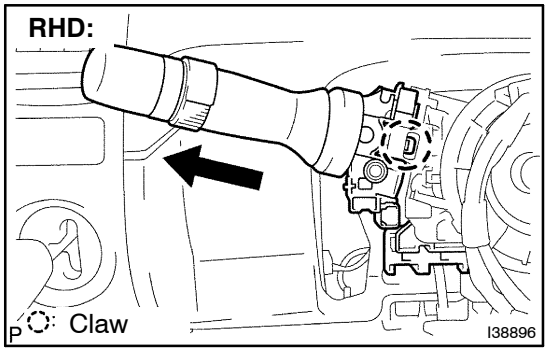

8. REMOVE WINDSHIELD WIPER SWITCH ASSY
   (a) Disconnect the connector.
   (b) Push and disengage the claw shown in the illustration and remove the windshield wiper switch assy.

NOTICE:
The claw will be broken if pressed too hard.

9. CENTER SPIRAL CABLE (SEE PAGE 60–29)
10. INSTALL STEERING WHEEL ASSY (SEE PAGE 50–8)
11. INSTALL HORN BUTTON ASSY (SEE PAGE 60–20)
12. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 21–56)
13. INSPECT HORN BUTTON ASSY (SEE PAGE 60–14)
14. INSPECT SRS WARNING LIGHT (SEE PAGE 05–1151)
15. PERFORM INITIALIZATION (SEE PAGE 01–29)