REAR SPOILER SUB–ASSY


7616Q–01

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

1. **REMOVE REAR WIPER ARM COVER (See page 66–22)**
2. **REMOVE REAR WIPER ARM ASSY (See page 66–22)**
3. **REMOVE BACK DOOR TRIM BOARD ASSY (See page 75–33)**
4. **REMOVE BACK DOOR TRIM BOARD (See page 75–33)**
5. **REMOVE REAR WIPER MOTOR ASSY (See page 66–22)**

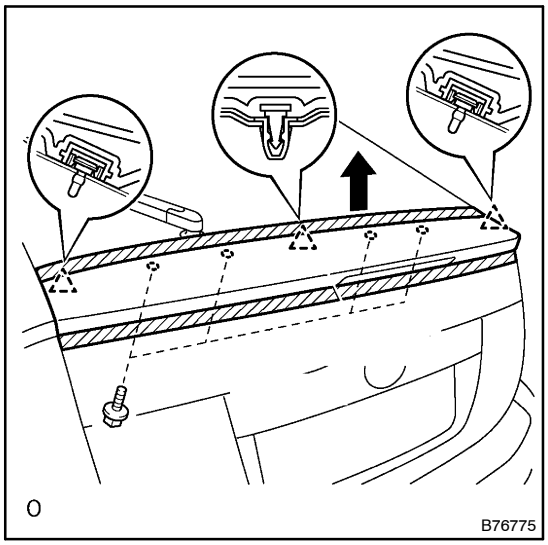

6. **REMOVE REAR SPOILER SUB–ASSY**

(a) Put protective tape under the rear spoiler.

(b) Remove the 4 bolts.

(c) Using a screwdriver, disengage the 3 clips and rear spoiler.

HINT:

Tape the screwdriver tip before use.

(d) Disconnect the stop lamp connector.

7. **REMOVE CENTER STOP LAMP ASSY**

(a) Remove the 2 screws and stop lamp.