
HORN ASSY

7700Q–01

REPLACEMENT

1. REMOVE FRONT BUMPER COVER (See page 76–2)

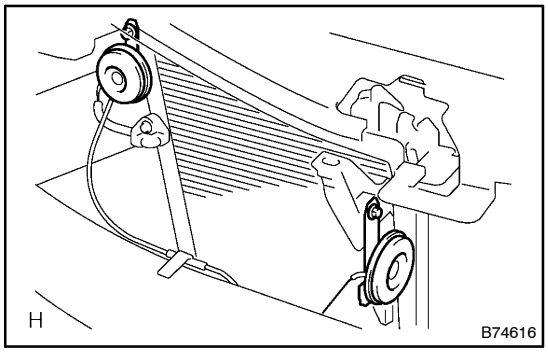

2. REMOVE HIGH PITCHED HORN ASSY

(a) Disconnect the connector.

(b) Remove the bolt and horn.

3. REMOVE LOW PITCHED HORN ASSY

(a) Disconnect the connector.

(b) Remove the bolt and horn.

4. INSTALL HIGH PITCHED HORN ASSY

(a) Place the stay onto the baffle part in the radiator support upper, and then install the horn with the bolt.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

(b) Connect the connector.

5. INSTALL LOW PITCHED HORN ASSY

(a) Place the stay onto the baffle part in the radiator support upper, and then install the horn with the bolt.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

(b) Connect the connector.