


FRONT FENDER APRON FRONT WITH SUPPORT (ASSY)


F16134-A

REPLACEMENT
With the radiator upper support removed.

REMOVAL

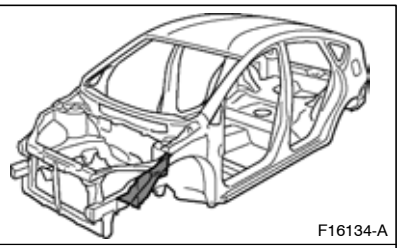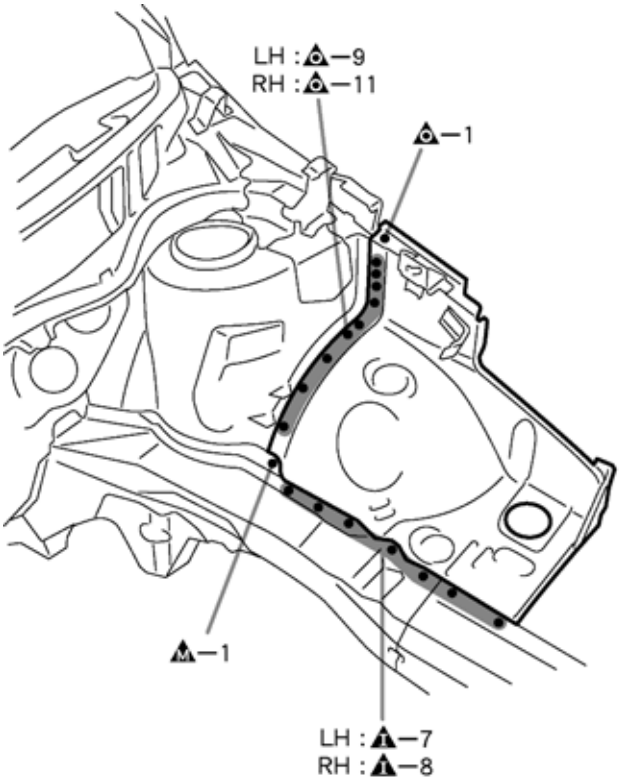


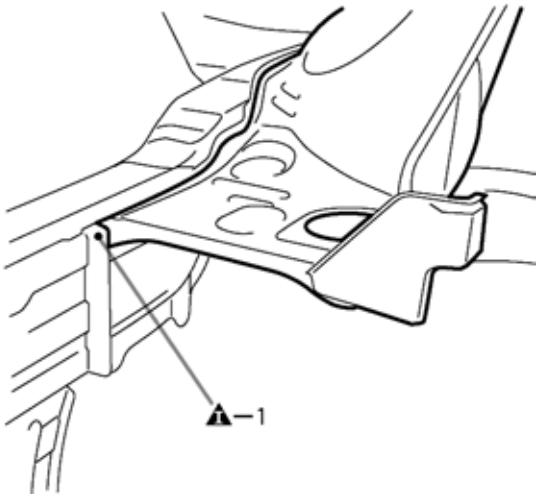

F16134

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

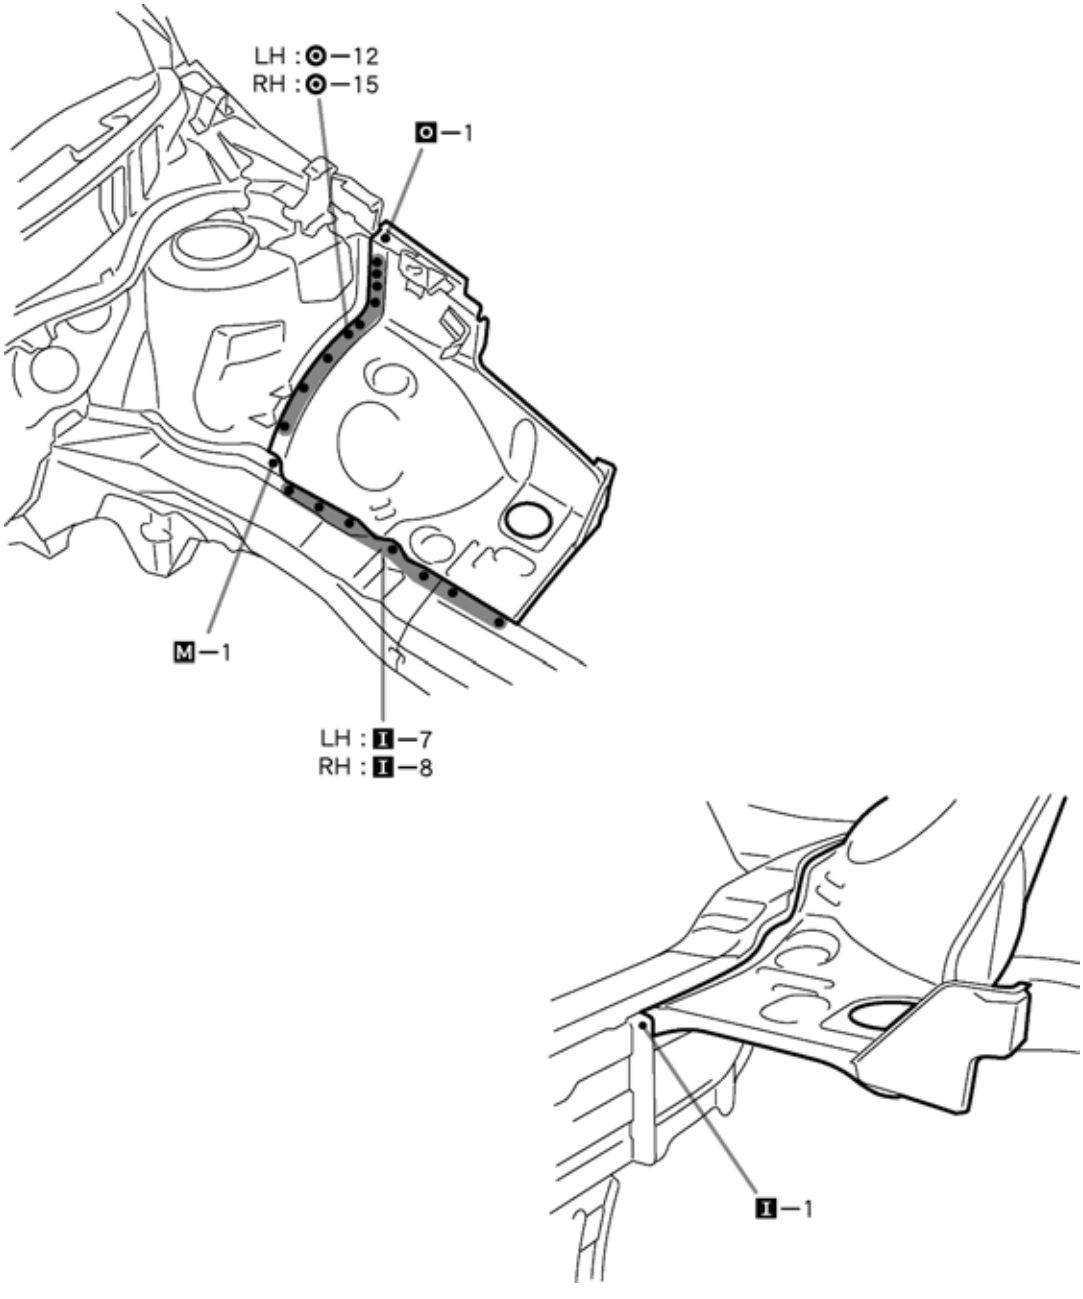



F16135


POINT

1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.

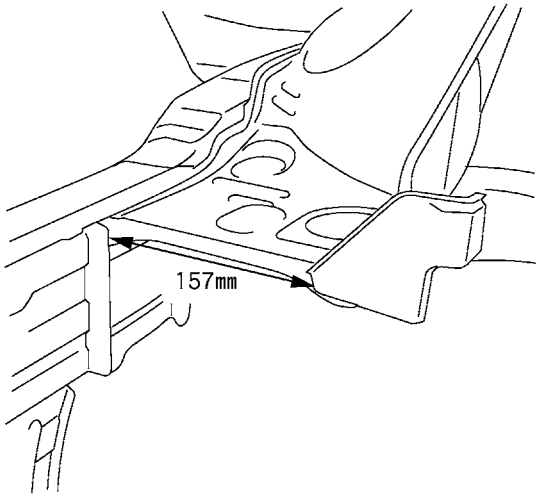

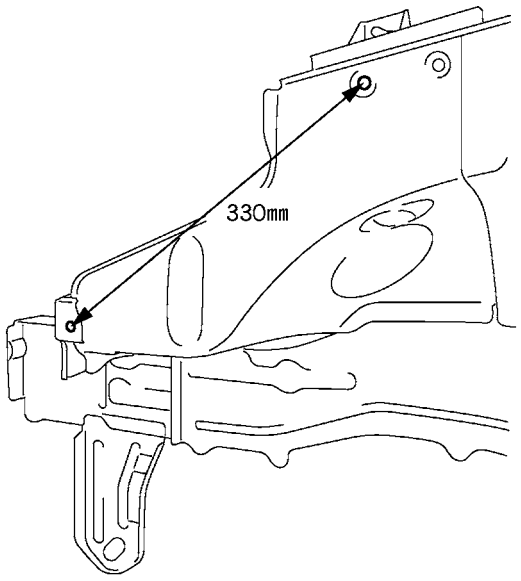

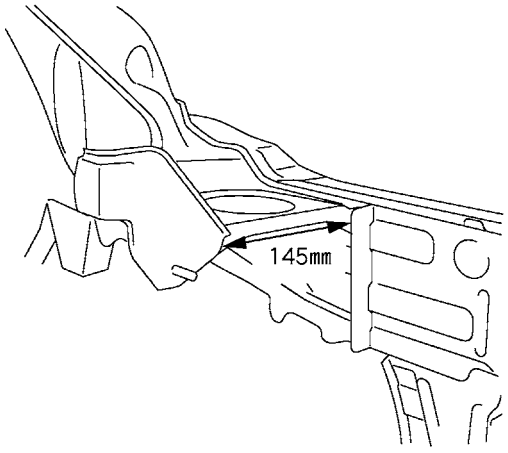

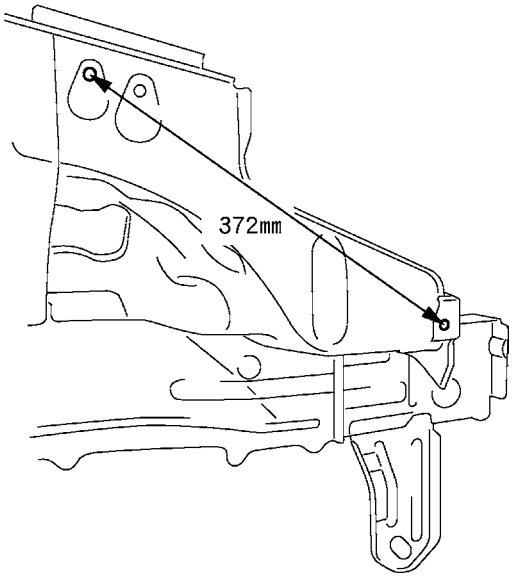

F16136

POINT

1 These values are reference values.

145mm (5.71in.) 157mm (6.18in.) 330mm (12.99in.) 372mm (14.65in.)