

REAR FLOOR SIDE PANEL (ASSY)



F16184A

REPLACEMENT
With the body lower back panel removed.


REMOVAL


(LH)

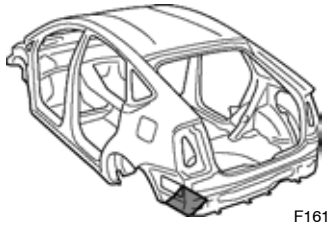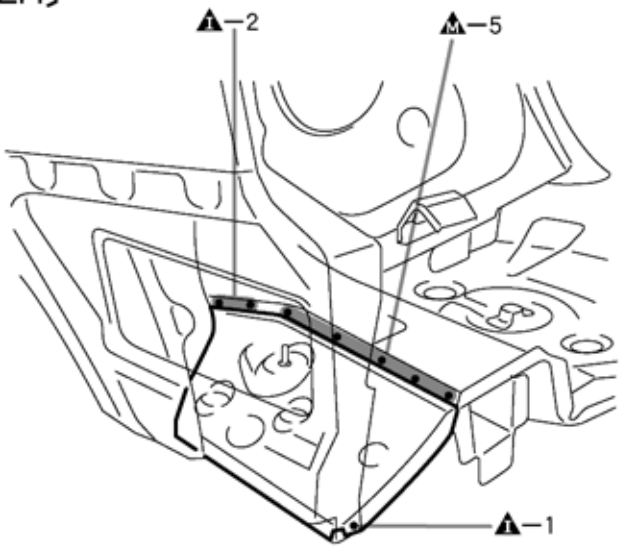

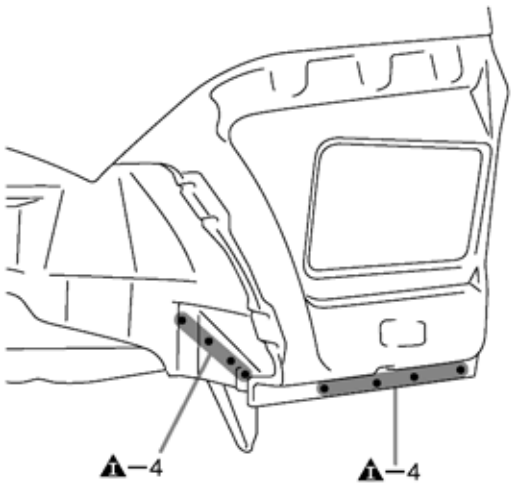

(RH)

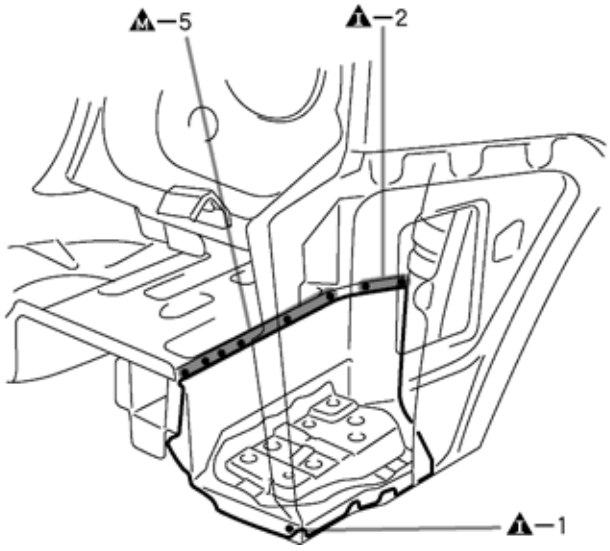


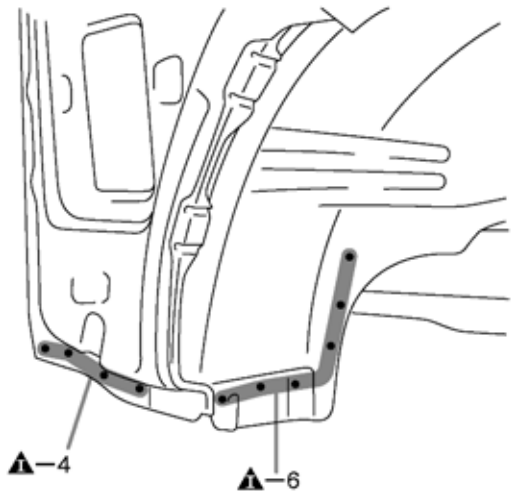

F16184

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

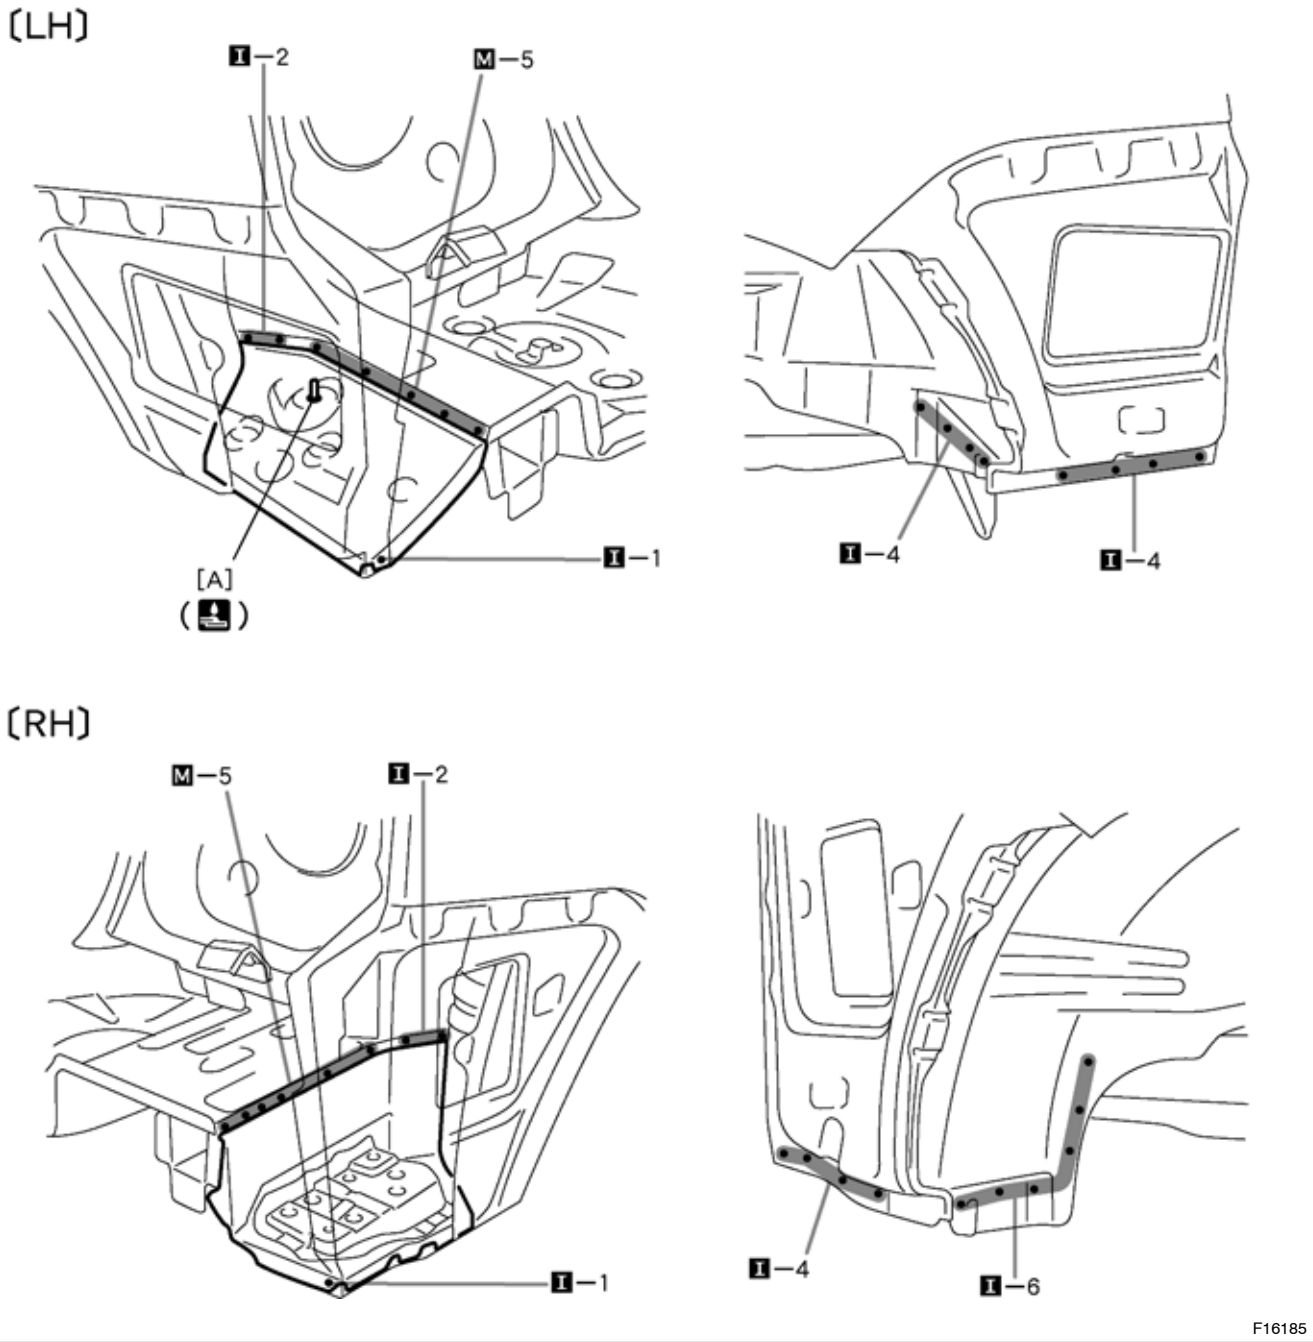

POINT

1 Attach of the [A] to center of the bearing surface.

PART NAME

[A] Weld Bolt