FRONT FENDER APRON (ASSY)



F24656A


With the radiator support and cowl top side panel removed.

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: MIG Plug Weld

F24656B

REMOVAL·INSTALLATION

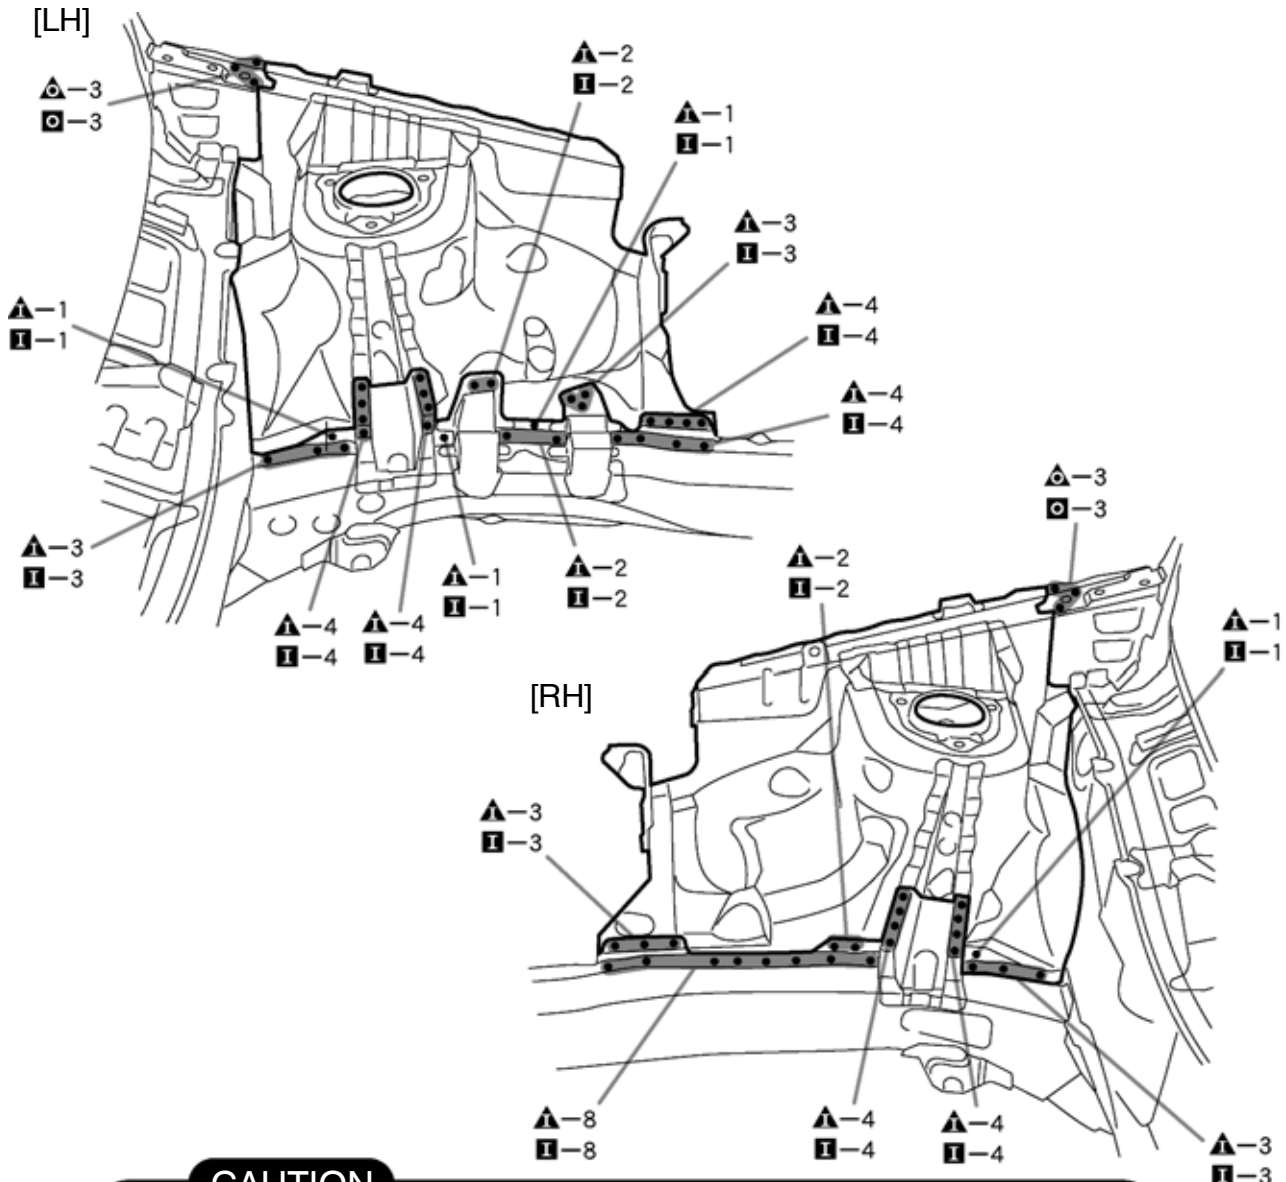

CAUTION


Make sure each measurement is correct, as this part affects the front wheel alignment.

F24656

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

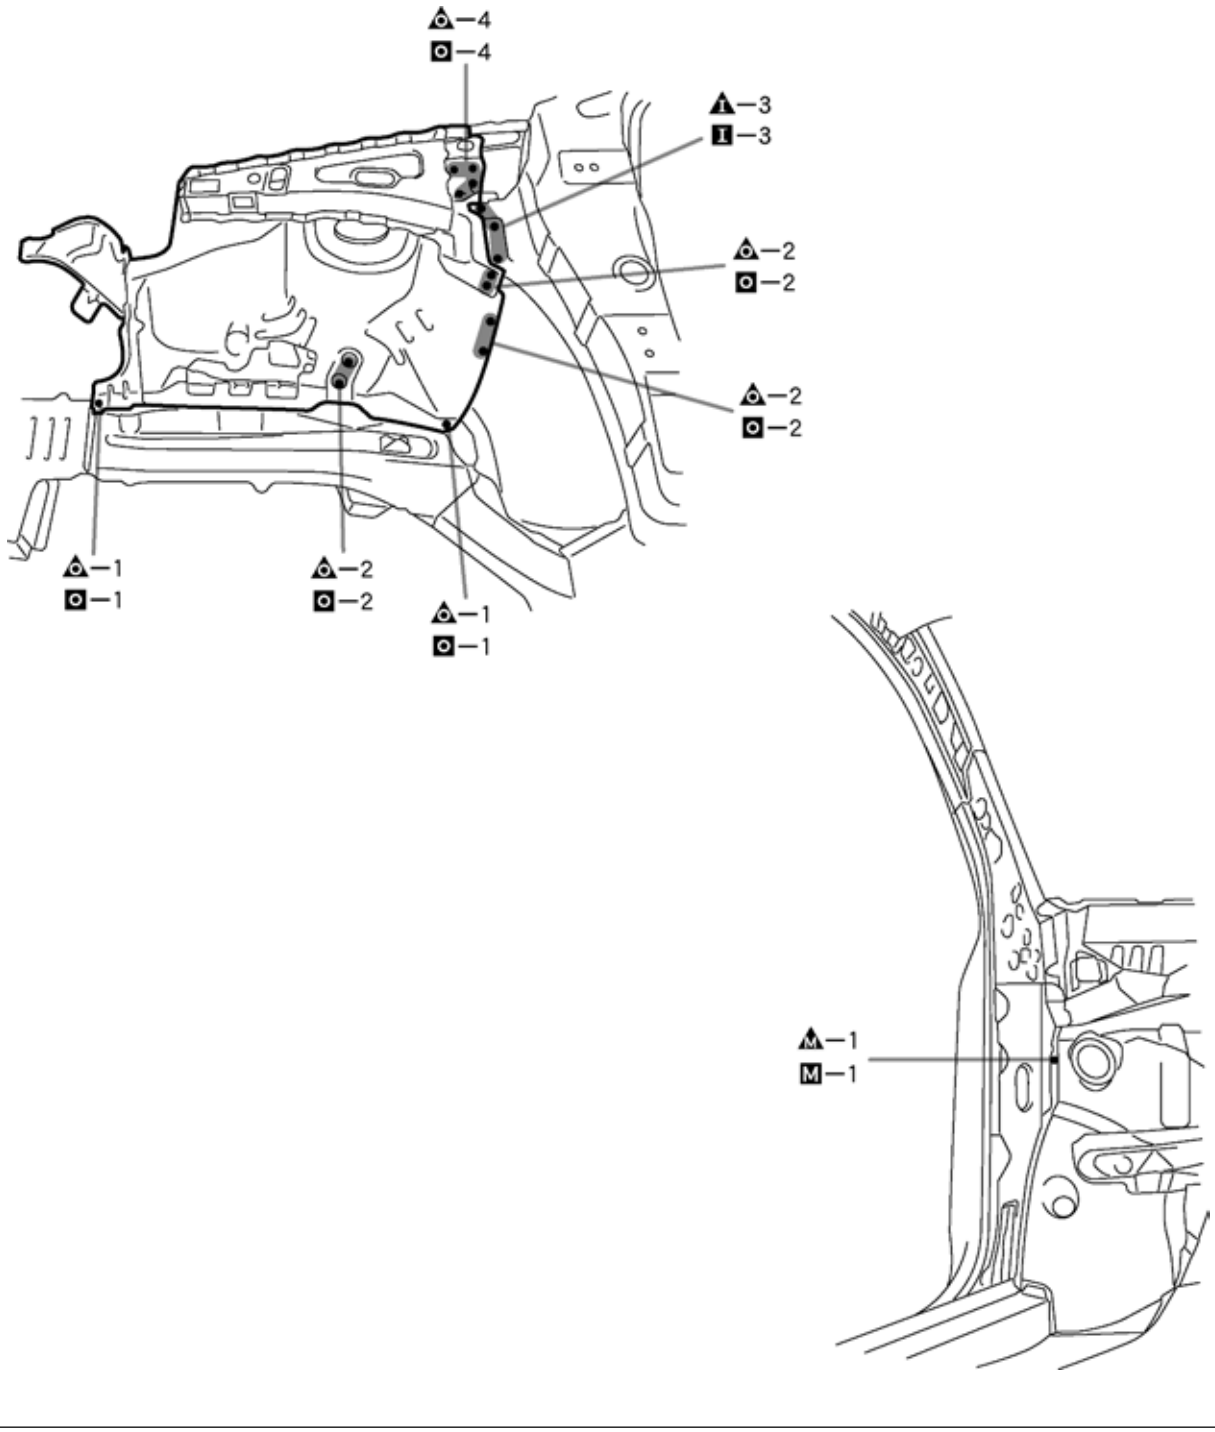

F24657

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.