# FOAMED MATERIAL APPLICATION AREAS


If an increase in temperature or other condition damages the foamed material when repairing or replacing the panel, fill in the insufficient areas with urethane foam. The following illustration shows the areas for one side, but the foamed material must be applied equally to both the left and right sides.

*CAUTION:*

*1) Work must be performed while wearing the appropriate protective gear and in a well-ventilated area.*

*2) Apply tape or equivalent to any holes, nuts, etc., near the areas to be filled.*

[Short Body]

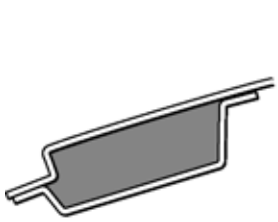

a – a




b – b



c – c




d – d

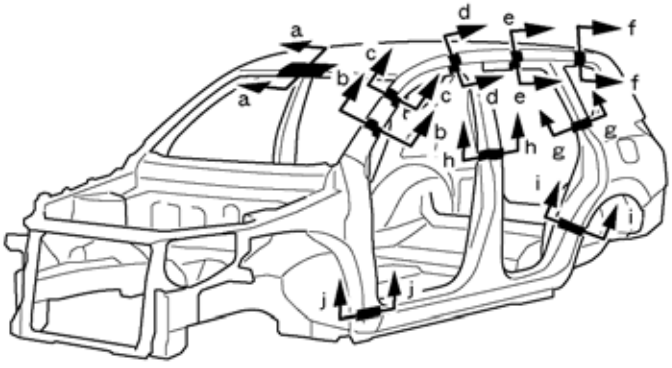




e – e

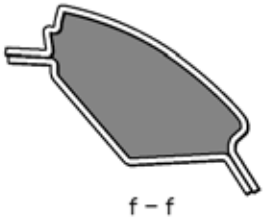

f – f




h – h



g – g




j – j

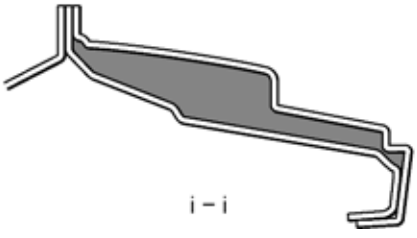

i – i

F24753

[Long Body]

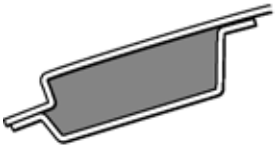

a – a



b – b




c – c




d – d



e – e

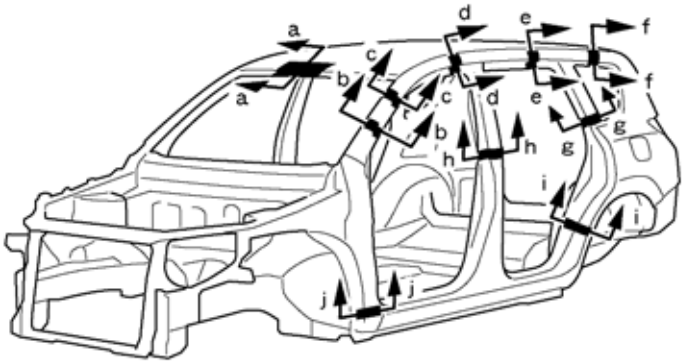

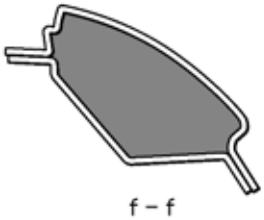f – f




h – h



g – g



j – j

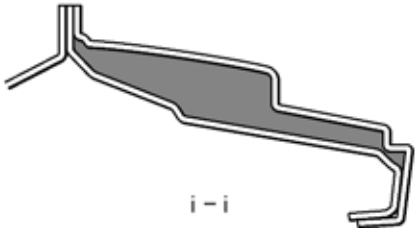

i – i

F24754