





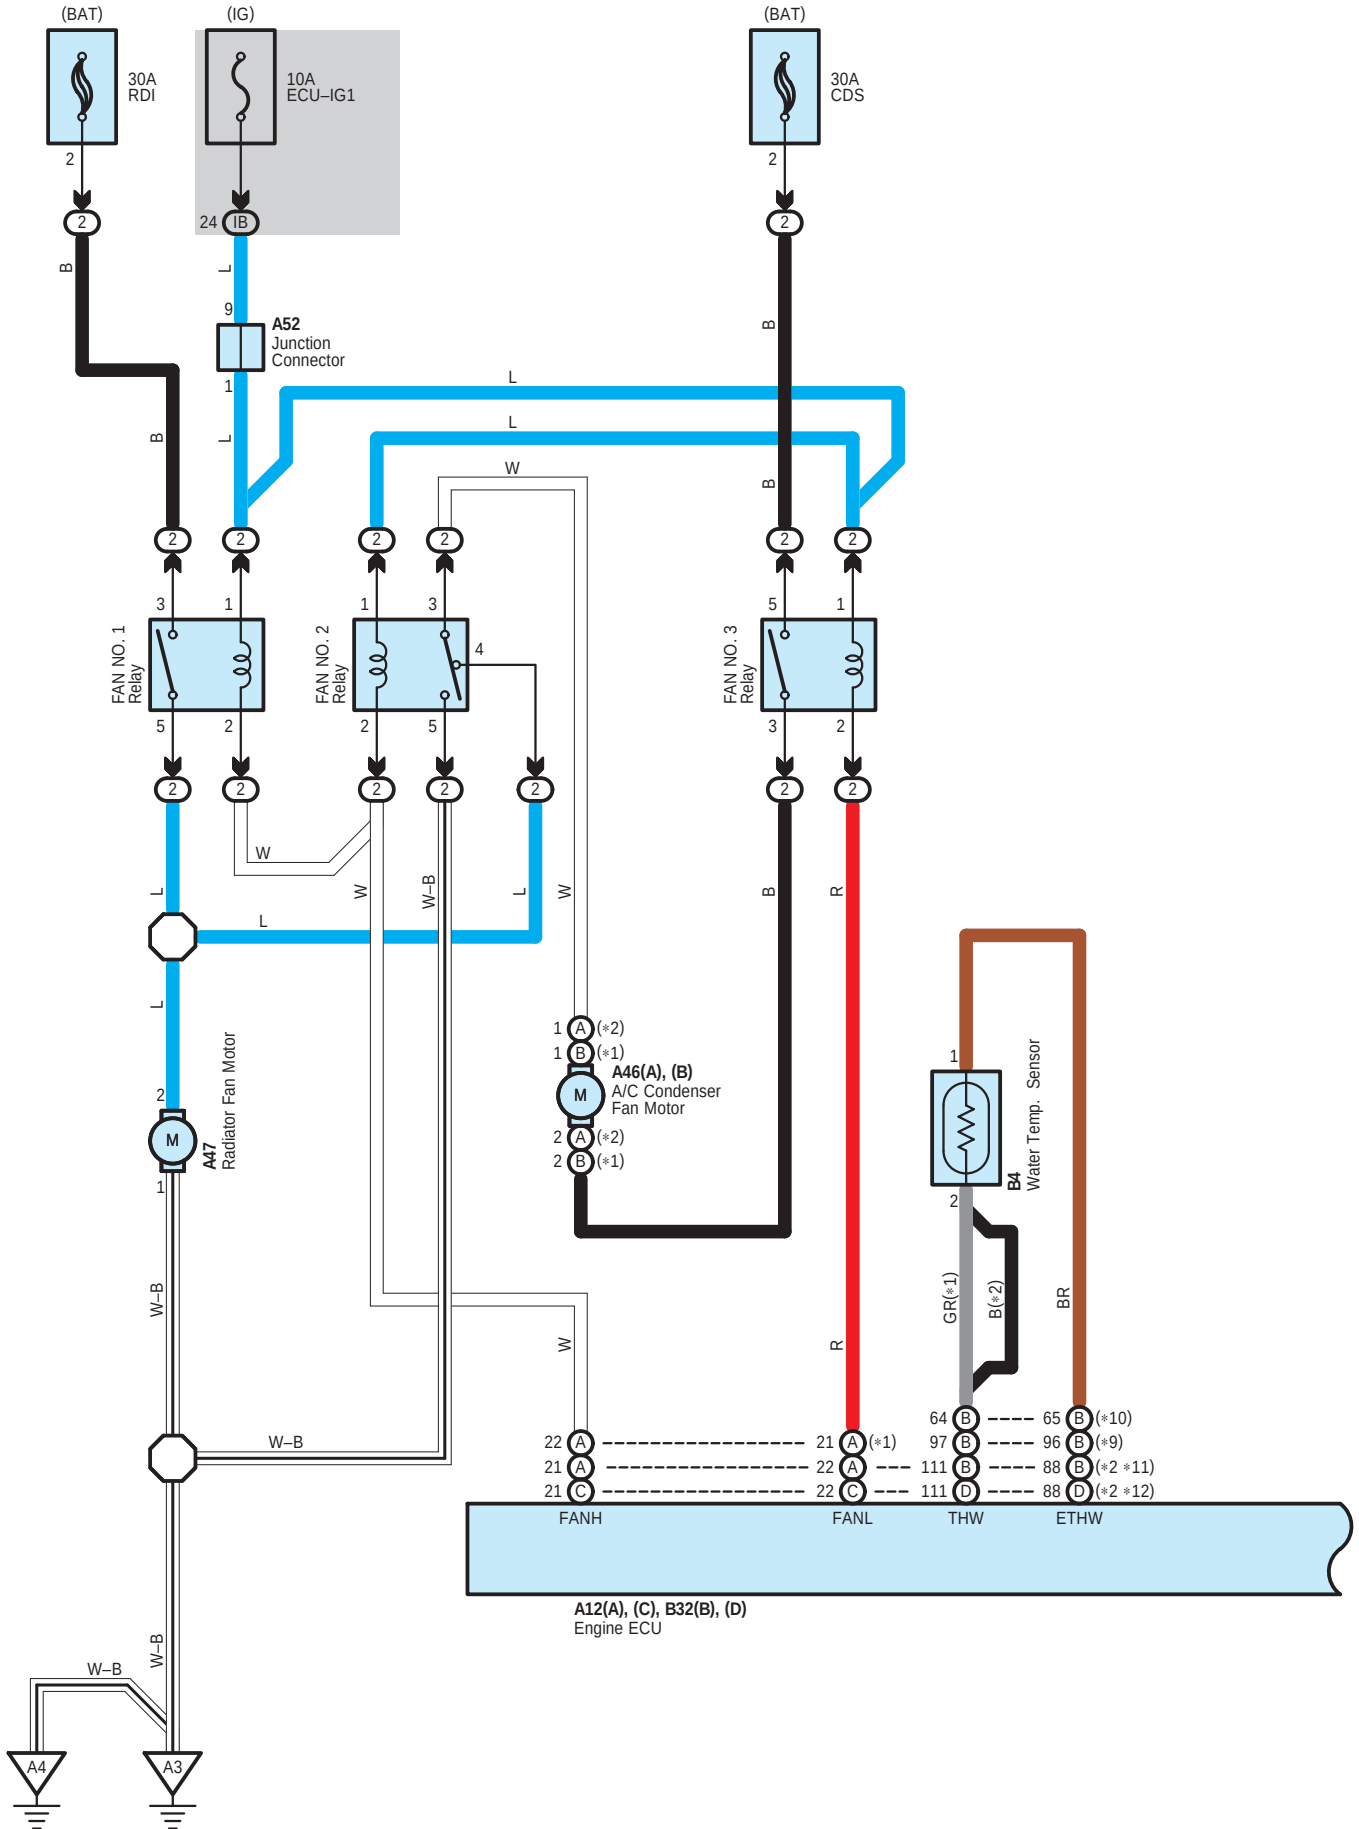


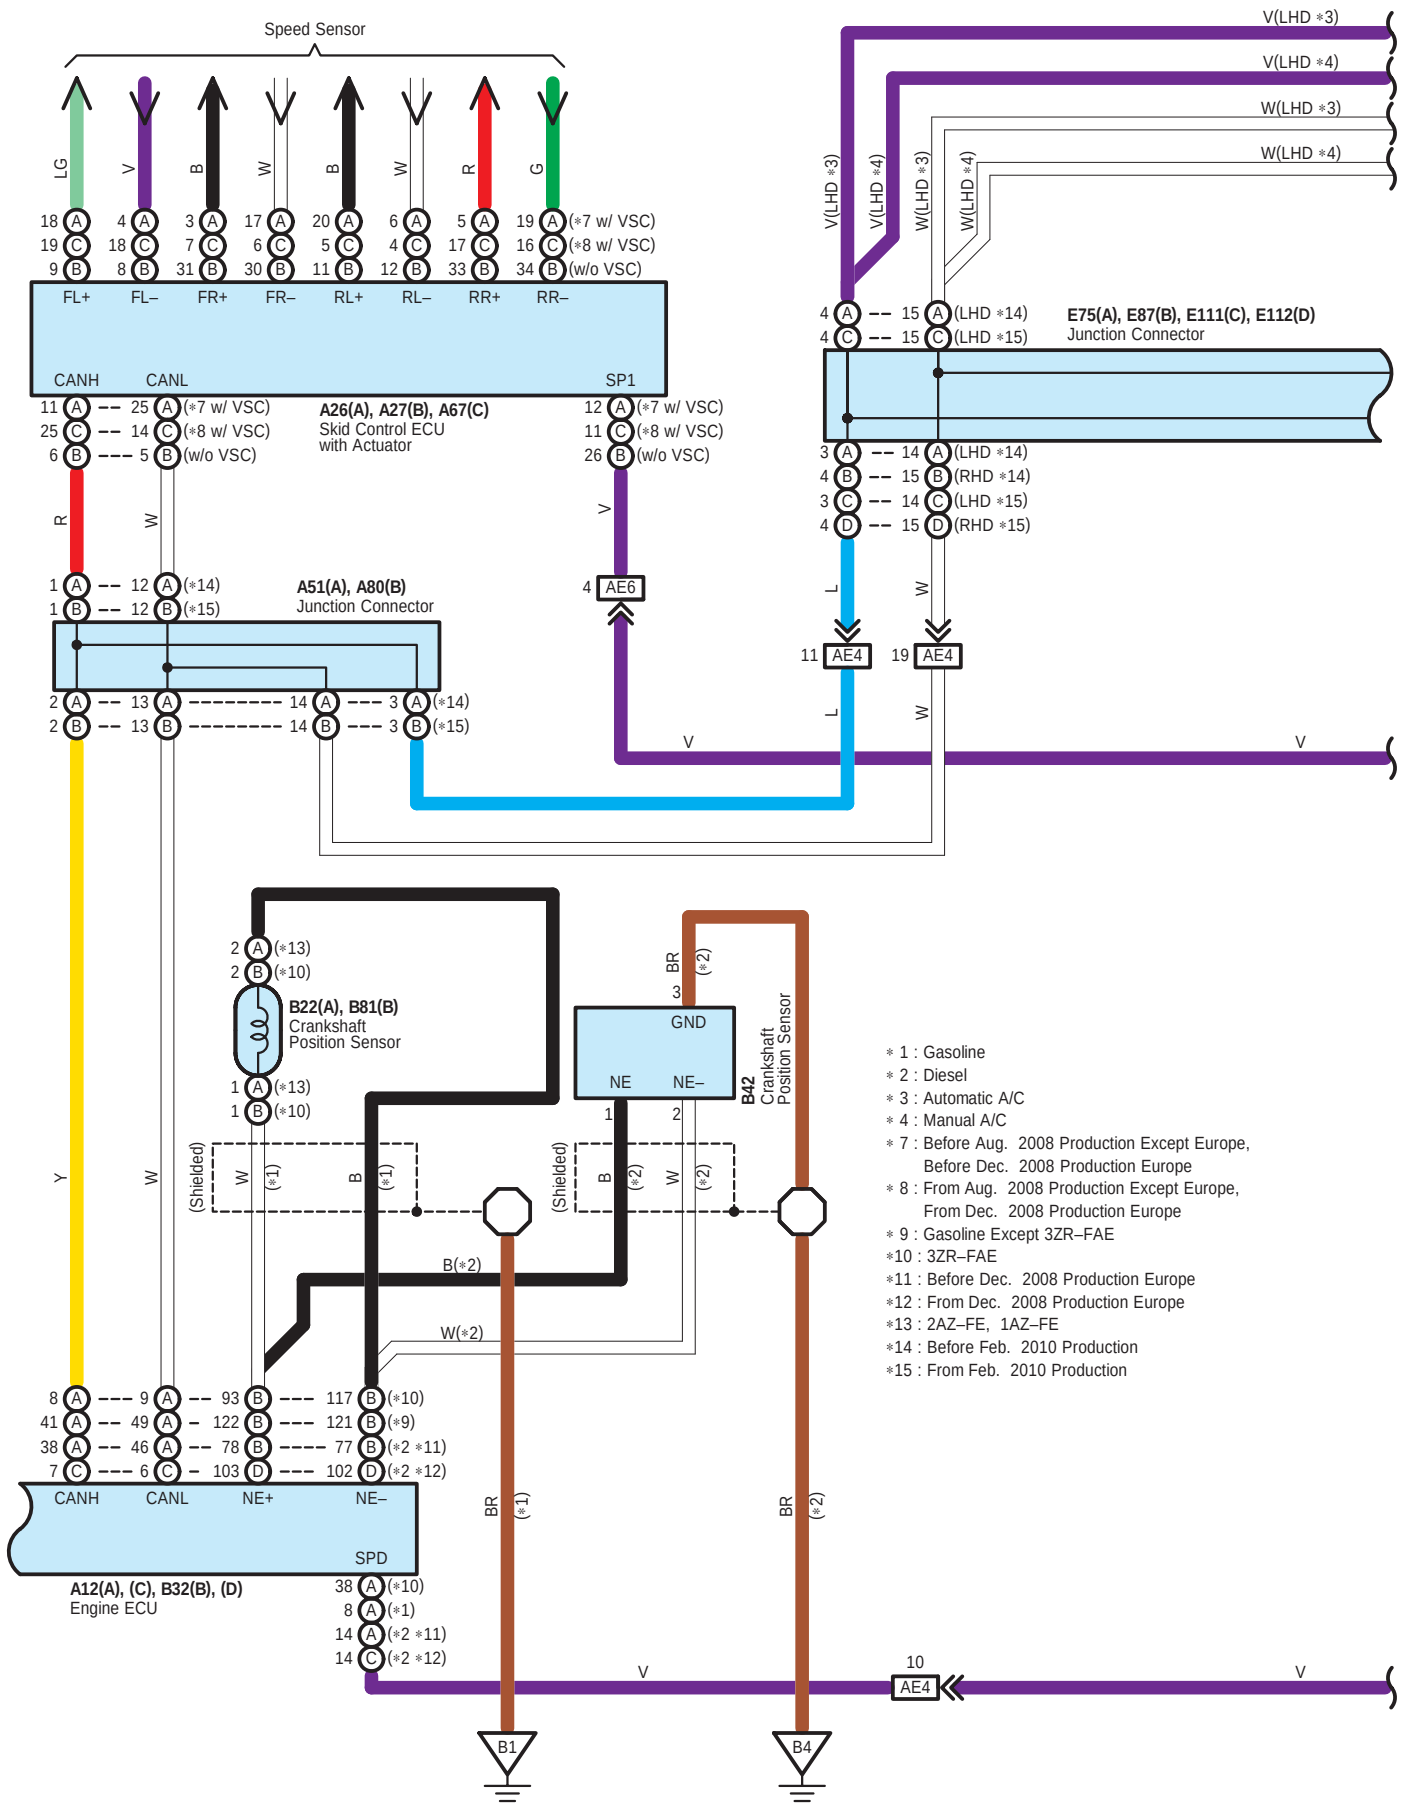

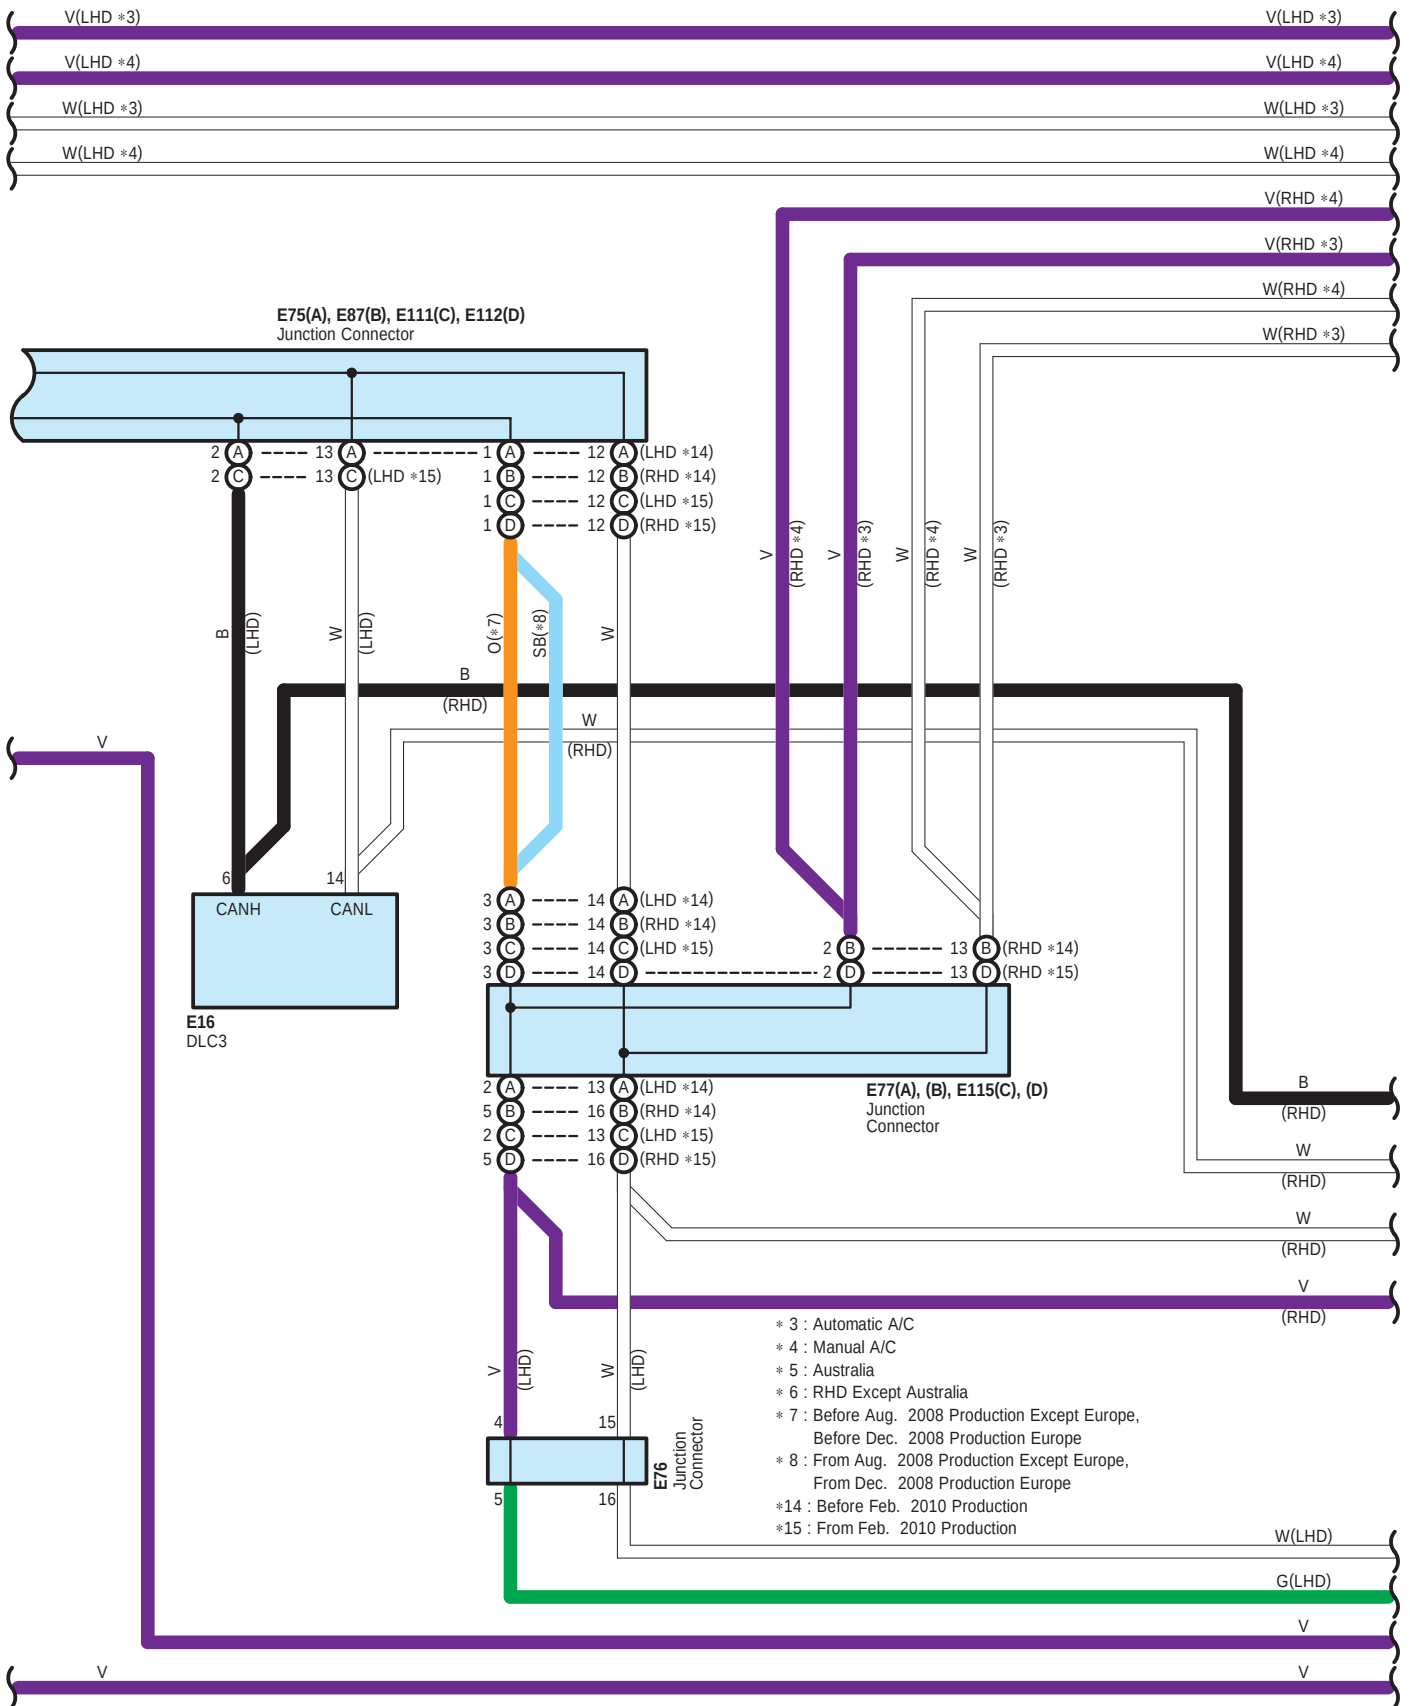


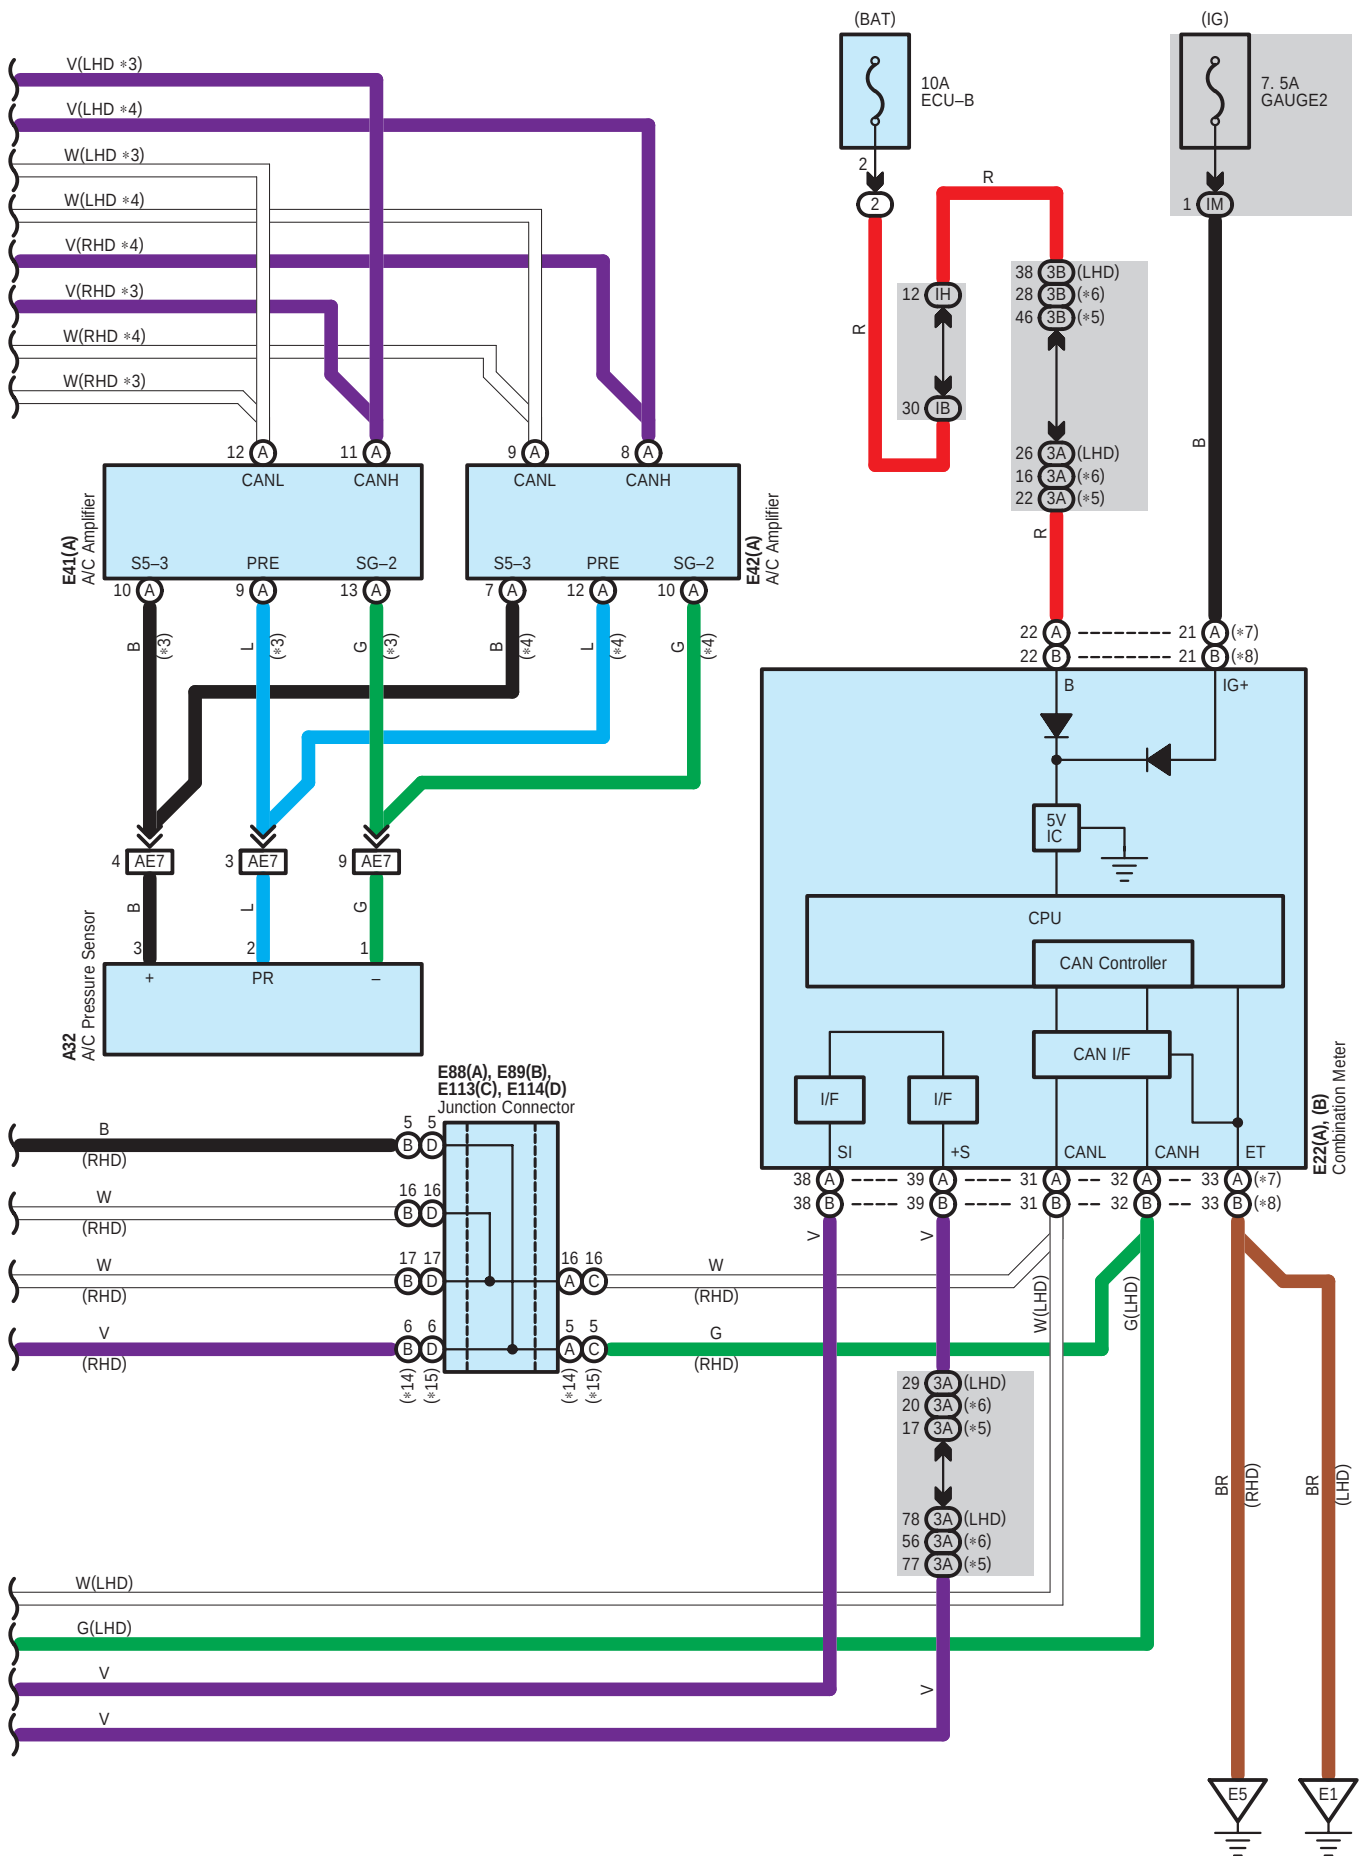


A 12
Black

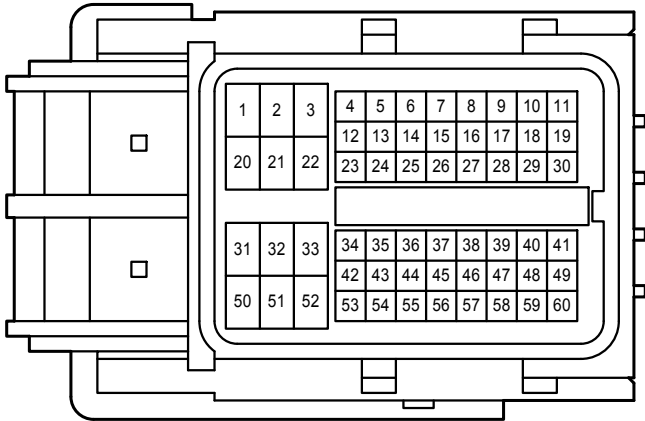


A 26
Black

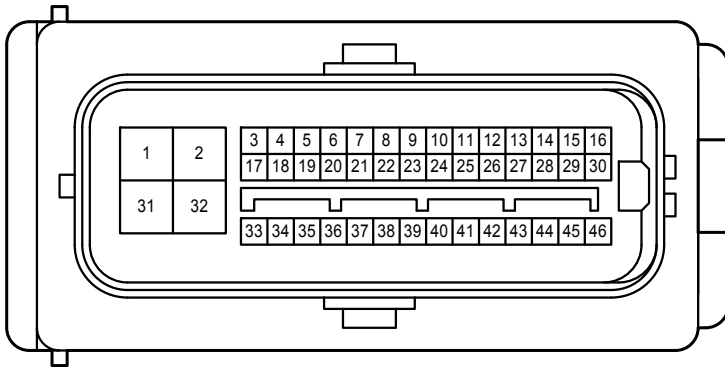


A 27
Black

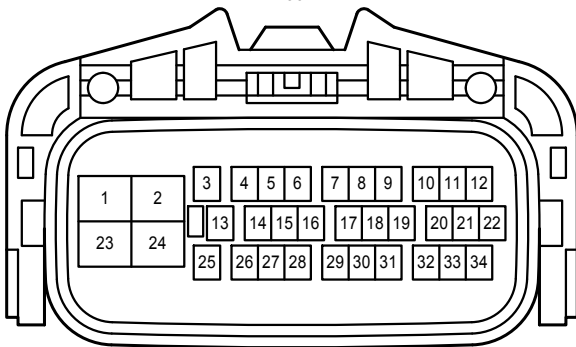

A 32
Black

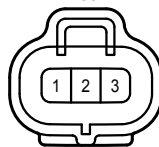


A 46
Black

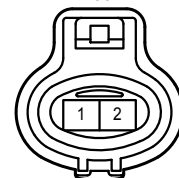


(2AZ-FE, 1AZ-FE, 3ZR-FAE)

A 46
Gray

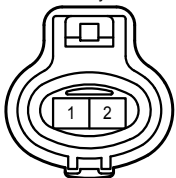


(2AD-FHV, 2AD-FTV)


A 47
Gray

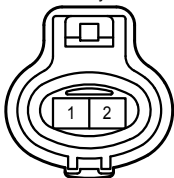


A 51
Gray

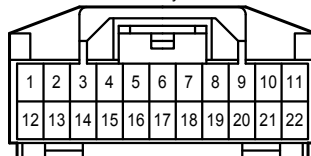


A 52
Gray

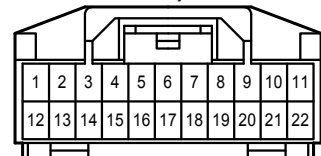

A 67
Black

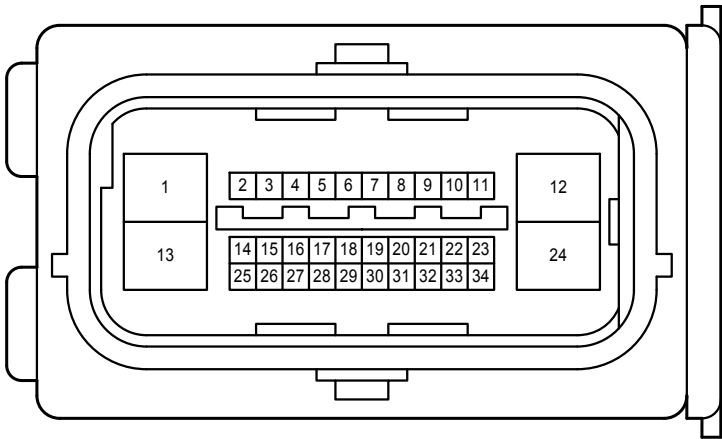

A 80
Gray

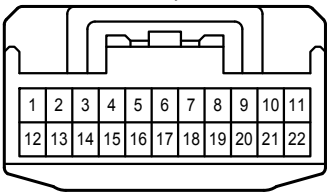


B 4
Gray



B 22
Gray




B 32
Black

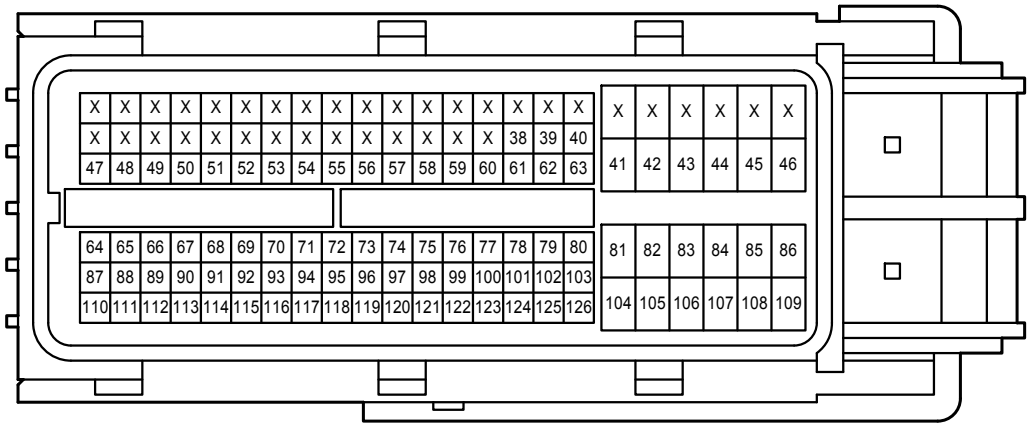


B 42
Gray




B 81
Black

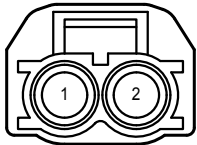


E 16
White

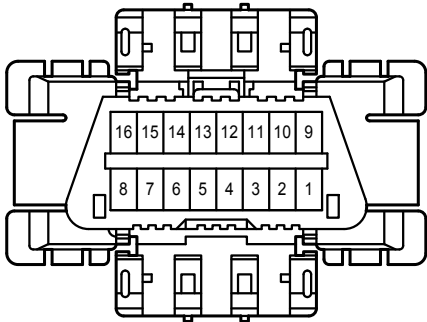


E 22
White

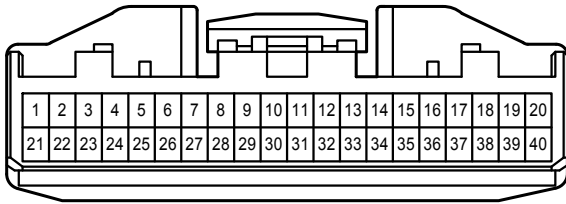


E 41
White

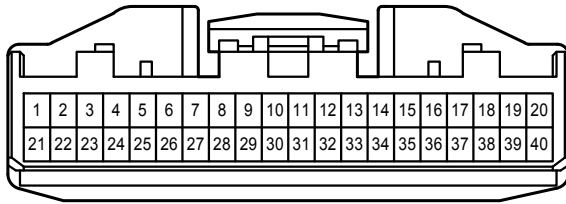


E 42
White

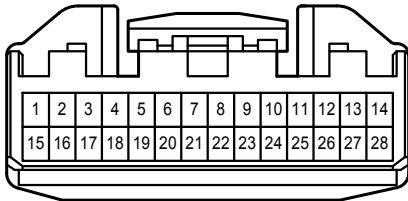


E 75
Gray

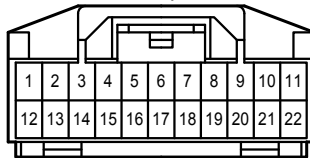


E 76
Black

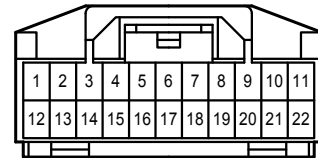


E 77
Gray

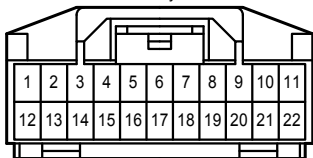


E 87
Gray

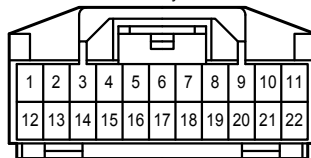


E 88
Blue

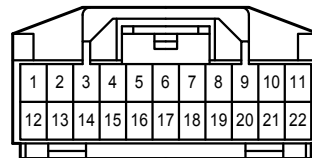


E 89
Blue

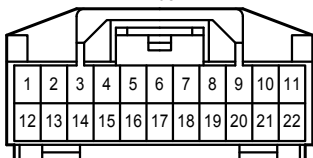


E111
Gray

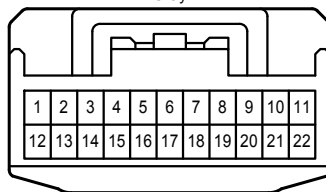


E112
Gray

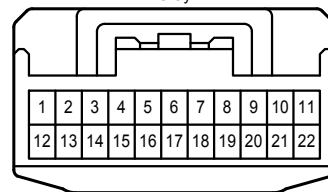


E113
Black

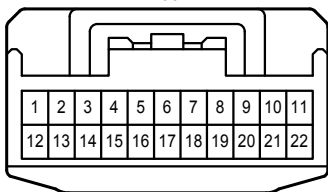


E114
Black

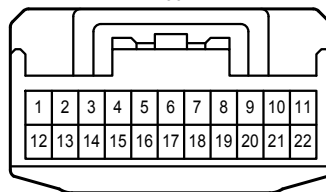


E115
Gray

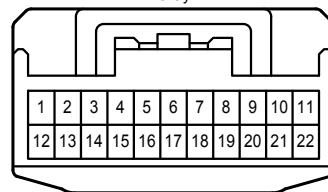


3A
White

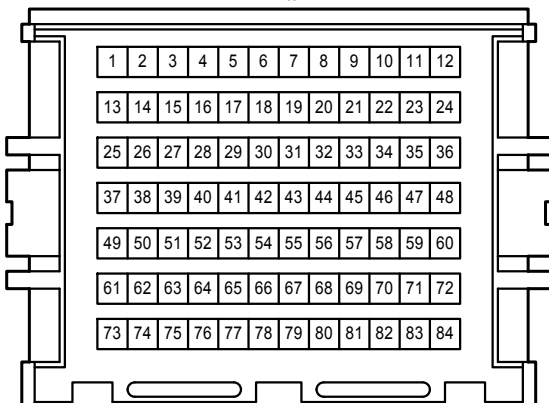


3B
White

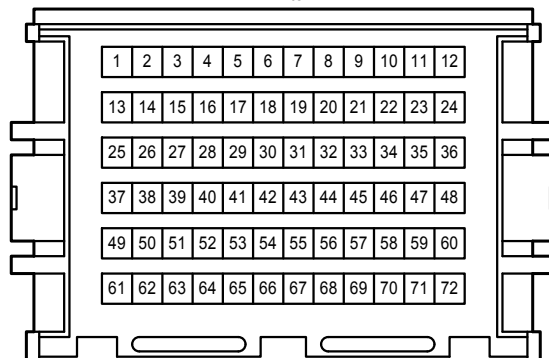


IB
White

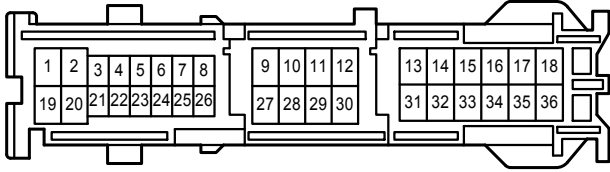


IH
White

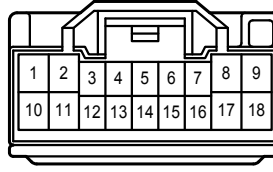


IM
White

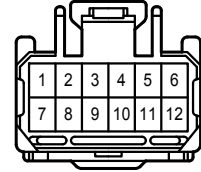

AE4
Gray

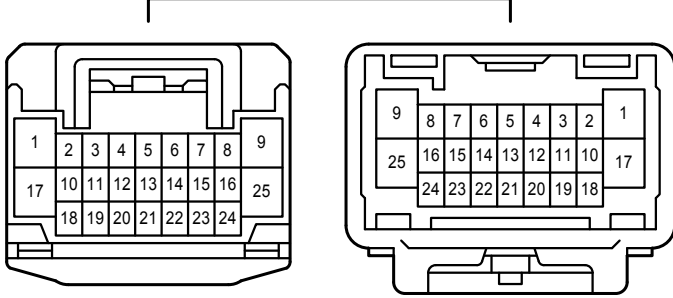

AE6
White

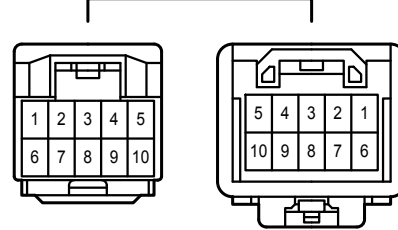

AE7
White

