




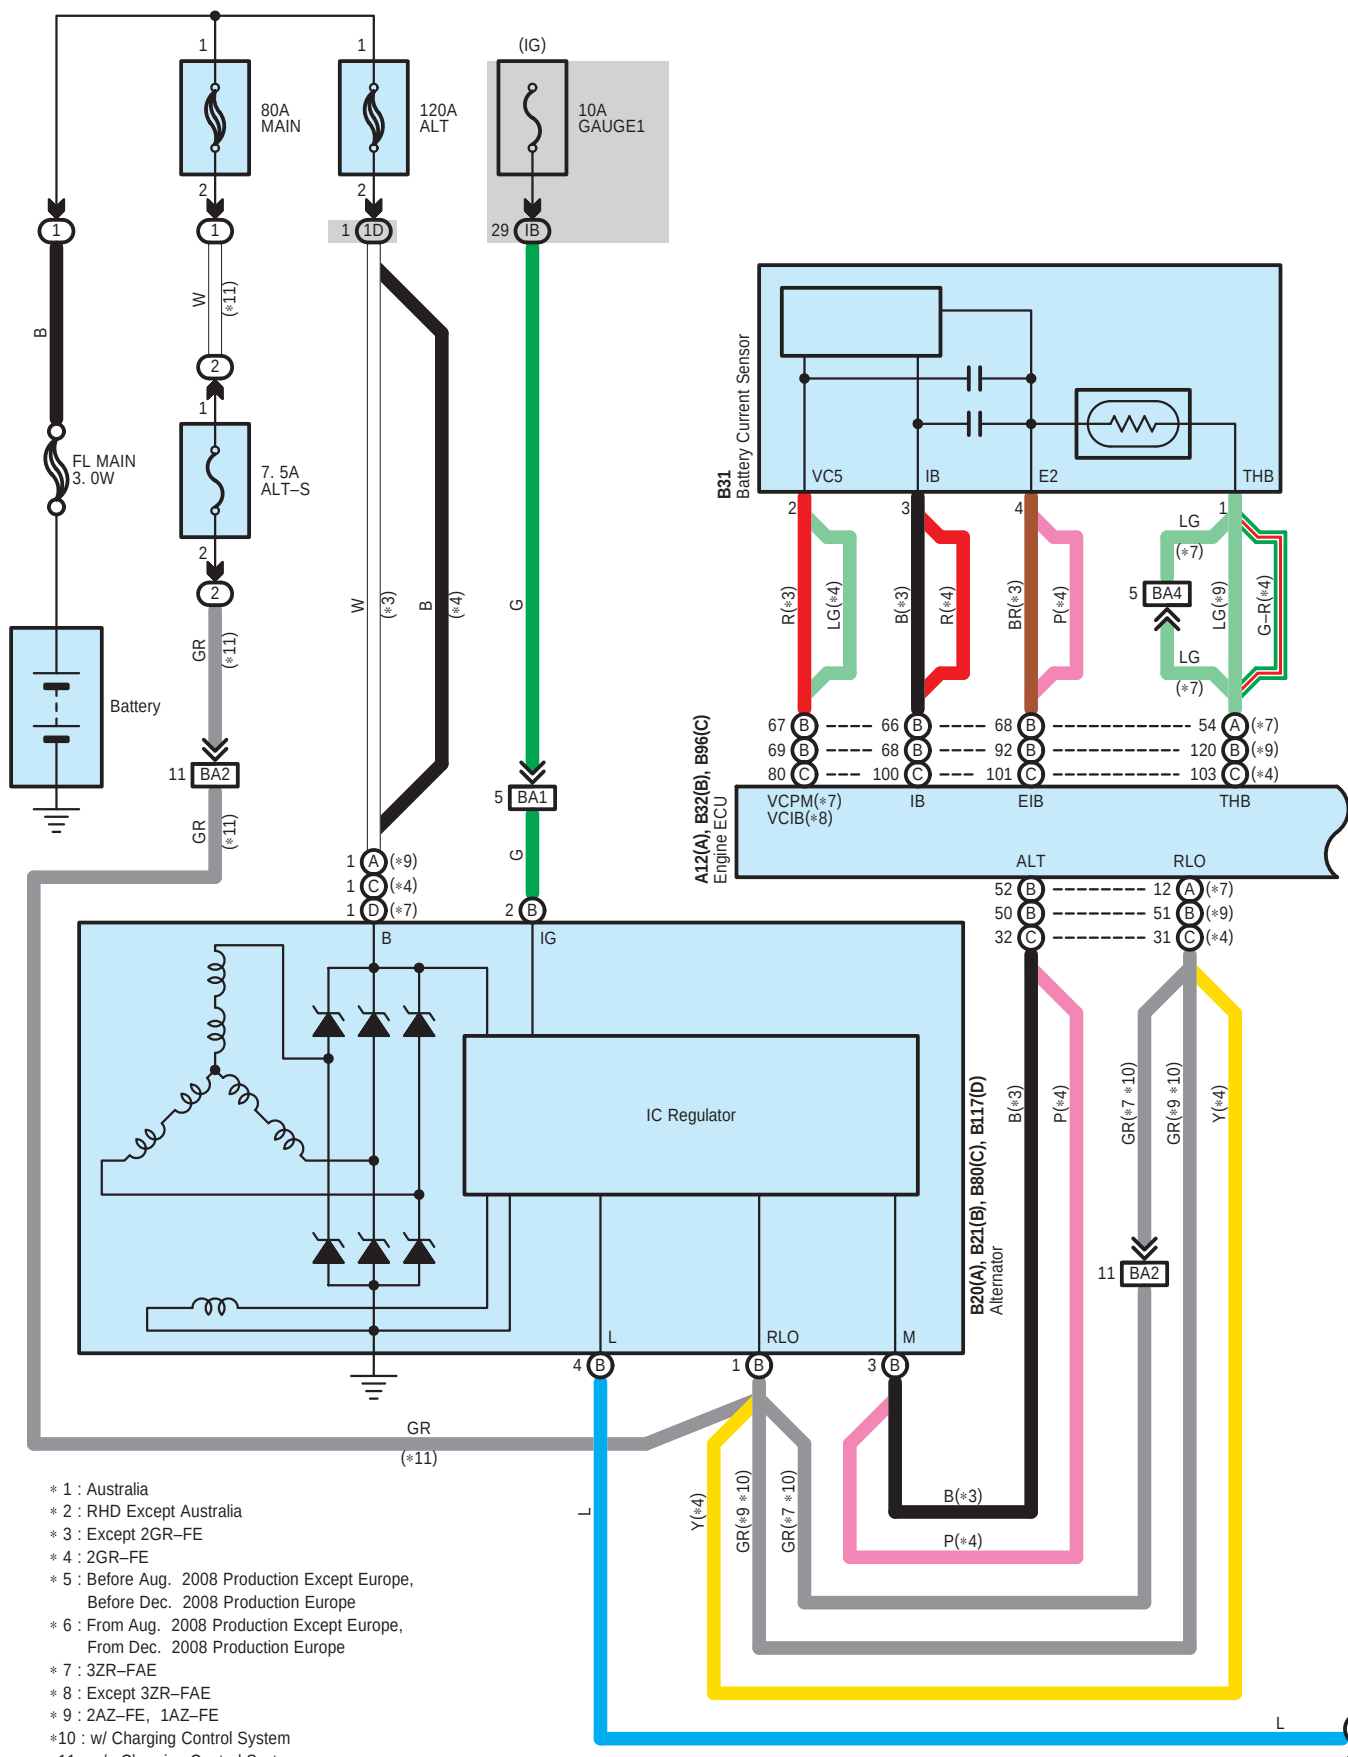

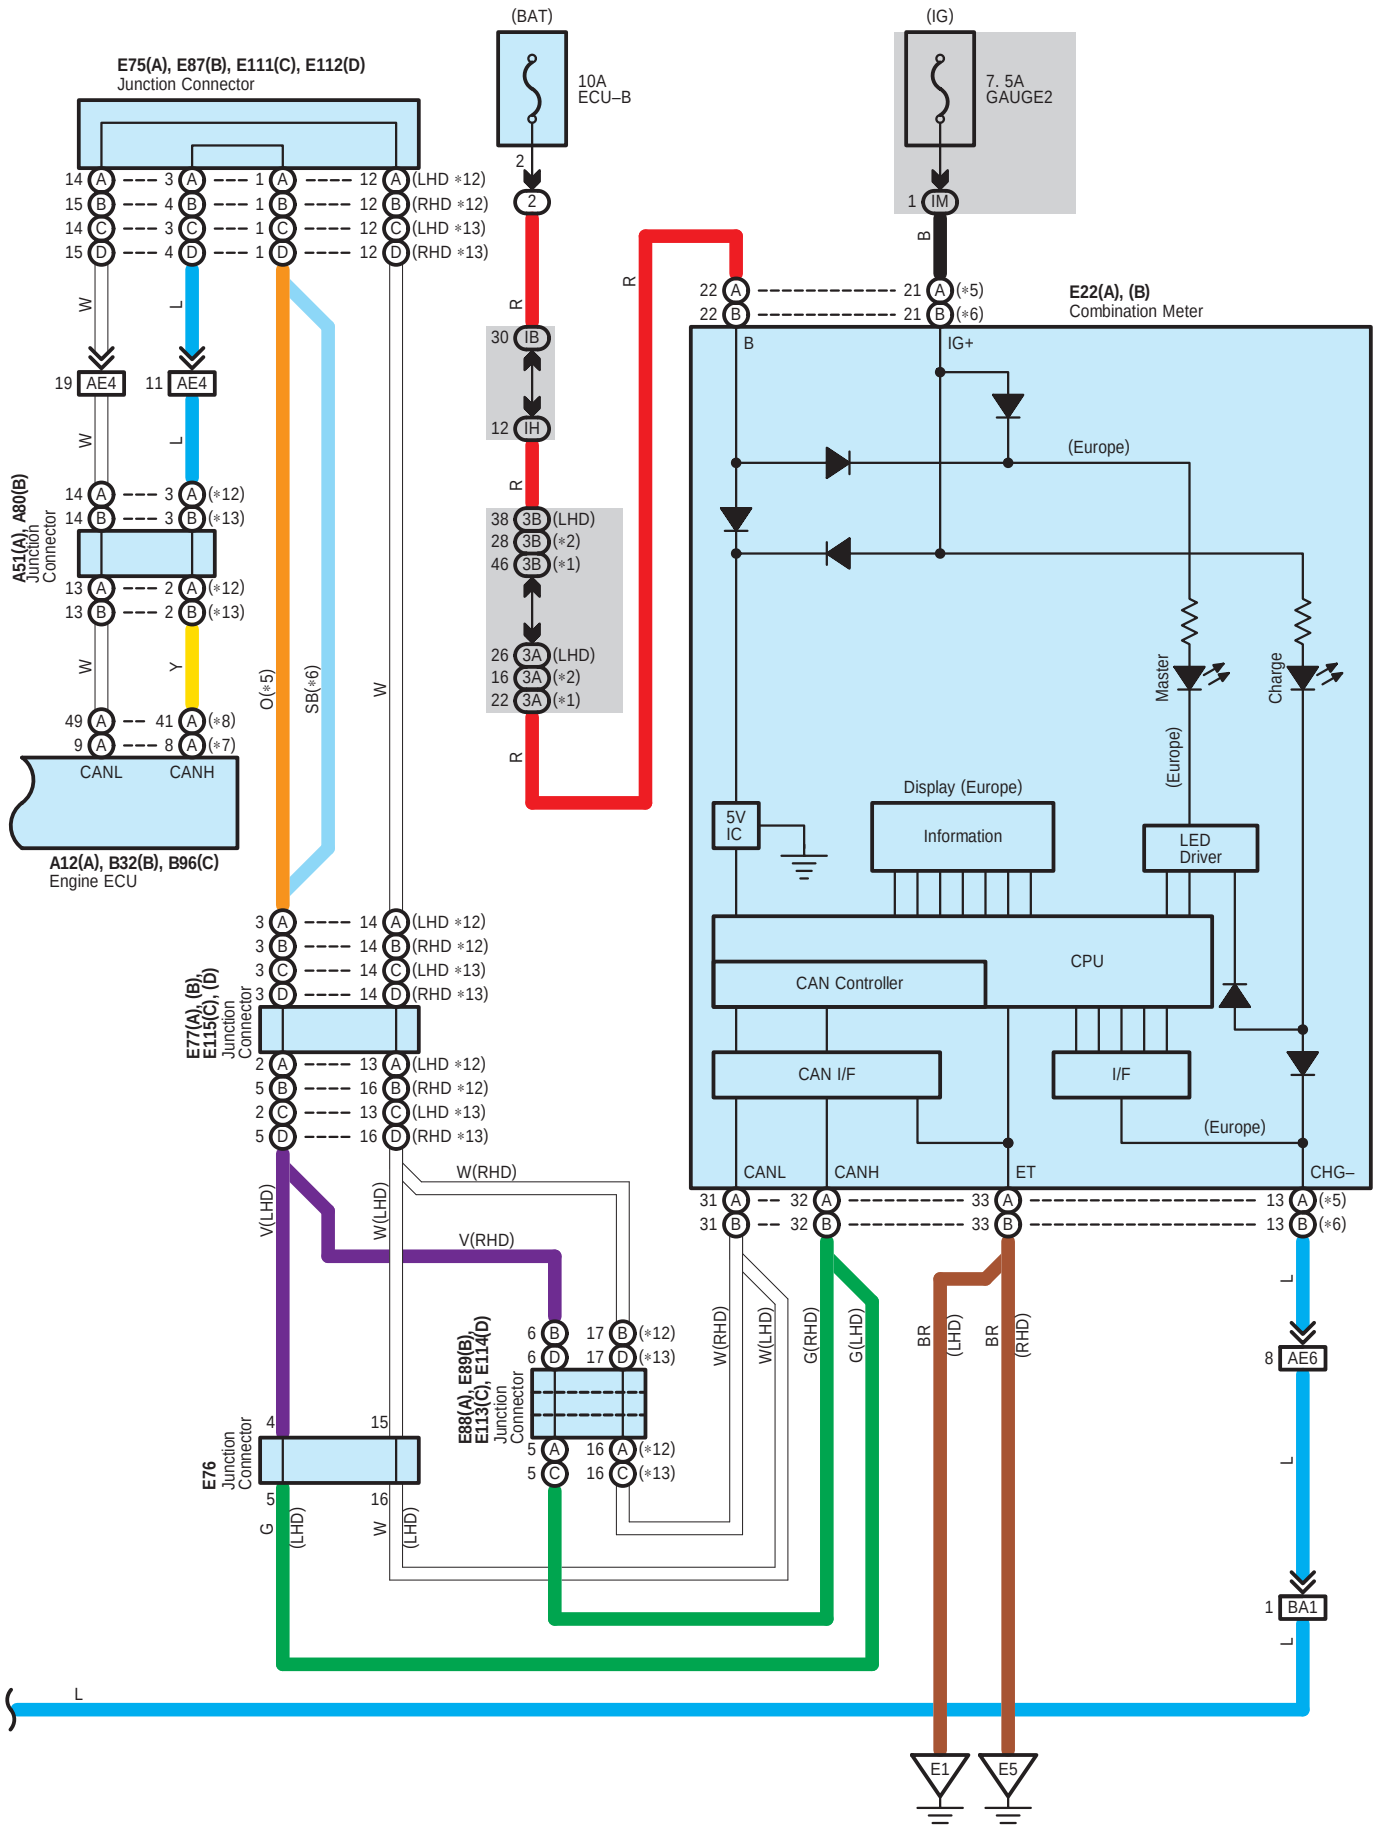


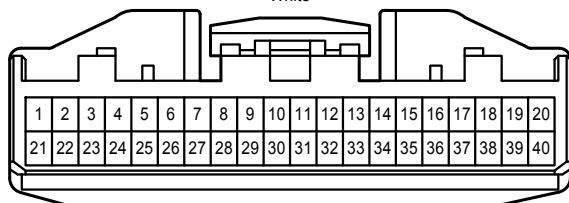


E 22  
White




E 75  
Gray

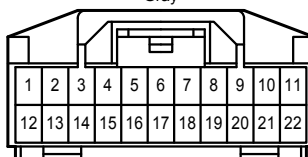


E 76  
Black

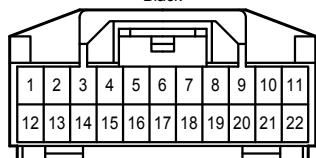


E 77  
Gray

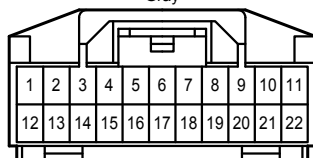


E 87  
Gray

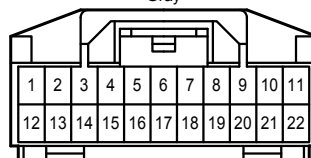


E 88  
Blue

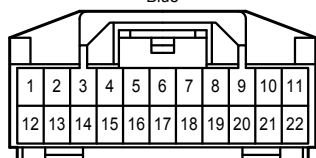


E 89  
Blue

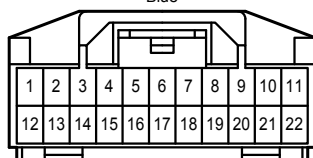


E111  
Gray

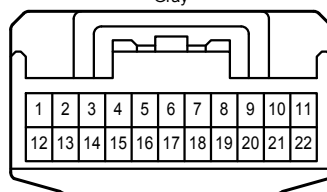


E112  
Gray

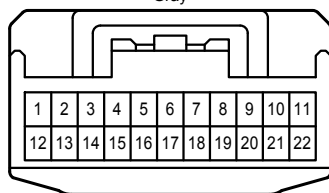


E113  
Black

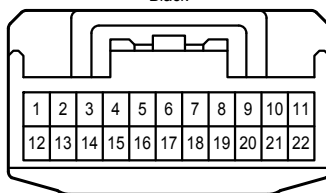


E114  
Black

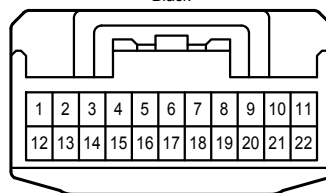

E115  
Gray

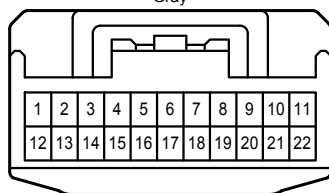


1D




3A

White

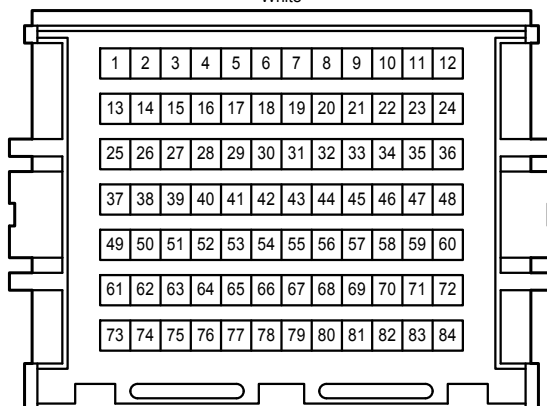


3B

White

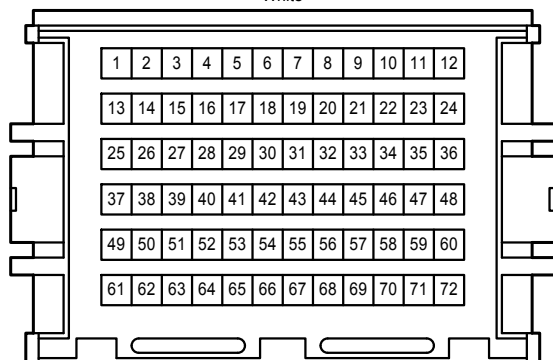


1B

White

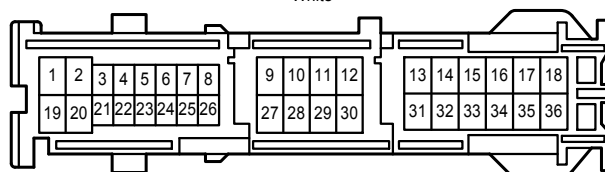


1H

White

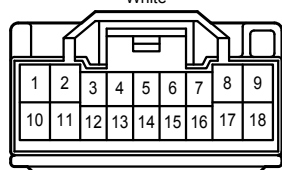


1M

White

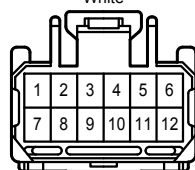


AE4

Gray

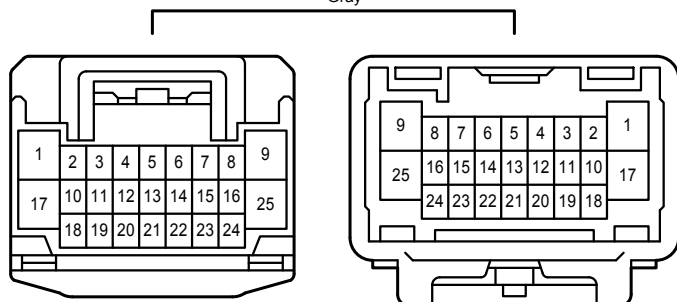


AE6

White

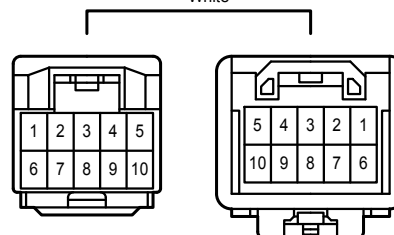


BA1

White

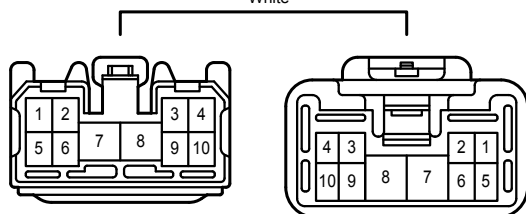

BA2

Gray

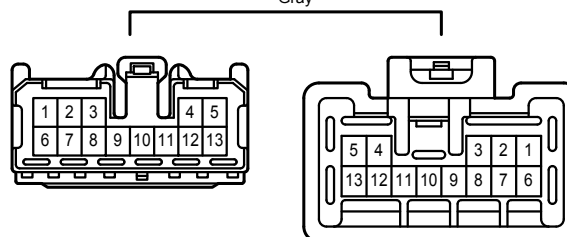

BA4

White

