

# NAME PLATE APPLICATION PROCEDURE


1. Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
   *HINT:*
   *Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.*
2. Wipe off the remaining double-sided tape using a clean cloth or equivalent.
   *HINT:*
   *If a name plate is installed without thoroughly removing the remaining double-sided tape from the body the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.*
3. After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
   *HINT:*
   *The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.*

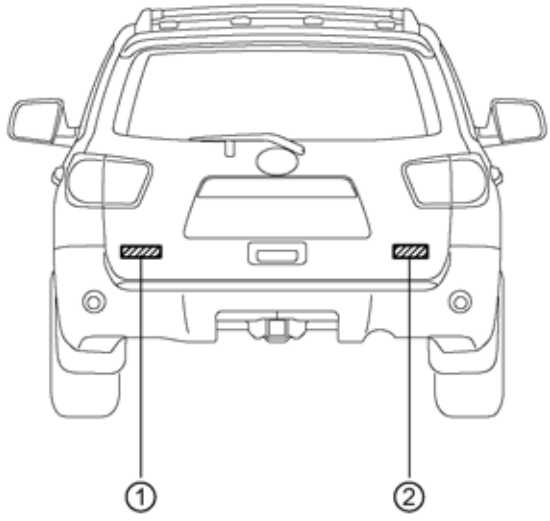


① NO. 4 BACK DOOR NAME PLATE


② NO. 3 BACK DOOR NAME PLATE

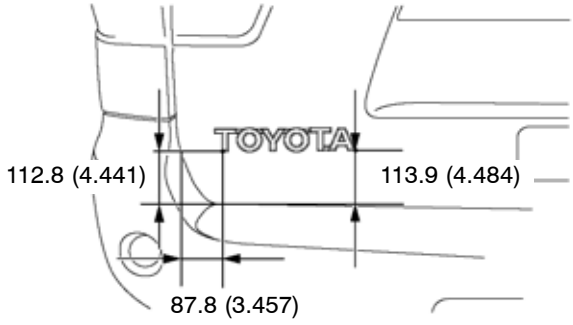

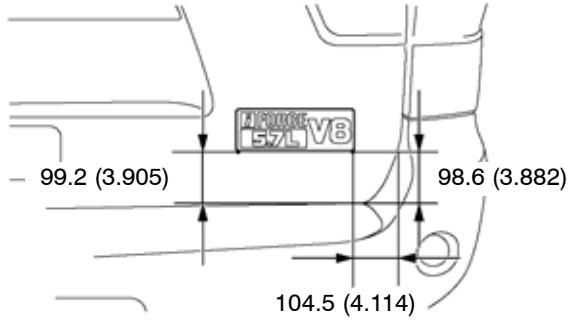

mm (in.)

F29879

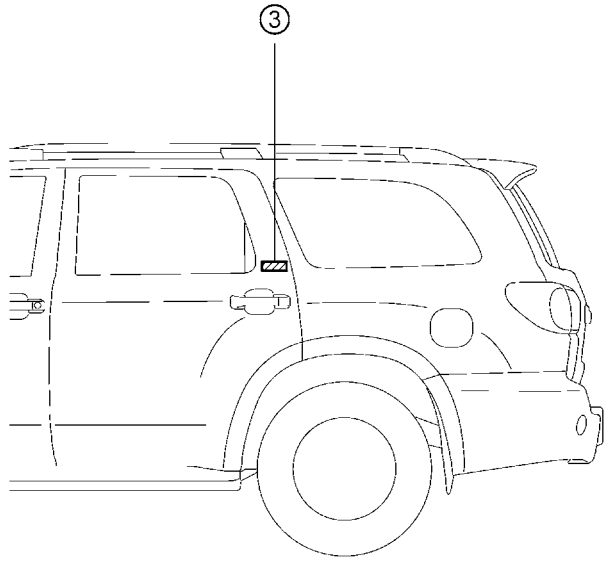



③ NO. 1 ROOF SIDE MARK: PLATINUM Grade

LH Side:

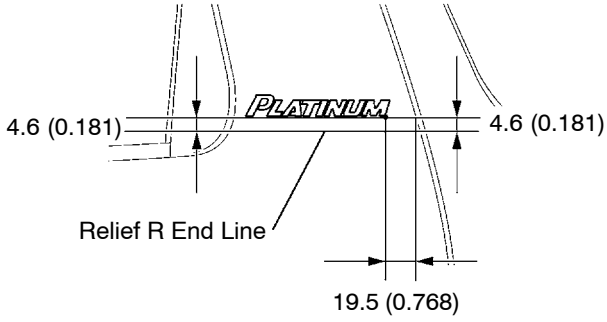



RH Side:

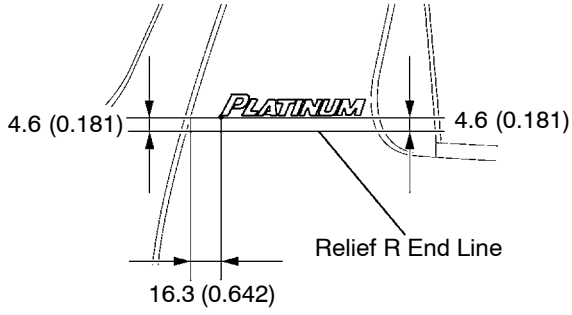



③ NO. 1 ROOF SIDE MARK: LIMITED Grade

LH Side:

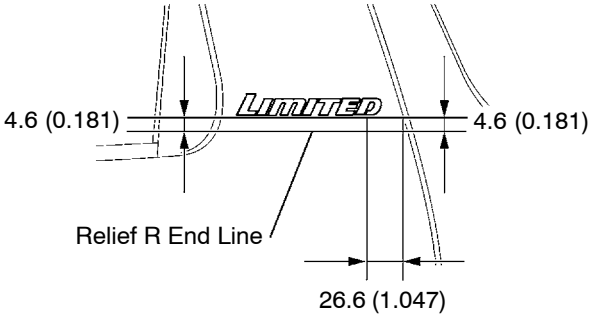



RH Side:

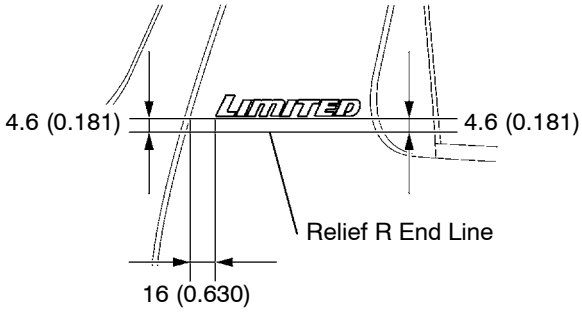



③ NO. 1 ROOF SIDE MARK: SR5 Grade

LH Side:

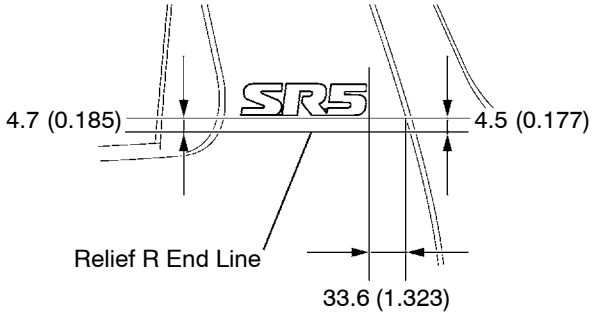


RH Side:

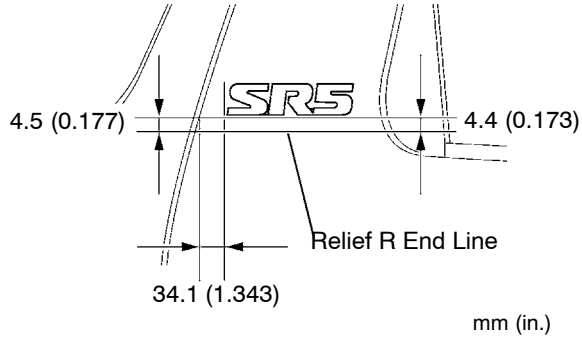


mm (in.)

F29880