

FRONT FENDER APRON (CUT-P)


F14958-A

REPLACEMENT
With the radiator upper support removed.

REMOVAL

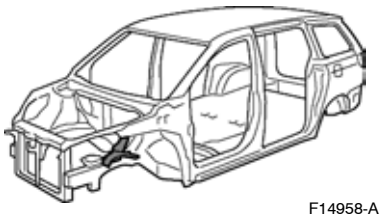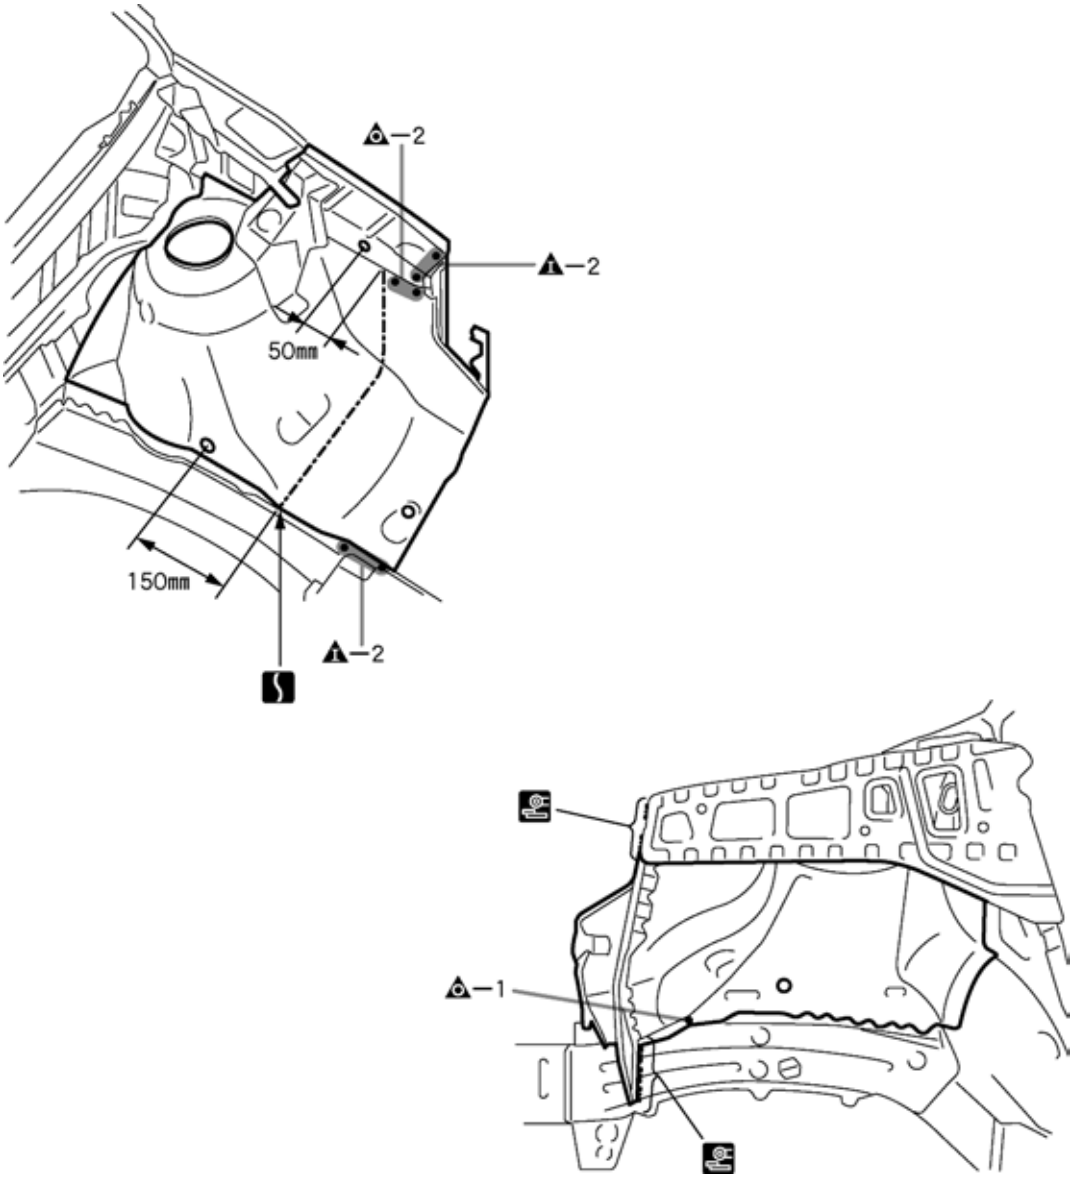


F14958

50mm (1.97in.) 150mm (5.91in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

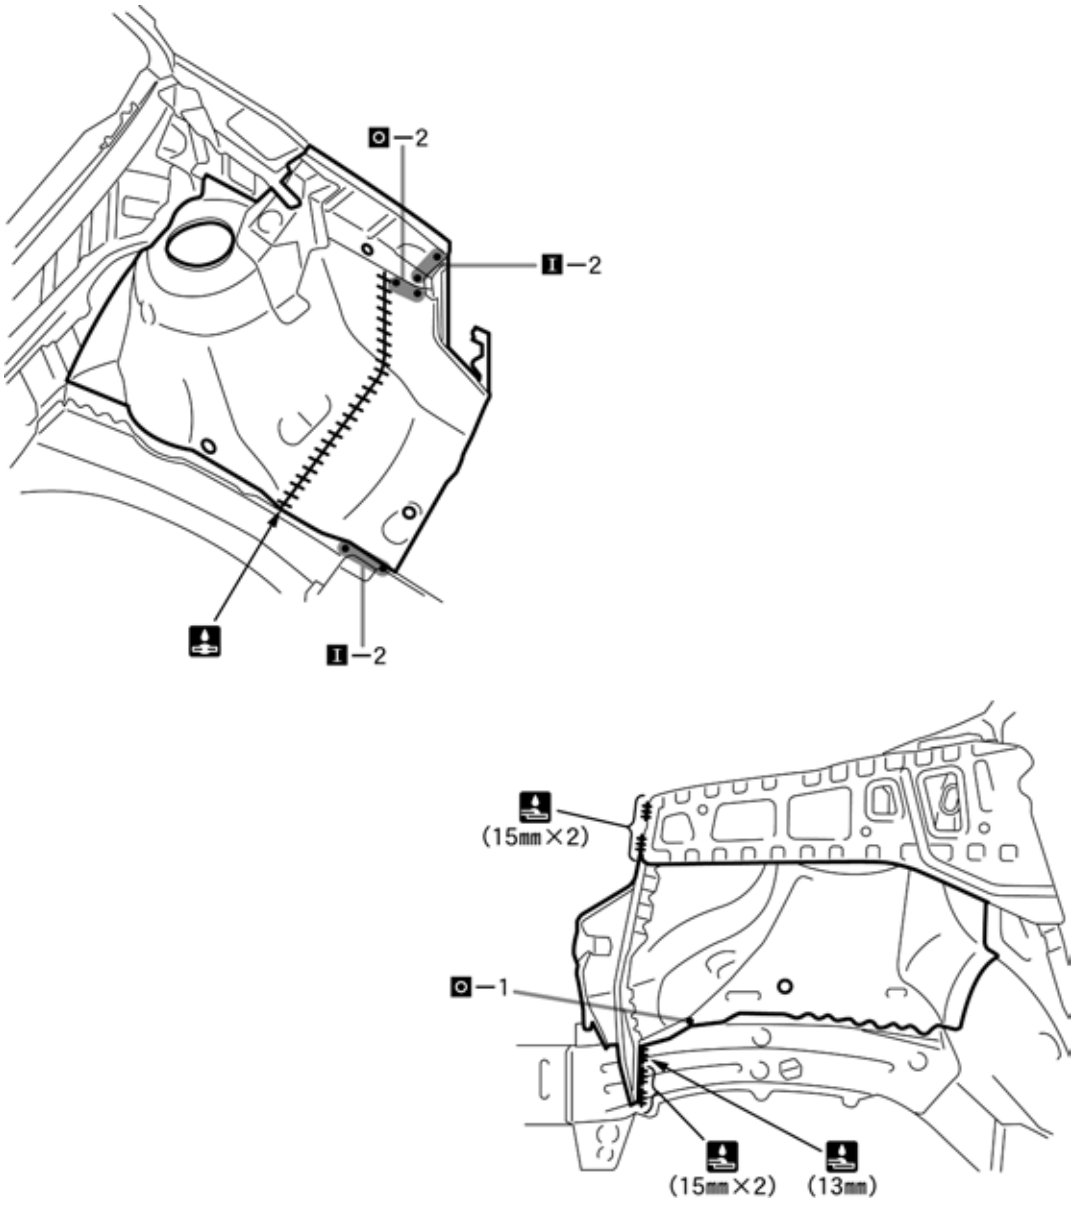

F14959

13mm (0.51in.) 15mm (0.59in.)