


FRONT FENDER APRON (ASSY)



F14960-A

REPLACEMENT
With the radiator upper support and front body pillar lower gusset removed.

REMOVAL

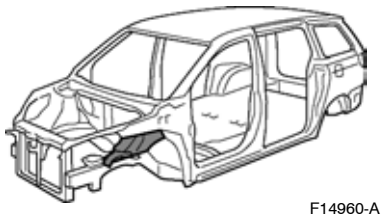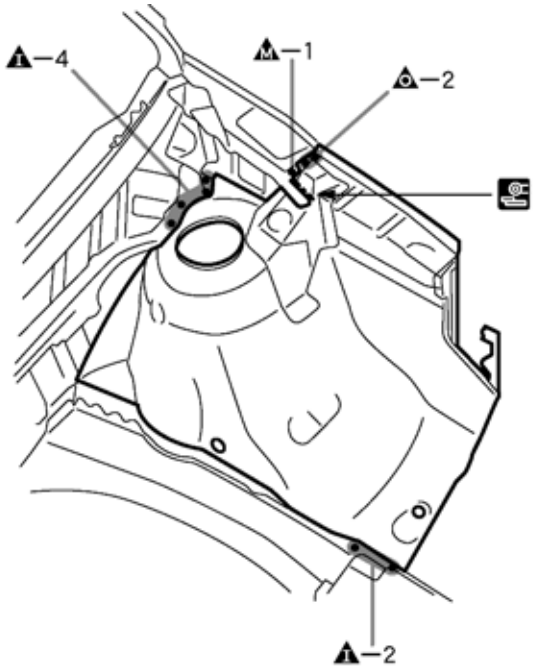

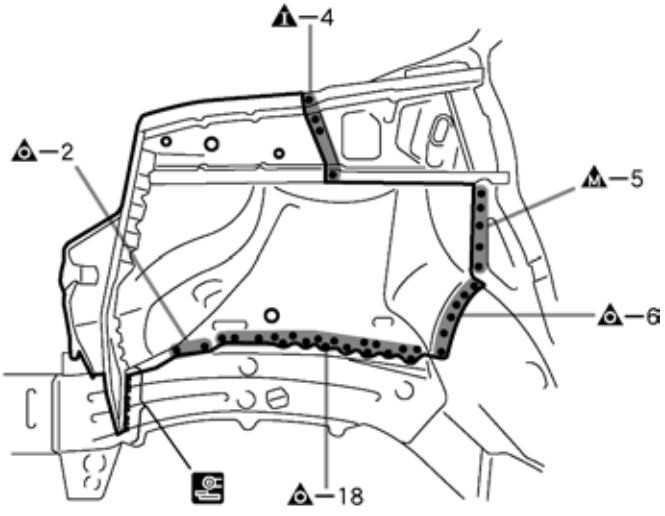


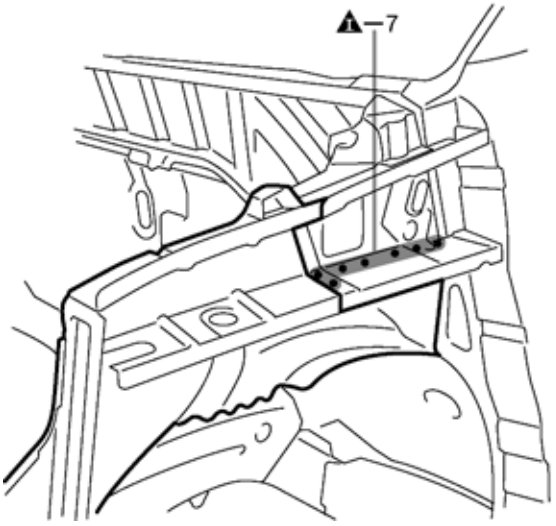

F14960

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

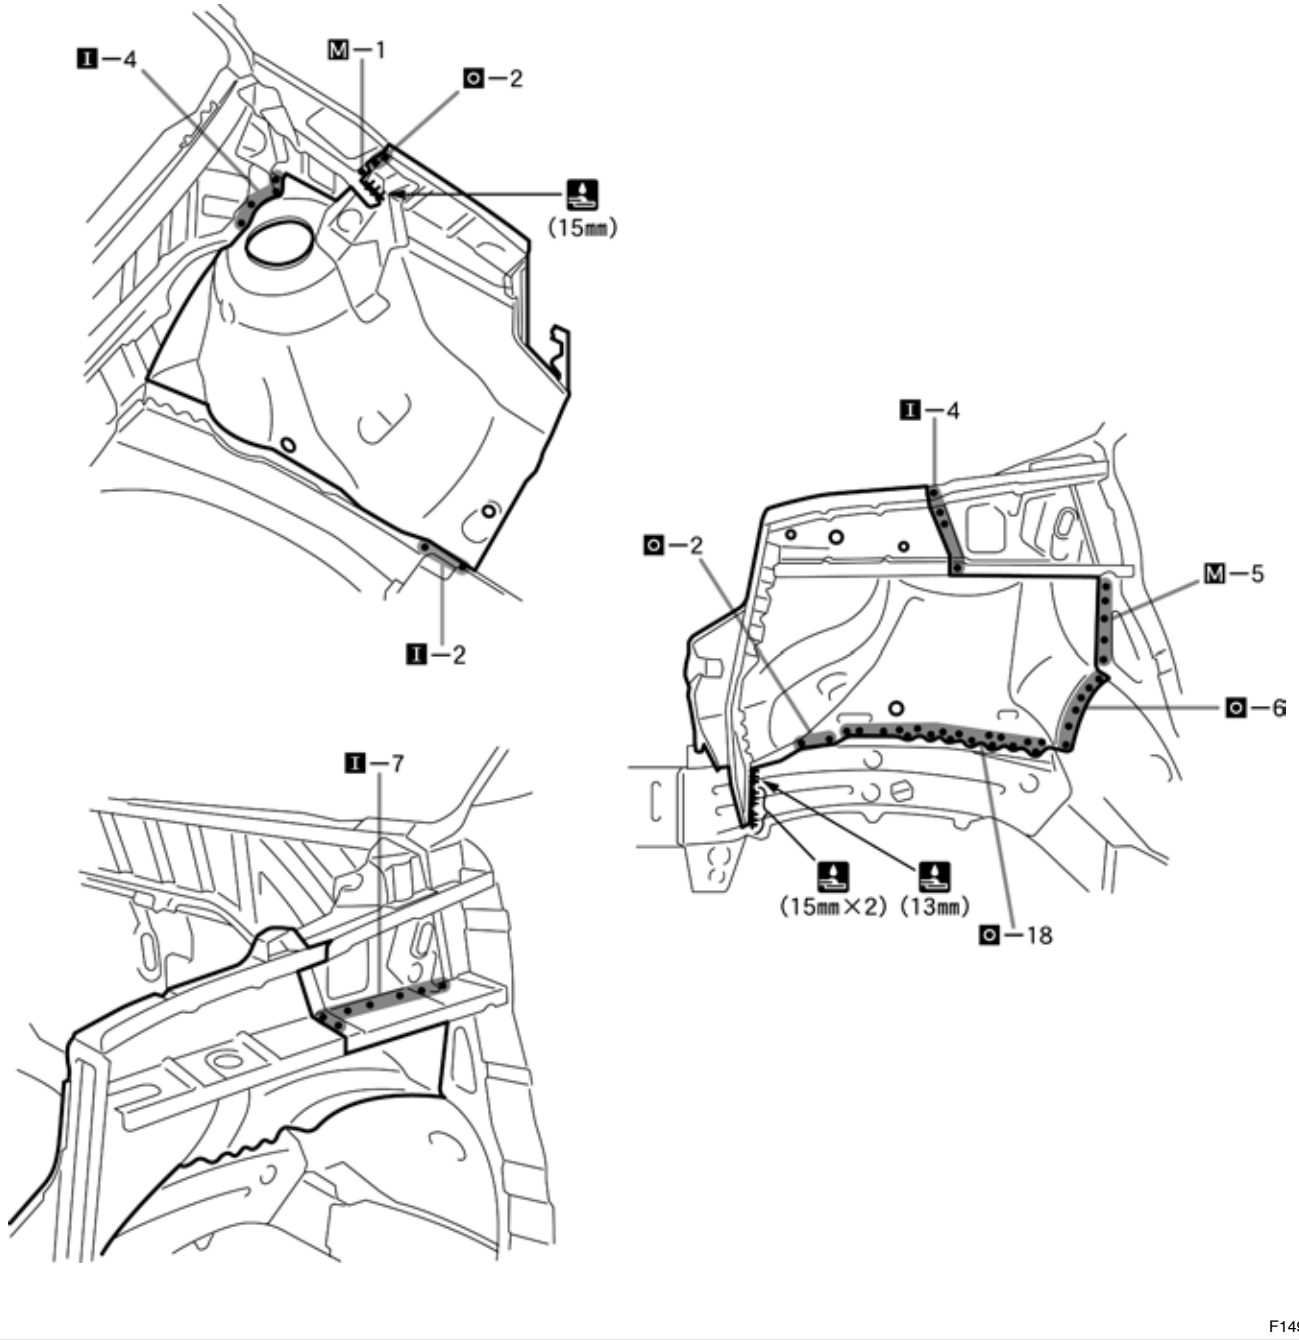


F14961

POINT

1 Make sure each measurement is correct, as this parts affects the front wheel alignment.

13mm (0.51in.) 15mm (0.59in.)

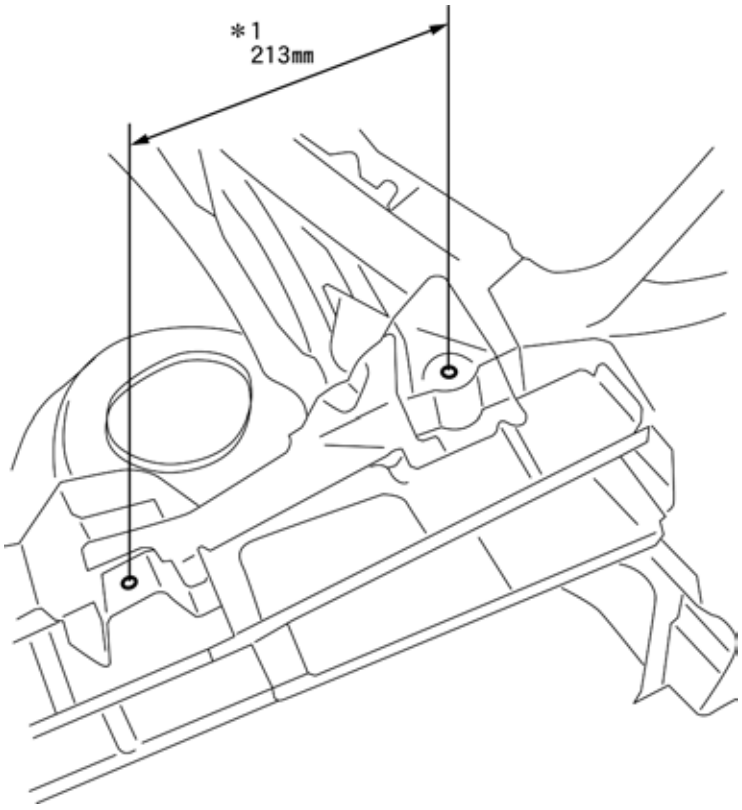

F14962

POINT

1 *1: The value is reference value.

213mm (8.39in.)